



Popcorn Machine

User Manual

1. Introduction

This popcorn machine is made of sturdy cast aluminum and equipped with hardened glass. These high quality components are used to ensure compliance with all safety standards.

Thanks to its energy-efficient operation, this machine is very suitable for restaurants, snack bars, movie theaters, and many other commercial applications.

2. All Model Specifications

Item	025PMR06	025PMR07	025PMR08	025PMR11
	025PMB06	025PMB07	025PMB08	025PMR12
Volts/ Frequency	110V/60Hz	110V/60Hz	110V/60Hz	110V/60Hz
Power	1150W	1320W	1320W	1700W
Pot	6oz	8oz	8oz	12oz
Output	1 Tray / 2 Min			

3. Before use

- Unpack the machine and check for any damage incurred during transit.
- After unpacking the machine, it is of utmost importance to clean all of the components with damp cloth. Then wipe them dry with a soft cloth.
- The popcorn machine should be in a properly ventilated room with an ambient air temperature under 104° Fahrenheit.

- The popcorn machine needs to be placed on a sturdy stand or table during operation.
- Ensure the cord is plugged directly into an outlet and avoid the use of extension cords.
- Check voltage before connecting the power plug.

4. Operating Instructions

- Plug in the unit and turn on the POWER switch. This provides power to the popper as well as the light.
- Lift the lid on the aluminum pot which is secured with a magnet.
- Turn on the HEAT switch to preheat the pot for about 5 minutes.
- Pour 2-3 oz. of oil (Coconut oil recommended) and 3-5 oz. of corn kernels into the pot. You can also add 2 oz. of sugar if desired. Close the lid and glass doors.
- Activate the TURN switch to stir the corn while cooking. This will ensure that all of the kernels are popped. Pour the popcorn out of the pot once all popping has stopped. Be careful to not burn the popcorn.
- You can repeat this procedure to produce more popcorn. It needs only 2 minutes to recover between each cooking cycle.

5. Cleaning and maintenance

- When finished, please turn the power switch to OFF on the machine and unplug before cleaning. Allow the pot to cool slightly to avoid burns. The machine should be cleaned after every use.
- The machine should NOT be cleaned with direct water, immersed in a sink, or in a dishwasher. Use only damp cloth or sponge dipped in soapy water.
- Particular care should be taken when cleaning the pot to ensure water does not come in contact with the internal element.
- Wipe off the machine with a dry cloth and wait at least half an hour before re-connecting to the main outlet.

6. Attention

- DO NOT allow minors to use the machine.
- Keep the power cord and connector plug away from water or heat. DO NOT use the machine if the cord or the plug is damaged.
- Please DO NOT move the machine while in operation.
- NEVER touch the heating pot with your hands while in operation.
- Make sure switch is in the OFF position when storing the machine. Store the machine upright.

7. Troubleshooting

Problem	Causes	Possible remedies
No light	Power plug is not connected	<ol style="list-style-type: none">1. Fasten the screw of connecting the wires2. Change the light bulb
No heating	<ol style="list-style-type: none">1. Loose wire in the heating tube2. Heating tube burnt3. Broken electric capacitor	<ol style="list-style-type: none">1. Remove the screw from which the wires come out.2. Replace the heating tube.3. Replace the electric capacitor.
Too high or too low temperature	Thermostat failure	Replace the thermostat

This manual provides information regarding the operation and maintenance of these products. We have made every effort to ensure the accuracy of the information in this manual. We reserve the right to change this product at any time without prior notice.