



# **Hot Dog Roller**

User Manual

# 1. Introduction

 
 
All models of hot dog roller are characterized by an appealing user-friendly design, durable stainless steel structure, and ease of use.

## 2. All model's specifications

Item	390006	390007	390008	390009
<b>Volts/ Frequency</b>	110V/60Hz	110V/60Hz	110V/60Hz	110V/60Hz
<b>Power</b>	600W	840W	1080W	1320W
<b>Rollers</b>	5	7	9	11
<b>Dimensions</b>	26"(L) x 14.4" (W)x 13.5"(H)	23"(L) x 13.6(W)" x 15.9"(H)	23"(L)x 16.3" (W)x 15.9"(H)	23"(L)x 19.5" (W)x 16.5"(H)


### 3. Product Assembly

- Unpack the glass cover carefully. Please review the parts list of the hot dog roller cover to ensure you have all parts to complete assembly.
- Begin by removing the 4 existing screws at the top edge of machine. Install the 4 plastic brackets with the screws. Place the two triangle glass sections into the brackets carefully.

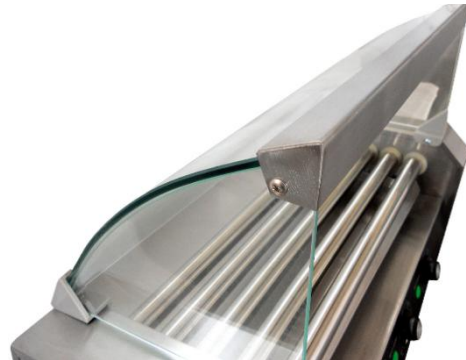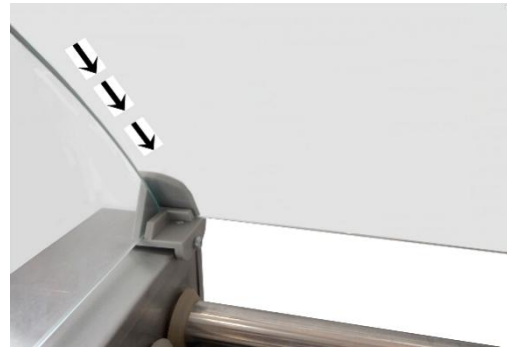

- Place the curved glass section into the back plastic brackets channel. Make sure the edges of the top and side glass are flush.

 - Place the stainless steel trim plate over the edge of the top and side glass. Insert a bolt through each side of the trim plate. Secure bolts with nuts. DO NOT OVERTIGHTEN as this may crack the glass.

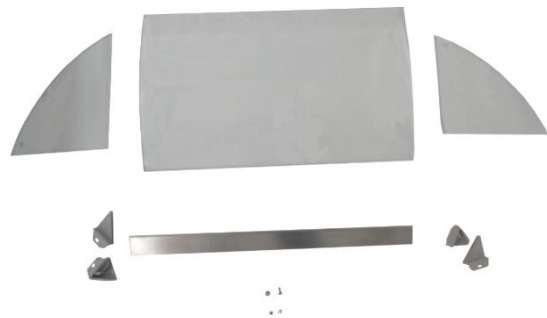

## 4. Before use

- Please read instruction book carefully before using. Get to know the machine and how to operate it safely.
- It is of utmost importance to clean the glass cover and rollers with a wet soft cloth.
- Install the machine on a durable workstation. Make sure the glass cover is fastened to the brackets.
- Check voltage before connecting the power plug.

## 5. Operating Instructions

- Please apply edible vegetable cooking oil with a small brush to each end of heating rollers near the white plastic ring. This allows the rollers to turn smoothly.
- Turn on the power switch. Place the hot dogs onto the machine. Set the controller to your desired cooking temperature.
- The heating light will turn on as the element heats the rollers. The light will turn off once the desired temperature is reached.
- There are two heat controllers and two indicator lights. The FRONT controller heats the front 3 rollers. The REAR controller heats the rear 2 rollers.
- Turn off the machine when you are done cooking.
- The machine should be cleaned after every time use.

## 6. Attention

- DO NOT allow minors to use the machine.
- Keep the power cord and connector plug away from water or excessive heat. DO NOT use the machine if the cord or the plug is damaged.
- Please DO NOT move the machine while in operation.
- NEVER touch the heating rollers with your hands.
- Ensure the machines is switched off and unplugged before cleaning or performing any maintenance.
- DO NOT use any hard metallic objects to clean (including scratch pads etc.)
- Please use a warm damp cloth or other soft material to clean the machine.

This manual provides information regarding the operation and maintenance of these products. We have made every effort to ensure the accuracy of the information in this manual. We reserve the right to change this product at any time without prior notice.