



# INSTALLATION & OPERATION MANUAL SALAMANDER Model: PT-SM36



WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE, MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

Please call Patriot Cooking and ask for contact information for your local service company.

## **IMPORTANT FOR YOUR SAFETY**

**THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL GAS EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.**

**POST IN A PROMINENT LOCATION THE INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE SMELL OF GAS IS DETECTED. THIS INFORMATION CAN BE OBTAINED FROM THE LOCAL GAS SUPPLIER.**

### **IMPORTANT**

**IN THE EVENT A GAS ODOR IS DETECTED, SHUT DOWN UNITS AT MAIN SHUT OFF VALVE AND CONTACT THE LOCAL GAS COMPANY OR GAS SUPPLIER FOR SERVICE.**

### **FOR YOUR SAFETY**

**DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.**



**WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.**

# INSTALLATION, OPERATION AND CARE OF SALAMANDER

## GENERAL

Patriot Equipment are produced with quality workmanship and materials. Proper installation, usage, and maintenance of your Salamander will result in many years of satisfactory performance.

It is suggested that you thoroughly read this entire manual and carefully follow all of the instructions provided.

Product parameter:

Model PT-SM36	BTU	Orifice size		Regulator pressure	
		Nat.	LP	Nat.	LP
36"Salamander	33,500	#31	#52	5"WC	10"WC

THIS APPLIANCE IS EQUIPPED FOR NATURAL GAS.

For Natural gas when equipped with No. #31 drill size orifice.

For LP gas when equipped with No.#52 drill size orifice.

For conversion to LP gas orifice see instruction plate on the appliance, see Page 11.

## INSTALLATION

Before installing, verify that the type of gas supply (natural or propane) agrees with the specifications on the rating plate located underneath the Salamander rack drip tray. If the supply and equipment requirements do not agree, do not proceed with the installation. Contact your dealer immediately.

### UNPACKING

Immediately after unpacking, check for possible shipping damage. If the Salamander is found to be damaged, save the packaging material and contact the carrier within 5 days of delivery.

Before installing, verify that the type of gas (natural or propane) and the clearance dimensions (see below) agree with the specifications on the rating plate which is located under the crumb tray on the right side.

### LOCATION

The equipment area must be kept free and clear of combustible substances.

Minimum Clearance	Combustible Construction	Non-Combustible Construction
Rear	2"	0"
Sides	2"	0"
Bottom	0"	0"

The installation location must allow adequate clearances for servicing and proper operation.

A minimum front clearance of 24" is required.

Do not obstruct the flow of combustion and ventilation air. Adequate clearance for air openings into the combustion chamber must be provided. Make sure there is an adequate supply of air in the room to replace air taken out by the ventilating system. Do not permit fans to blow directly at the Salamander. Avoid wall-type fans which create air cross currents within the room. Avoid open windows next to the Salamander. Maintain an 18" (46 cm) clearance from the top of the Salamander flue vent to the filters of the hood venting system.

## INSTALLATION CODES AND STANDARDS

The Salamander must be installed in accordance with:

In the United States of America:

1. State and local codes.
2. National Fuel Gas Code, ANSI-Z223.1/NFPA #54 (latest edition). This shall include but not be limited to: NFPA #54 Section 10.3.5.2 for Venting. Copies may be obtained from The American Gas Association Accredited Standards Committee Z223, @ 400N. Capital St. NW, Washington, DC 20001 or the Secretary Standards Council, NFP A,1 Batterymarch Park Quincy, MA 02169 -7471

NOTE: In the Commonwealth of Massachusetts

All gas appliances vented through a ventilation hood or exhaust system equipped with a damper or with a power means of exhaust shall comply with 248 CMR.

3. NFPA Standard # 96 Vapor Removal from Cooking Equipment, latest edition, available from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269. In Canada:

1. Local codes.
2. CAN/CSA-B 149.1 Natural Gas Installation (latest edition)
3. CAN/CSA-B 149.2 Propane Installation Code (latest edition), available from the Canadian Gas Association, 178 Rexdale Blvd., Etobicoke, Ontario, Canada M9W 1R3

The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa).

The appliance must be isolated from the gas supply piping system by closing its individual pressures equal to or less than 1/2 psi (3.5 kPa).

## GAS CONNECTIONS

Codes require that a gas shutoff valve be installed in the gas line ahead of the Salamander.

NATURAL GAS: Standard orifices are set at 5" W.C. (Water Column). A pressure regulator is supplied and must be installed when the Salamander is connected to the gas supply.

LP GAS: Standard orifices are set at 10" W.C. (Water Column). A pressure regulator is supplied and must be installed when the Salamander is connected to the gas supply.

The gas supply line must be  $\frac{3}{4}$ " or larger. If flexible or semi-rigid connections are used, the inside diameter must be the equivalent of  $\frac{3}{4}$ " iron pipe or larger. All connections of the flexible and semi-rigid type must comply with all local and national requirements. Make sure gas piping is clean and free of dirt, piping compound, and obstructions.


**WARNING:** PRIOR TO LIGHTING, CHECK ALL JOINTS IN THE GAS SUPPLY LINE FOR LEAKS. USE SOAP AND WATER SOLUTION. DO NOT USE AN OPEN FLAME.

After piping has been checked for leaks, all piping receiving gas should be fully purged to remove air.

### **GAS PRESSURE REGULATOR INSTALLATION**

Gas regulator pressure is preset at 5" Water Column (W.C.) for natural gas, and 10" W.C. For propane gas. Minor adjustments may be required based on site specific gas pressure.


Install the regulator as close to the Salamander on the gas supply line as possible. Make sure that the arrow on the underside of the regulator is oriented in the direction of gas flow to the Salamander (**Fig. 1**) and the regulator is positioned with the vent plug and adjustment screw upright (**Fig. 2**). A recommended plumbing schematic is listed below only for Salamander units as a guide to the installer and it is in no way liable for plumbing installation (**Fig. 3**).

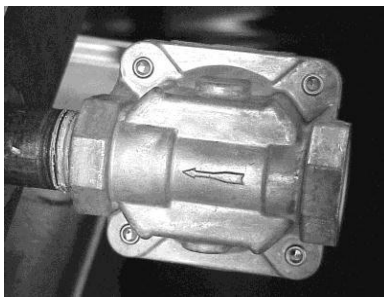

**Fig.1**



**Fig.2**

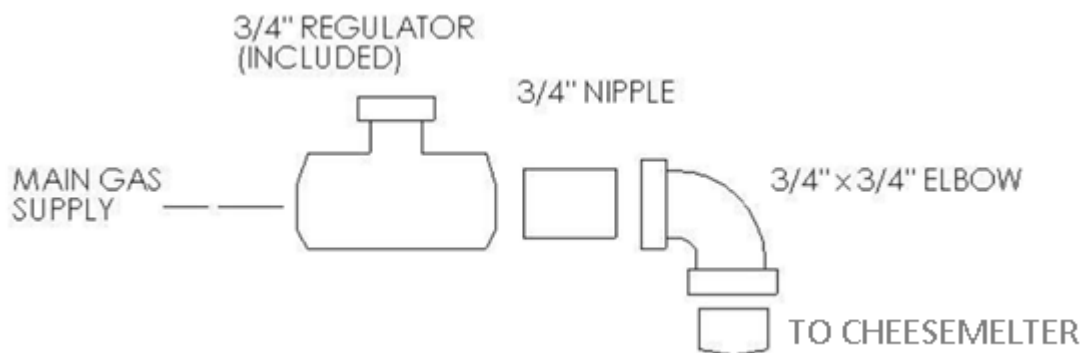


**Fig.3**

## **MOUNTING OVER GAS RANGE BACK DESIGNED TO MOUNT THIS SALAMANDER (Fig. 6)**

If the Salamander is to be mounted over a gas range WHICH IS DESIGNED SPECIFICALLY TO RECEIVE THIS PATRIOT SALAMANDER, it must be installed according to the instructions below:

Using the twelve bolts provided (balloon 1), install mounting brackets (balloon 2) on both top mounting posts (balloon 3). See photos below to show how to install posts on range back.

**Fig. 6**

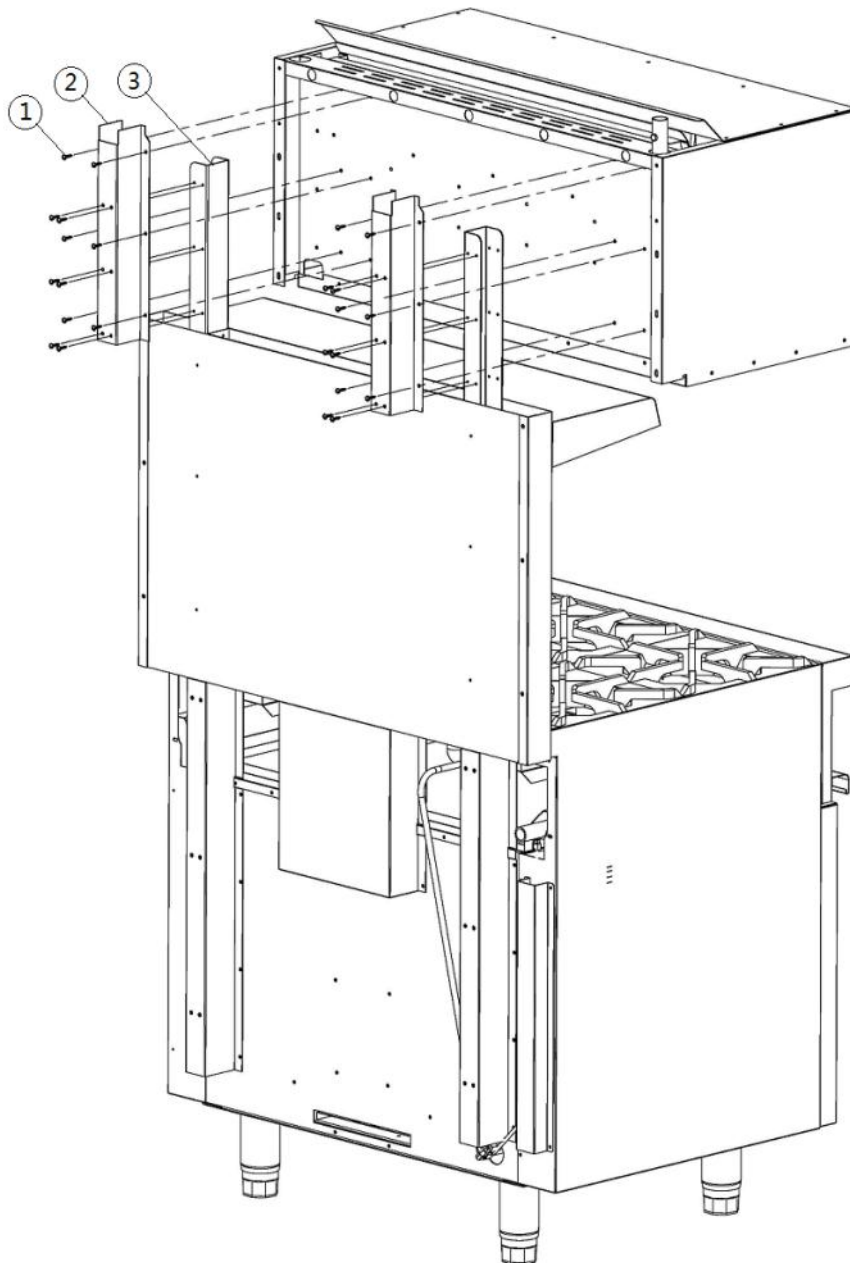

## Salamander - Range back installation

1. Take off the 12 self-tapping screws on the range back.



2. Insert the Salamander support column into the Range back plate as shown and tighten it with screws





3. Lift Salamander and attach it to the proper position of the support column





4. Take two brackets out of the package



5. Attach Salamander mounting track to the appropriate screw according to the hole position and tighten all screws





# OPERATION

**WARNING:** THE SALAMANDER AND ITS PARTS ARE HOT. BE CAREFUL WHEN OPERATING, CLEANING OR SERVICING THE SALAMANDER.

## CONTROLS

- Angled Handle** —Elevates or lowers the broiling drawer and grate to different positions. Grasp the handle and pull towards Salamander cavity. This releases the mechanism and allows the lifting handle to move into the desired position.
- Burner Valve** — Regulate the flow of gas to the burners. Gas flow is increased by turning the valve counterclockwise.
- Drip Tray** —Collects grease and waste which is diverted by the drip shield.
- DO NOT allow the drip tray to overflow. Empty the drip tray when three-quarters full to reduce the possibility of spillage.
- Drawer Handle** —Pull the drawer out for loading and unloading. To operate, pull straight out.

## LIGHTING, RELIGHTING, AND SHUTDOWN INSTRUCTIONS

1. Turn burner valve to the OFF position and wait 5 minutes.
2. Light the pilot adjacent to the main burner. Adjust the pilot valve screw until the pilot flame has a slight yellow tip.
3. After the pilot has been established, turn the burner valve to the ON position.
4. If the burners fail to light, turn off all valves, wait 5 minutes and repeat steps 1 -3.
5. To shut down, turn the burner valve to the OFF position.

## RACK POSITION AND GAS SETTING

Each operator will find the optimum rack position and gas setting for various products; however, it is recommended that gas input be reduced first when lower rack temperatures are desired. Further reduction in rack temperatures, if necessary, can then be obtained by lowering rack position. Infrared burner must use the full on gas setting.

## CLEANING

1. Allow Salamander to cool.
  2. To remove Salamander rack for cleaning, adjust Salamander rack to center position.
  3. Position left and right hands simultaneously on edges of Salamander rack and raise both rack stops.
  4. Slide Salamander rack and drip tray forward past rack stops, (which must be pivoted out of the way) holding tray up against racks.
  5. Remove Salamander rack and drip tray from Salamander.
  6. Let back of tray drop down to vertical to allow front hooks to disengage.
  7. Remove drip pan from Salamander rack and clean as you would any normal utensil, using care not to damage the front hooks
  8. To replace, hook the drip tray to the Salamander rack while tray is in a vertical position.
  9. Replace Salamander rack and drip tray in side channels while holding tray up close to rack.
  10. Clean bottom pan. Slide pan out and wash with soap and water. Rinse thoroughly and wipe dry with a soft clean cloth.
  11. Clean stainless steel surfaces with a mild detergent and water, using a damp cloth, or with a commercial stainless steel cleaner. Rinse thoroughly and wipe dry with a soft clean cloth.
  12. Burner ports and throats should be thoroughly cleaned. Venturi must be free from grease and lint.
- DO NOT** insert tooth pick or any sharp object in burner port holes.

# MAINTENANCE

**WARNING:** THE SALAMANDER AND ITS PARTS ARE HOT. BE CAREFUL WHEN OPERATING, CLEANING, OR SERVICING THE SALAMANDER.


**LUBRICATION:** Burner valve stems must be lubricated. Upon sticking, a burner valve stem should receive maintenance from your local authorized servicer.

**PILOT LIGHTS:** Pilot lights are to be kept clean and adjusted at the proper flame height.

**VENT:** Annually, when the Salamander is cool, check the flue and clear any obstructions.

**SERVICE AND PARTS INFORMATION:** Contact your local Service Agency to obtain service and parts information.

## PART LIST

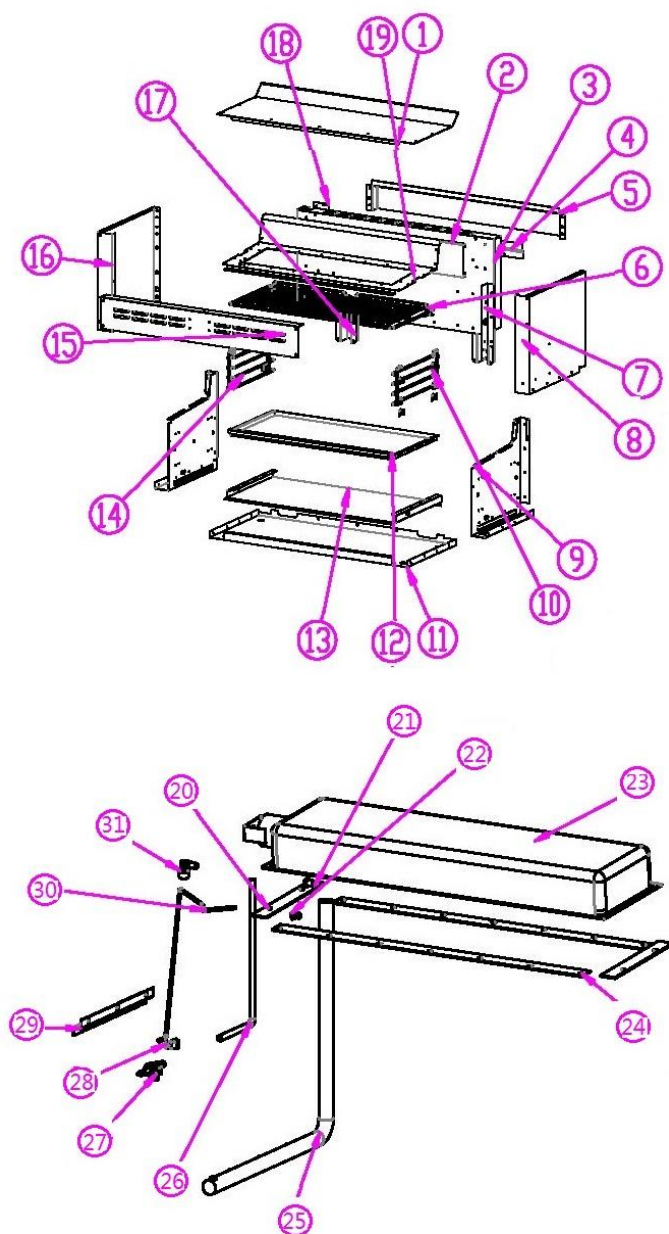

No.	Description	Quantity
①	Panel-Top	1
②	Beam-Back	1
③	Panel-Back	1
④	Bracket-Mounting	1
⑤	Bracket-Wall	1
⑥	Rack	1
⑦	Bracket-side panel	1
⑧	Panel-right side	1
⑨	Right panel-In the chamber	1
⑩	Bracket-Rack support	1
⑪	Panel-Bottom	1
⑫	Tray-Crumb	1
⑬	Bottom panel-In the chamber	1
⑭	Support-Rack	1
⑮	Panel-front	1
⑯	Panel-left side chamber	1
⑰	Bracket-Back	1
⑱	Bracket-Tube	1
⑲	Panel-Burner	1
⑳	Orifice Bracket	2
㉑	Orifice	1
㉒	Light	1
㉓	Burner	1
㉔	Burner support plate	2
㉕	Manifold	1
㉖	Tube-Flex	1
㉗	valve-manual	1
㉘	valve-light	1
㉙	Manifold-bracket	1
㉚	Tube-light	1
㉛	Elbow	1




## Conversion to LP gas orifice

1. Take out the screws on the top cover, then take off the top cover. You can see the orifice is on the left side of the Salamander as below **Fig.7** shows.




**Fig.7**

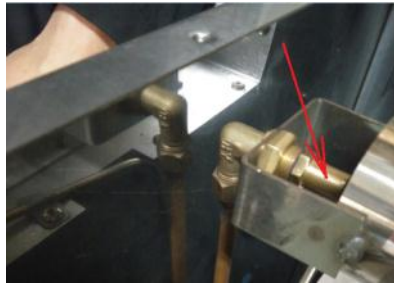

**Fig.8**


2. As Fig. 8 shows, unscrew and remove the Nat. gas orifice [#31( $\phi$ 3.2mm)] turning counter-clockwise, then screw in the LP gas orifice [#52( $\phi$ 1.68mm)] clockwise.
3. Change the pressure regulator spring kit to LP gas model, set at 10" W .C. (Water Column).

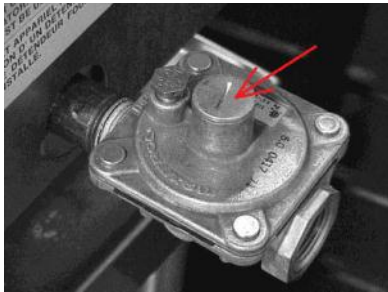

**Fig.9,**



**Fig.10**

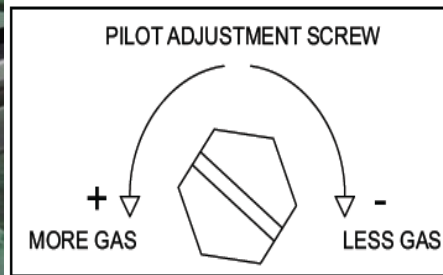

4. Turn pilot adjustment screw clockwise, then light standing pilot and adjust flame to be 1/4" high.

A product with the Patriot name incorporates the best in durability and low maintenance. We all recognize, however, that replacement parts and occasional professional service may be necessary to extend the useful life of this unit. When service is needed, contact an Authorized Service Agency, or your dealer. To avoid confusion, always refer to the model number, serial number, and type of your unit.



# **PATRIOT**<sup>TM</sup>

## **WARRANTY**

Patriot warrants its equipment against defects in materials and workmanship, subject to the following conditions:

Patriot gas equipment is warranted for one (1) years, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage. This warranty applies to the original owner only, and is not assignable.

The stainless steel fry tank has a five (5) year limited tank warranty. If during the first year, the tank is found to have a leak and is verified by an authorized service company, the entire fryer will be replaced. During years two through five, a new tank will be given.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at Patriot's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by Patriot, after defective unit has been inspected and defect has been confirmed. Patriot does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts that may need to be replaced due to normal usage, wear or lack of preventative maintenance.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary.

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage from improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from Patriot, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application.

For warranty issues and technical support call Patriot Cooking at 888-585-9440. Please have your model number, serial number and proof of purchase ready. For non-warranty related issues call 800-458-5593.

"THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF PATRIOT. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN."

**Please fill out and return the warranty registration card below to the address provided  
or register online at [Patriotcooking.com](http://Patriotcooking.com)**

### **WARRANTY REGISTRATION CARD**

### **MAIL CARD IMMEDIATELY**



**This card must be  
mailed immediately  
after installation date  
for warranty to be in  
effect.**

**PATRIOT COOKING 5130 Executive Boulevard Fort Wayne, IN 46808 Attn: Warranty Registration**

\_\_\_\_\_  
(Name of Business)

\_\_\_\_\_  
(Dealer Purchased From)

\_\_\_\_\_  
(Address)

\_\_\_\_\_  
(City)

\_\_\_\_\_  
(State)

\_\_\_\_\_  
(Zip Code)

\_\_\_\_\_  
(Model Number)

\_\_\_\_\_  
(Serial Number)

This is to inform that I, \_\_\_\_\_  
(Please print name of individual who owns the business)

have had the above installed in my place of business \_\_\_\_\_  
(Date of Purchase)

\_\_\_\_\_  
(Contact Phone Number)

\_\_\_\_\_  
(Contact E-mail)

\_\_\_\_\_  
(Signature of individual who owns Business)

The above warranties are in effect from this installation date, or 90 days, which ever comes first.