



C-10 - C12(220V)

USER MANUAL
Citrus Juicer

www.OmegaJuicers.com



Congratulations!

CONGRATULATIONS on the purchase of your new Omega product.

At Omega, we strive to develop technologically advanced machines that help deliver nutrition and flavor of the highest kind and closest to nature's purest form. We are driven by you, our brand supporters. Your enthusiasm helps us continue to reinvent and renew our line of juicers, high speed blenders and beverage equipment. Our team at Omega thanks you for supporting us for over 50 years!

Join us on Twitter @OmegaAppliances &/or on Facebook @OmegaJuicers

PRODUCT REGISTRATION, VISIT:
www.omegajuicers.com/omega-warranty-registration

RECIPES, VISIT: **www.omegajuicers.com/recipes**





CUSTOMER SERVICE: Call **1-800-633-3401** or
visit: **www.omegajuicers.com/contact-omega-juicers**

After using your Omega, we kindly ask you to rate the machine on
www.OmegaJuicers.com

TABLE OF CONTENTS

02	Safety First
03	Important Safeguards
04	Know Your Omega
05	Operating Instructions
06 - 07	Precautions for Safe Use
08	Care, Cleaning & Storage
09	Product Specifications
10 - 18	French Manual
19 - 27	Spanish Manual
28 - 29	Notes

SAFETY FIRST

-  **DANGER** Electricity
-  **DANGER** Risk of Electrical Shock
-  **GENERAL** Caution
-  **DANGER** Keep Hands Clear



WARNING

Electrical Shock Hazard

1. Plug into a grounded outlet.
2. Do not remove ground.
3. Do not use an adapter.
4. Do not use an extension cord.
5. Failure to follow these instructions can result in death, fire or electrical shock.

Moving Parts

1. Do not put spoons or other utensils in container when juicing. Use extreme caution not to contact moving parts with hands during operation.
2. Failure to follow these instructions can result in broken bones, cuts or other injuries.

FAILURE TO ADHERE TO THESE WARNINGS CAN RESULT IN FIRE, SERIOUS INJURY, ELECTRICAL SHOCK AND/OR DEATH



JUICING CONES ROTATE WITH SUBSTANTIAL FORCE. USE EXTREME CAUTION WHEN PRESSING FRUIT ON TO CONES. NEVER CONTACT MOVING PARTS DIRECTLY WITH HANDS.

Technical Services

For assistance or replacement parts, call
Technical Service at
Toll Free: 1-800-633-3401

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put body or supply cord in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Always make sure the juicing cones are free of obstructions before turning the unit on.
11. Be sure to turn switch to OFF position after each use. Make sure the motor stops completely before disassembling.
12. Do not put your fingers or other objects on the juicer opening while it is in operation. Turn the motor off and disassemble juicer to remove any pulp.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY


GROUNDING INSTRUCTIONS

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle.

EXTENSION CORDS

Use only 3-wire extension cords which have 3-prong grounding-type plugs and 3-pole cord connectors that accept the plug from the appliance. Use only extension cords having an electrical rating not less than the rating of the appliance. Do not use damaged extension cords. Examine extension cord before using and replace if damaged. Do not abuse extension cord and do not yank on any cord to disconnect. Keep cord away from heat and sharp edges.

KNOW YOUR OMEGA

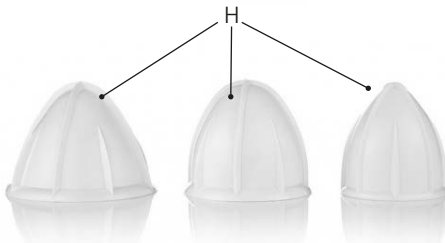

- A** Cover / Splash Guard
- B** Ream
- C** Stainless Steel Bowl / Juice Collector
- D** Stainless Steel Pulp Strainer (inside)
- E** Motor Base
- F** Juice Spout
- G** On/Off Switch
- H** 3 Sizes of Juicing Cones for all sizes of Citrus
- I** Cord

OPERATING INSTRUCTIONS



Step 1. Ensure the citrus juicer is correctly assembled with a container placed under the juice spout before juicing.



Step 2. Cut the citrus fruit in half by cutting across the diameter, and not tip to tip, to ensure more efficient juicing. For the best contact with the fruit cone, smooth the outside of the fruit by trimming any tip ends such as the ends of a lemon or orange.



Step 3. Plug the power cord into a properly grounded power outlet and then switch the on/off button to ON. This begins operation of the citrus juicer.



Step 4. Place citrus fruit half with the cut side down onto the juice cone. Be careful not to press too hard. Use caution not to contact moving parts with your hands.



Step 5. The motor will automatically start and the juicing cone will begin to rotate. The juicer will be extracted from the fruit and flow through the juice spout into the container. The pulp and seeds will collect in the stainless steel filter.

Step 6. The citrus juicer juices very quickly so each fruit half will be juiced in a few seconds. To automatically stop the motor, lift the fruit up.

Step 7. Remove the used fruit from the juicing cone. Empty excess pulp and seeds from stainless steel filter as required. Repeat steps 4-6 to continue juicing.

NOTE: The stainless steel filter should be emptied when full of pulp and seeds. The filter can be emptied during juicing by switching the citrus juicer "OFF" and carefully removing the juicing cone and filter. Clean and replace the stainless steel filter and juicing cone before continuing to juice. Do not allow the stainless steel filter to overfill as this may prevent correct operation or damage the unit.

PRECAUTIONS FOR SAFE USE

CAUTION

Hazards or unsafe practices could result in minor personal injury or appliance damage.

DO NOT PLUG IN OR UNPLUG WITH WET HANDS.

It may cause an electric shock or an injury.

DO NOT USE WITH OTHER THAN RATED VOLTAGE.

It may cause an electric shock, a fire or abnormal performance. If the voltage is different, it may shorten the life of the motor or cause a failure.

PLUG THE POWER CORD CORRECTLY AND PUSH IT TIGHT INTO A WALL SOCKET.

It may cause electric shock or a fire.

IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.

If the power cord is damaged, it may cause electric shock or a fire.

NEVER ALTER THE APPLIANCE. ALSO, DO NOT DISASSEMBLE OR REPAIR YOURSELF. DO NOT INSERT FINGERS, FOREIGN SUBSTANCES OR OBJECTS SUCH AS PINS INTO GAPS OR HOLES IN THE BASE.

It may cause a fire, an electric shock or a failure. For any technical support, contact the authorized local Customer Care Center.

DO NOT MOISTEN THE BASE OR SPLASH WATER ON THE BASE.

Be careful not to let any liquids or other substances get into the switch on the appliance. DO NOT OPERATE THE SWITCH WITH WET HANDS. It may cause electric shock or a fire.

WHEN THE POWER CORD WIRE IS BROKEN OR DAMAGED OR THE PLUG-IN PART BECOMES LOOSE, DO NOT OPERATE IT.

It may cause an electric shock, a fire or an injury.

FOR SAFETY, MUST DO GROUND CONNECTION DO NOT DO THE GROUNDING ON GAS PIPE, PLASTIC WATER PIPE, TELEPHONE WIRE, ETC.

It could cause an electric shock, a fire, or a malfunction and an explosion. Be sure to use the socket with ground connection.

NEVER DISASSEMBLE DURING OPERATION OR INSERT FINGERS, FOREIGN OBJECTS SUCH AS FORKS, SPOONS ETC. INTO FEEDING CHUTE OR JUICE SPOUT.

It may cause an injury, an accident or a failure.

WHEN DETECTING A GAS LEAK, DO NOT INSERT THE POWER CORD INTO ITS SLOT. OPEN THE WINDOW TO VENTILATE FULLY AND IMMEDIATELY.

It may cause an injury or a failure.

PRECAUTIONS FOR SAFE USE

THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

Children should be supervised to ensure that they do not play with the appliance.

NEVER PUT A FINGER, A FORK OR A SPOON ETC. INTO JUICE SPOUT.

It may cause an injury or a failure.

DURING THE OPERATION, DO NOT ATTEMPT TO MOVE THE BASE, DISASSEMBLE THE BOWL SET OR PARTS AND TRY TO LOCK THEM.

It may cause an injury or a failure. If you do need to move or disassemble, switch off first and unplug the power cord.

WHEN USING THE APPLIANCE, BE CAREFUL OF A NECKTIE, LONG NECKLACE, SCARF ETC. BECOMING ENTANGLED INTO FEEDING CHUTE.

It may cause an injury, a failure or a breakage.

PLACE THE APPLIANCE ON A FLAT AND STABLE SURFACE.

It may cause an injury or a failure.

DO NOT OPERATE THE APPLIANCE FOR MORE THAN 30 MINUTES AT A TIME.

It may cause a motor failure due to overheating. Cool it down sufficiently for 5 minutes and operate it again.

DO NOT ALLOW A SEVERE SHOCK TO THE APPLIANCE OR DROP IT.

It may cause an electric shock, a fire or damage

IF THE APPLIANCE GIVES OFF AN UNPLEASANT SMELL, EXCESSIVE HEATING, OR SMOKE, STOP USING IMMEDIATELY AND CONTACT THE LOCAL CUSTOMER CARE CENTER.

When using a new appliance, it will give off a smell and the smell disappears naturally over time.

ALWAYS UNPLUG THE APPLIANCE AFTER USE. WHEN UNPLUGGING THE POWER CORD, MAKE SURE TO HOLD THE POWER CORD.

If holding the wire to unplug, it may cause an electric shock or a fire.

THE APPLIANCE WEIGHS ABOUT 7.5 LB (3.4 KG). WHEN MOVING THE APPLIANCE, ENSURE TO MOVE IT HOLD TIGHTLY AT THE BASE WITH BOTH HANDS.

If attempting to hold bowl or the edge of the base, the base may fall causing an injury or a failure.

CARE, CLEANING & STORAGE

- Always ensure that the juicer is switched OFF and the plug is removed from the power outlet before cleaning, disassembling, assembling and storing the appliance
- Follow these instructions to clean all surfaces or parts that come into contact with food during juicing:
 1. Immediately after each use rinse removable parts under warm water. To remove wet pulp allow parts to air dry before reassembling.
 2. For thorough cleaning-after disassembling the appliance, all removable parts should be washed in tepid soapy water or on the top shelf of the dishwasher. The motor base should be wiped with a soft, damp cloth. All parts should be dried thoroughly before reassembling. Do not place base of unit in the dishwasher.
 3. Store the cleaned and reassembled citrus juicer in an upright position in a cool, dry place. Never place any items on the top of the citrus juicer.
 4. Any other servicing should be performed by an authorized service representative.

NOTES:

1. Rinse or wash all removable parts immediately after use. Dried citrus pulp is difficult to remove and may stain. If any staining does occur, wipe the affected parts with undiluted dishwashing liquid, rinse and dry thoroughly.
2. Do not soak the stainless steel filter or other removable parts in bleach. Never immerse the motor base in water or any other liquid. Do not use harsh abrasives.

TROUBLESHOOTING

Possible Problem	Easy Solution
Machine will not work.	Power switch to "ON".
Machine will not work.	Lower Hand.
Machine will not work.	Properly assemble cone and dome.
Motor stalls, the juicing cone will not spin.	Raise hand, re-lower hand slowly for the first few seconds then press down firmly.

Replacement Parts

For replacement parts, visit www.omegajuicers.com

PRODUCT SPECIFICATIONS

Product Name	Professional Citrus Juicer
Model Name	C-10W
Rated Voltage	120 V
Rated Frequency	60 Hz
Rated Power Consumption	120 W
RPM	150 RPM
Cord Length	55" (1.4 m)
Motor	1/5
Weight	7.72lb (3.5 kg)
Dimensions	8.375" Depth (212 mm) 8.375" Width (212 mm) 13.1875" Height (335 mm)





NOURISH YOUR BODY
Enrich Your Soul

Discover the complete line of Omega brand professional products at

www.OmegaJuicers.com

6291 Lyters Lane • Harrisburg, PA 17111, USA • T: 1.800.633.3401 • F: 717.561.1298