






Safety Regulations

- This appliance is intended for commercial use only and must not be used for household use.
- The appliance must only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation or improper use.
- Keep the appliance and electrical plug away from water and any other liquids. In the event that the appliance should fall into water, immediately remove plug from the socket and do not use until the appliance has been checked by a certified technician. Failure to follow these instructions could cause a risk to lives.
- Never attempt to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not touch the plug with wet or damp hands.
- Danger of electric shock! Do not attempt to repair the appliance yourself. In case of malfunction repairs are to be conducted by qualified personnel only.
- Never use a damaged appliance! Disconnect the appliance from the electrical outlet and contact the retailer if it is damaged.
- Warning! Do not immerse the electrical parts of the appliance in water or other liquids. Never hold the appliance under running water.
- Regularly check the power plug and cord for any damage. If the power plug or power cord is damaged, it must be replaced by a service agent or similarly qualified persons in order to avoid danger or injury.
- Make sure the cord does not come in contact with sharp objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
- Always keep an eye on the appliance when in use.

- Warning! As long as the plug is in the socket the appliance is connected to the power source.
- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- Do not use any extra devices that are not supplied along with the appliance.
- Only connect the appliance to an electrical outlet with the voltage and frequency mentioned on the appliance label.
- Connect the power plug to an easily accessible electrical outlet so that in case of emergency the appliance can be unplugged immediately. To completely switch off the appliance pull the power plug out of the electrical outlet.
- Always turn the appliance off before disconnecting the plug.
- Never use accessories other than those recommended by the manufacturer. Failure to do so could pose a safety risk to the user and could damage the appliance. Only use original parts and accessories.
- This appliance must not be used by children under any circumstances.
- Keep the appliance and its cord out of reach of children.
- Always disconnect the appliance from the mains if it is left unattended or is not in use, and before assembly, dis-assembly, or cleaning.
- Never leave the appliance unattended during use.

Special Safety Regulations

- This appliance is designed for deep frying a variety of food. Any other use may lead to damage of the appliance or personal injury.
- Use the appliance only as described in this manual.
- This appliance should be operated by trained personnel in kitchen of the restaurant, canteens or barstaff, etc.
-  Caution! Danger of burns! The temperature of the heating surface and other accessible surface is very high during use. Touch the control panel only.
-  Caution! This appliance will emit non-ionizing electromagnetic radiation.


-  An equipotential bonding terminal is provided to allow cross bonding with other equipment.
- Do not place the appliance near objects that maybe affected by a magnetic field TVs, radios, bank cards and credit cards.
- WARNING! To avoid the risk of fire, do not allow the oil level to drop below the MIN-level. Always use plenty of oil in the oil tank.
- WARNING: Keep all ventilation openings clear of obstruction.
- WARNING: Do not fry too much food at once. Maximum load is approximately 4 lbs per time.
- Do not use old oil as this may increase the risk of fire.
- Do not fill oil below the MIN-level and beyond the MAX-level in the oil tank.
- IMPORTANT: Always ensure that there is sufficient oil in the oil tank. Check it regularly during operation.
- Do not place the appliance on a heated object (gasoline, electric, charcoal cooker, etc.) Keep the appliance away from any hot surfaces and open flames. Always operate the

appliance on a level, stable, clean, heat-resistant and dry surface.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Allow at least 8 inches of space around the appliance for ventilation purpose during use.
- Do not use water jets or flush directly with water or steam cleaner as the parts will get wet and an electric shock might occur.
- Do not clean or store the appliance unless it is completely cooled down.

Grounding Installation

This appliance is classified as protection class I appliance and must be connected to a protective ground. Grounding reduces the risk of electric shock by providing an escape for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Touch control panel of the appliance

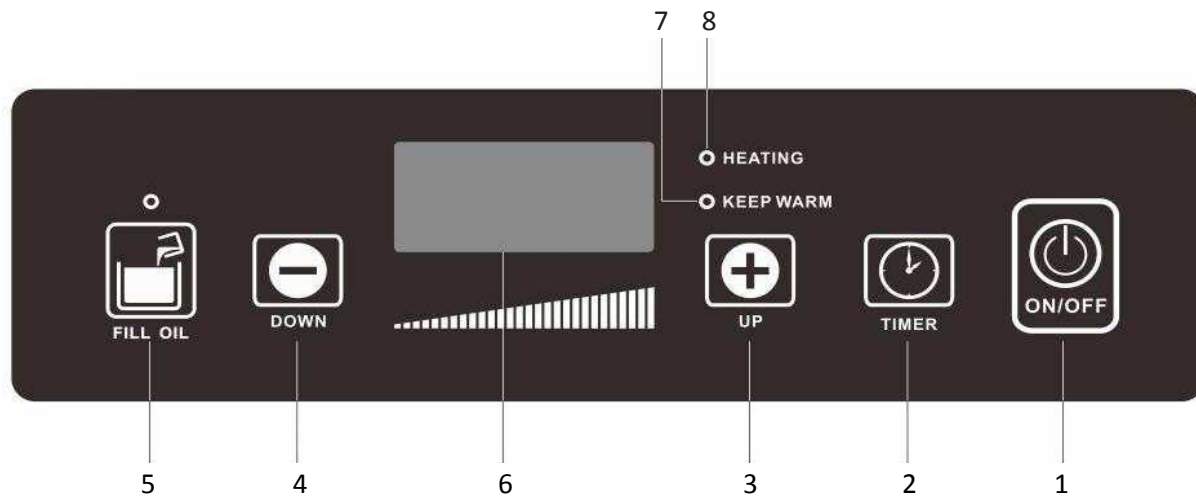

- | | | |
|----|------------------|--------------------------------|
| 1. | ON/OFF: | SwitchON/SwitchOFF |
| 2. | TIMER: | Time setting up to 120 minutes |
| 3. | UP: | Increase Time/Temperature |
| 4. | DOWN: | Decrease Time /Temperature |
| 5. | FILLOIL: | Fill oil alert indicator |
| 6. | DIGITAL DISPLAY: | Shows Time/Temperature |
| 7. | KEEPWARM: | Keep warm indicator |
| 8. | HEATING: | Heating indicator |

Preparations before using for the first time

- Remove all protective packaging and wrapping.
- Check to make sure the appliance is undamaged. In case of incomplete delivery and damages. Please contact supplier.
- Clean the appliance before use (See==> Cleaning and Maintenance).
- Make sure the appliance is completely dry.
- Place the appliance on a horizontal, stable and heat resistant surface that is safe against water splashes.

- Ensure that there is sufficient ventilation. Keep a minimum distance of 8 inches around the appliance bottom.
- Do not place the appliance in close proximity to devices which are sensitive to disturbances by magnetic sources (e.g. radios, tape decks). sources

Note: Due to manufacturing residue, the appliance may emit a slight odor in the first few cycles. This is normal and does not indicate any defect or hazard. Make sure the appliance is well ventilated.

Switch ON

- Make sure the tap is closed and that the oil tank has enough oil. Level should be between MIN and MAX marking.
 - Connect the power plug to a suitable electrical supply outlet.
 - Next, press the power switch at the rear side of the appliance to connect the power supply. Red indicator on the power switch will light up.
 - Now the appliance is in standby mode.
-

Operation

- Press ON / OFF (1) switch to ON. FILL OIL (5) indicator flashes and buzzer sound will be heard to alert the user to fillup the oil tank container.
- Then, please make sure again the oil level is between the MIN and MAX marking.
- If the oil tank contains enough oil, press FILL OIL (5) to cancel the buzzer sound and the indicator light. The display will show the default temperature of 240F. Press UP (3) or DOWN (4) button to achieve desired temperature.
- While heating to the set temperature, the “HEATING” indicator will light up and the “KEEP WARM” indicator will go out.
- When the oil temperature reaches the set temperature, “HEATING” indicator will go out and “KEEP WARM” indicator will light up.

Note: During operation, if no temperature is set, the appliance will maintain to the default temperature 240F.

Resetting Timer

- Timer can be set by pressing the TIME (2) to enter TIMER mode.
- Then, press UP (3) or DOWN (4) to increase or decrease the time. (Range: 0 min ~ 120 mins, with 5 minute intervals. Default setting is 0 min.
- When the timer is set, it will be stored automatically within 5 seconds. Then, timer will start to countdown from the set time.
- Time remaining/temperature will be shown on the digital display (6) alternately.
- The appliance will go into OFF mode when the set time is elapsed.
- Press and hold the UP (3) or DOWN (4) for fast adjustment of timer.

Note:

1. Press and hold the increase setting button.
2. Every time you press any button on the panel, a short beep sound will be heard to alert the user.
3. After an extended period of operation, it is normal for the cooling fan inside to continue running in OFF mode for some time. Before unplugging the appliance, wait until the cooling fan stops running.
4. The appliance's outer surface is still hot even after switching to OFF mode. Please wait for the appliance to completely cool down before touching or cleaning. If no any button on the control panel is pressed during operation for 2 hours, the appliance will then switch to OFF mode.

RESET the Hi-limiter (Thermal cut-out)

Attention: Please note that there is a RESET button located at the rear side of the appliance to prevent the appliance from overheated.

- Unplug the appliance from the electrical power outlet and allow the appliance to completely cool down.

Unscrew the black protective cap of the RESET button.

- Press the RESET button of the Hi-limiter (Thermal cut-out). You should hear a click sound.

Screw back the protective cap on the RESET button.

• Error codes display

Error codes shown on the display(6)	Possible cause	Possible solution
E 1	The internal temperature of the appliance is too high. Buzzer alarm sound is heard.	Press ON/OFF(1) button to switch OFF the appliance and unplug the appliance, wait until the appliance is completely cool down. Also RESET the Hi-limiter.
E 2	The appliance is overheated and buzzer alarm sound is heard.	Press ON/OFF (1) button to switch OFF the appliance and unplug the appliance, wait until the appliance is completely cooled down. Also RESET the Hi-limiter.
E 3	Input supply voltage is too high.	Make sure that the appliance is connected to a suitable electrical power supply.
E 4	Input supply voltage is too low.	Make sure that the appliance is connected to a suitable electrical power supply.

Cleaning and Maintenance

Attention: Always unplug the appliance from the electrical power outlet and let it cool down completely before cleaning & storage.

Cleaning

- Never immerse the appliance in water or other liquids.
- Clean the surface with a slightly damp cloth or sponge with some mild soap solution.
- Never use abrasive sponges or detergents, steel, wool or metal utensils to clean the interior or exterior parts of the appliance.

Storage

- Before storage, always make sure the appliance has already been disconnected from the electrical outlet and cooled down completely.
 - Store the appliance in a cool, clean and dry place.
-

Troubleshooting

- If the appliance does not function properly, please check the electrical connection. If you are still unable to solve the problem, please contact the supplier/service provider.

- Error codes shown on the digital display (6).(See--> Error codes display)

Problems	Possible cause	Possible solution
The appliance does not switch ON.	<ul style="list-style-type: none"> - Power plug is not connected properly with the electrical outlet. - On/OFF(1)button is not pressed. 	<ul style="list-style-type: none"> - Check the power plug to make sure it is connected properly. - Press the On/Off (1) button to start operation.
Cooling fan is operating even after the appliance is switched to OFF mode.	<ul style="list-style-type: none"> - This is normal. The cooling fan continues running in OFF mode for some time to cool down all internal elements. 	<ul style="list-style-type: none"> -Wait until the cooling fan stops rotating.

Technical specification:

Item no.:	PA0041
Operating voltage and frequency:	208V~ 60Hz Rated
input power:	3000W
Temperature setting:	140-380F
Timer setting:	0 minute-120 minutes
Protection class:	Class I
Oil tank:	8L
Dimension:	11.33"L X 18.82"W X 16.14"H

