 
 


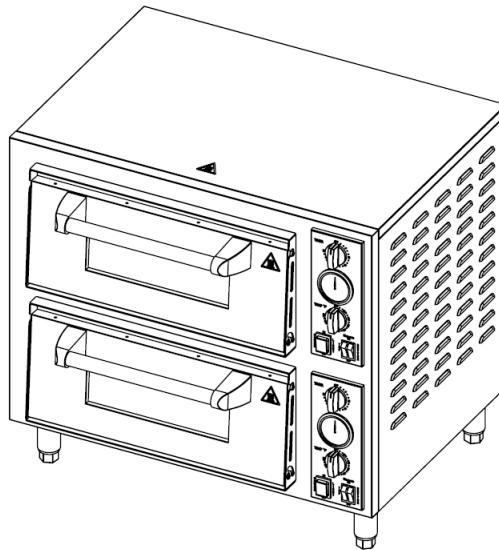

User Manual

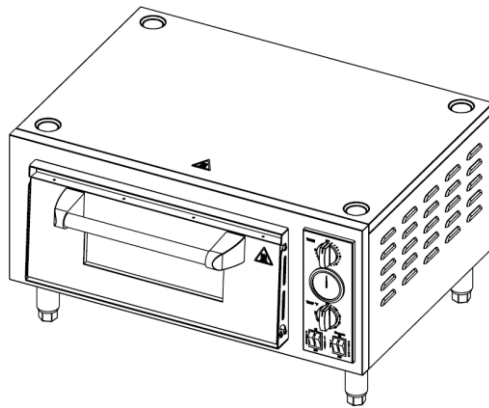

Countertop Pizza Oven

Models: PA0218, PA0219

Please read and keep these instructions before using.

Index

Important Safety Information..... 3

Identification of Key Parts..... 4

Circuit Diagram..... 4

Installation of Your pizza Oven.....5

Before Using Your Oven.....5

Using Your Oven.....5

Typical Operation Sequence.....6

Timer.....6

Temperature Control Knob..... 6

Power and Heating Indicator Light.....7

Protection Component.....7

Cleaning and Maintaining Your Oven.....7

Troubleshooting.....7

 
IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions carefully and completely.
2. For commercial use only.
3. Do not touch hot surfaces.
4. Protect against electrical shock by keeping all cords, plugs, and other electrical components away from water or other liquids.
5. Unplug this unit when not in use and before cleaning.
6. Allow the unit to cool before putting on or taking off parts.
7. Do not operate this or any appliance with a damaged electrical cord or plug.
8. Do not operate this or any appliance after it has malfunctioned or been damaged in any way.
9. Do not use outdoors, for indoor use only.
10. Do not place on or near a hot gas or electric burner.
11. Attach plug to appliance first, then plug electrical cord into the wall outlet.
12. Disconnect the unit by turning the temperature and timer control to "OFF", then removing the electrical plug from the wall outlet.
13. Do not use appliance for any application other than intended use.
14. Do not insert metal utensils or over size food into this unit as they may cause a fire and heighten the risk of electrical shock.
15. Do not store any item on top of this unit when in operation.
16. Do not allow this oven to touch or be covered by flammable material, such as curtains, draperies, walls, etc., when in operation.
17. Do not clean with metal scouring pads as pieces can break off and touch electrical components, heightening the risk of electrical shock
18. Never place materials such as paper, cardboard, plastic, etc. in this oven.
19. Do not cover interior of this unit with metal foil as it may cause the oven to overheat.
20. Avoid scratching the surface or nicking the edges of the safety glass door. If the oven door has any damage, contact customer service before use.
21. Turn the oven off by turning the temperature and timer control to the "OFF" position.
22. The use of accessories that are not recommended by the manufacturer may result in injury.
23. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. When using the oven, check the voltage and outlet to make sure the appliance is correctly connected with power.
25. Place unit on a flat surface that is well ventilated. The appliances must be supervised during operation, DO NOT leave appliance without powering off.


NOTE: Save these instructions for future reference.

Identification of Key Parts

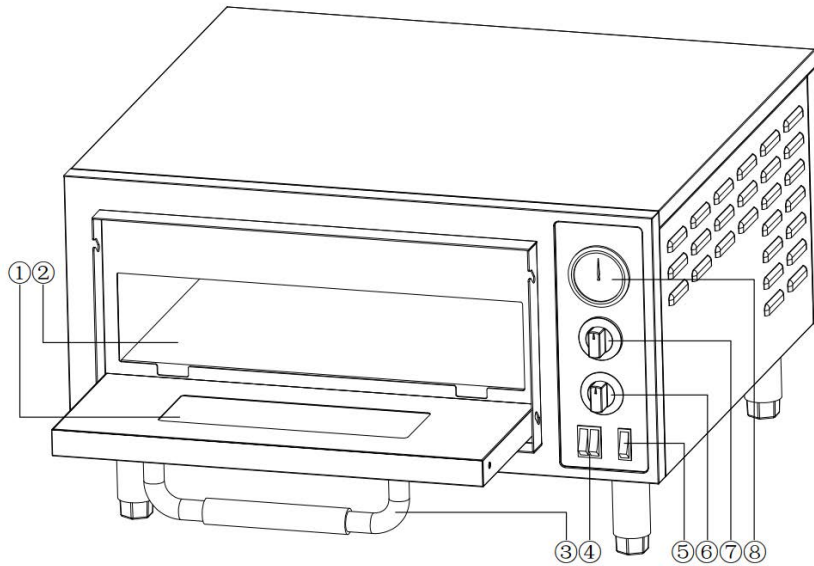

1. Front door 2. Pizza stone 3. Handle 4. Heating element separate switches
5. Light switch 6. Timer knob 7. Temperature knob 8. Temperature belt

 Circuit diagram

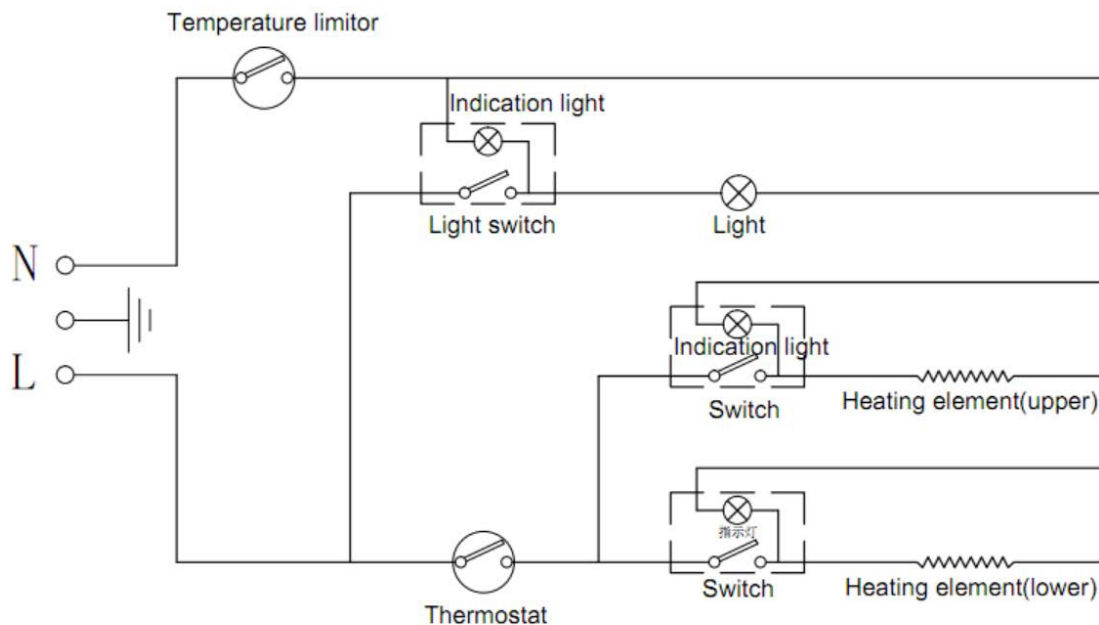

Timer stop, heating element will still working.

INSTALLATION OF YOUR OVEN

All electrical connections must comply with specification and power standard. The installation operation must be done by qualified personnel.

All models are countertop type. Place the oven on a flat surface and leave 4" on all sides for the air ventilation.

BEFORE USING YOUR OVEN

Before cooking anything in your oven for the first time, please follow these simple instructions:

Using a small amount of detergent, clean the handle and pizza stone with soapy water. (NOTE: Do not use a spray or abrasive polishing agent.) Gently wipe down interior walls with a damp cloth. While cleaning this unit, do not touch the electric heating element or soak the inside of the oven with water.

After cleaning and thoroughly drying the surfaces noted above, place the pizza stone back inside the oven.

Close the oven door and preheat the oven to its highest temperature setting for 5 minutes.

Turn off the oven and open the oven door in order to remove any smoky residue from inside the oven. The heating elements are well lubricated and this initial use will help burn off any extra grease. A light amount of smoke is normal during this process.

Using Your Oven

To start your oven, turn on the power switch and turn on the temperature dial to set your desired cooking temperature. Next, turn on the timer dial to set the desired cooking time and the fan will begin to rotate.

Turn on the light switch to open the light of oven.

When in use, the heating elements on the top and bottom can start to open or stop separately. Once the desired temperature is reached, the heating elements will turn off. When the temperature gets lower, the heating elements will start to work again.

This oven has a high temperature protection function. If the inner temperature gets too high, the pizza oven will automatically shut off. If you need to reset the temperature limiter, take off the rear board and push the reset button.

CAUTION: During the baking process, make sure that no metal accessory comes in contact with the electric heating elements.

CAUTION: Foods baked in this oven will be hot. Wear protective hand coverings when reaching into the oven to retrieve food.

Typical Operation Sequence

ACTION	RESULT
Plug in your oven	Power is connected but power light will go on after turning the temperature dial
Adjust temperature control knob	Heating indicator light comes on; heating elements begin to heat up
Temperature light shuts off	Oven has reached desired temperature
Load product into oven	Product will begin to cook
Set timer to desired cook time between 0-30 min	Timer starts timing down
Timer reaches zero	Timer chimes
Unload oven	Product will be cooked/hot; use caution removing it from the oven

Timer

The range of the timer on this unit is 0-30 minutes. Turning the timer to the "0" position stops the cooking time and the timer will "ding" to alert. The oven will be hot even when the cooking time is over.

If you need to reset the baking time while the oven is in operation, simply turn the timer to a new position. The oven will reset the time according to the revised requirement without needing to be turned off.

Temperature Control Knob

The temperature range of this unit is 150-840°F. This thermostatic switch controls the temperature inside the oven and helps to maintain the proper temperature during various heating, roasting, and baking applications.

Power Indicator Light

Any time this appliance is connected to the power supply and the power switch is turned on, the fan motor will begin to operate at the same time. The power indicator light will be on when the operator sets the temperature and time.

Protection Component

If the temperature of this oven reaches an unsafe limit, the electrical components will shut off and it will stop operating in order to prevent overheating.

Cleaning & Maintaining Your Oven

To clean, first unplug the power cord from the wall outlet and wait for the oven to cool. Use a damp cloth or sponge to gently wipe down the inside of the oven. Avoid soaking the inside of the oven or washing it in running water as this will cause serious damage to the unit.

Troubleshooting

Problem: The oven does not become hot after being switched on.

- Be sure that the timer switch is set.
- Be sure that the temperature control knob is set.

Problem: There is a metallic sound when the oven is in use.

- Do not attempt to dismantle the oven.
- Contact your service agent right away to examine the fan.

Problem: Food is often overcooked or burned, even when cooked according to the recipe.

- Check that the fan motor is operating normally.
- Contact your service agent to examine the temperature control knob.