 




# COUNTERTOP PIZZA / SNACK OVEN

## USER MANUAL

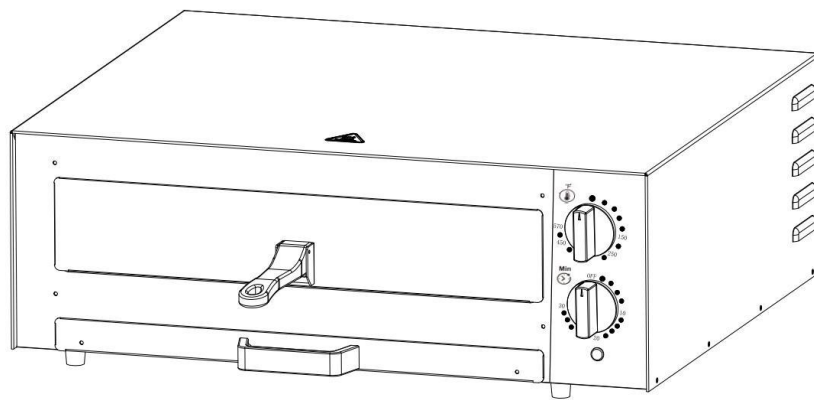

***Model: FP-07A/FP-07B***

***Please read and keep these instructions.***



# IMPORTANT SAFETY INFORMATION

**This manual contains important information regarding safe operation of your new oven.**

**Please read thoroughly before equipment setup, operation, or maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty!**

**NOTE: Save these instructions for future reference.**

## Precautions for Usage

- Do not come in direct contact with hot surfaces.
- Avoid cooking oversized foods.
- Keep the top of the unit clear. Do not store items on top of the unit.
- Do not stack ovens on top of each other.
- Do not cook greasy foods; grease may damage the heating coils.
- Only plug into the correct grounded outlet. Forcing the plug into another outlet may cause an electrical hazard.
- Do not plug in, unplug, or operate the unit with wet hands, doing so will increase the risk of electrical shock.
- Keep the oven, plug, and cord clear of liquid and do not immerse any part in liquid when cleaning.
- When not in use or cleaning, unplug the oven from the outlet.
- Never leave the oven unattended during operation.
- This oven is not to be used for anything other than its intended use.
- Do not operate this oven outdoors.
- Do not use the oven if it is damaged in any way, including if the cord and plug are damaged, or if there is a malfunction at any time.
- Only allow authorized professionals to conduct repairs. Incorrect installation, alterations, adjustments, and maintenance can lead to property loss and injury. Always consult a professional for any type of repair.
- Opening or removing the housing of this oven will void the warranty.

# Assembly Instructions

- 1.Ensure that there is at least 12 inches of clearance on all sides, including the top and back of the unit.
- 2.The oven should be installed on a flat, sturdy surface.
- 3.Be sure that the oven is properly grounded and only plugged into a grounded, 3-hole NEMA 5-15P outlet to minimize shock or fire hazard.
- 4.Line up the oven door handle and panel together, being sure that the handle will flip upwards.
- 5.To insert the handle, insert the hook into the oval opening on the panel. The hook will be facing upwards when installing.
- 6.Place the washer on the bolt and insert into the top round hole through the handle and panel.
- 7.Secure tightly with the included screw from behind the panel.

**PLEASE NOTE: Improper assembly of the flip up handle to the door could cause the rack to turn or fall off when moving product, possibly causing injury or burns.**

## Before Using Your Oven

Using a small amount of detergent, wash the rack with soapy water. (NOTE: Do not use a spray or abrasive polishing agent.) Gently wipe down interior walls with a damp cloth. While cleaning this oven, do not touch the electric heating element. Do not soak the inside of the oven with water. After cleaning as noted above, close the door and set timer for 5 minutes. After the timer has reset to zero, open the oven door in order to release any smoky residue from inside the oven. The heating elements are well lubricated and the initial use will help burn off the extra grease. A light amount of smoke is normal during this process.

# Usage Instructions

 
1. Plug in the oven. The oven requires no preheating.
2. Set the desired cook time by turning the knob of the timer switch.  
***IMPORTANT: MAINTAIN CONSTANT SUPERVISION OF THE OVEN WHILE IN USE!***
3. Caution should be used when removing food from the oven. Oven mitts or other protective gear should be used to avoid skin contact with hot surfaces.
4. Unplug the oven when not in use.

## Specification

Model No.	Voltage	Herz	Power	Overall Dims.	Shipping Dims.
FP-07A	120V	60Hz	1700W	23.6"x19.7"x8.8"	27"x23.6"x11.6"
FP-07B	120V	60Hz	1700W	23.6"x19.7"x8.8"	27"x23.6"x11.6"


# Identification of Key Parts

## FP-07A:

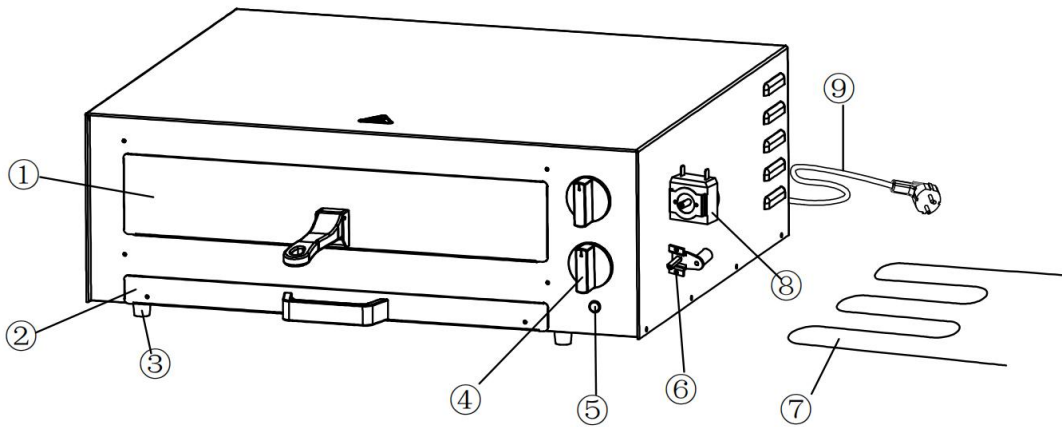

- ① Door Assembly ② Crumb Tray ③ Foot ④ Knob ⑤ Working Light  
⑥ Thermostat ⑦ Heating Element ⑧ Timer ⑨ Power Cord


## FP-07B:

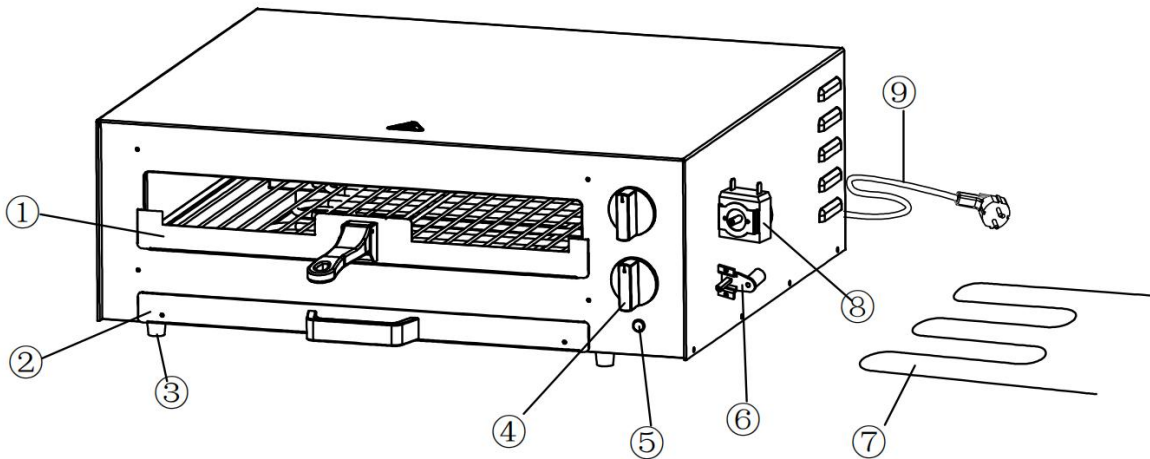 


- ① Glass Door Assembly ② Crumb Tray ③ Foot ④ Knob ⑤ Working Light  
⑥ Thermostat ⑦ Heating Element ⑧ Timer ⑨ Power Cord

# Circuit Diagram

 **FP-07A:**

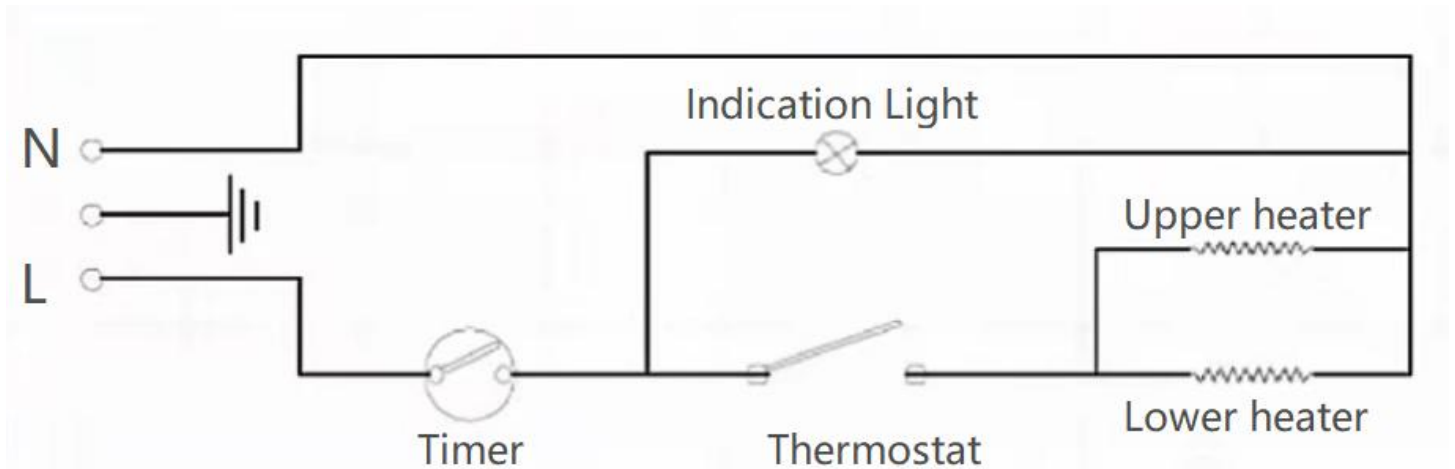

**FP-07B:**

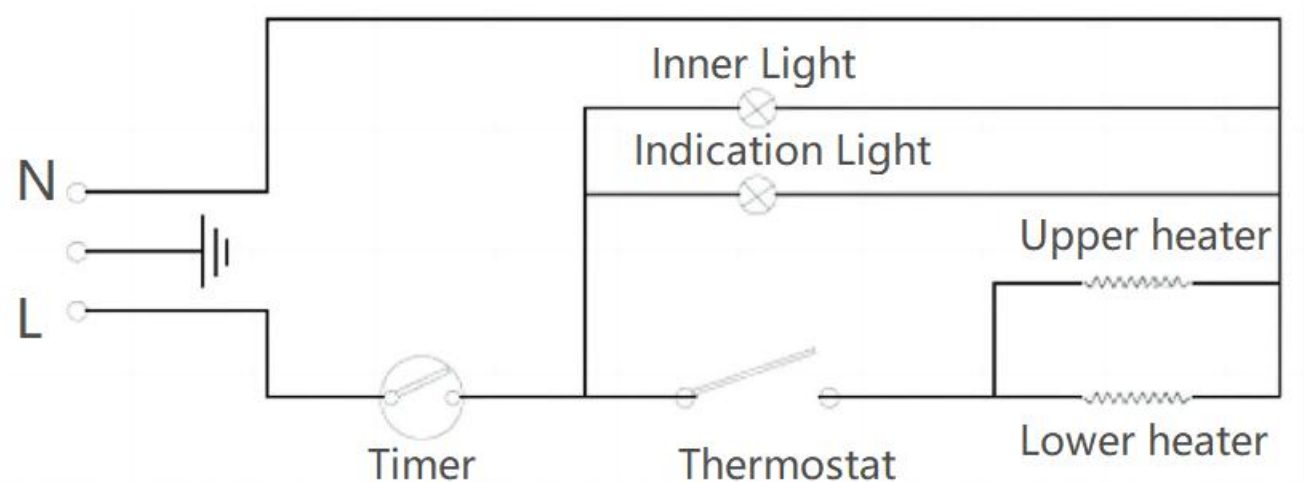 

# Cleaning Instructions

**NOTE:** To maintain cleanliness and increase life of the unit, the oven should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical components of the unit, it may cause a short circuit or electrical shock.

**Use caution while cleaning as there may be sharp edges on the exterior or inside the oven cavity.**

1. Allow unit to completely cool before cleaning.
2. Disconnect the cord from the outlet.
3. Slide out the crumb tray and remove any food debris.
4. Wipe the crumb tray with a damp cloth.
5. Return the crumb tray to its proper position.
6. Wipe the outside of the unit with a damp cloth, then wipe dry. To avoid damage, do not use abrasive cleaners or scouring pads. If soap or chemical cleaners are used, be sure they are completely wiped away immediately after cleaning. Chemical residue could damage or corrode the surface of the unit.

## **One Year Limited Warranty**

*Patriot warrants its equipment against defects in materials and workmanship, subject to the following conditions:*

*Patriot is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage. This warranty applies to the original owner only, and is not assignable.*

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at Patriot's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by Patriot, after defective unit has been inspected and defect has been confirmed. Patriot does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts that may need to be replaced due to normal usage, wear or lack of preventative maintenance.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary.

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage from improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from Patriot, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application.

**For warranty and service call 888-585-9440. Please have your model number, serial number and proof of purchase ready.**

**"THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN."**