


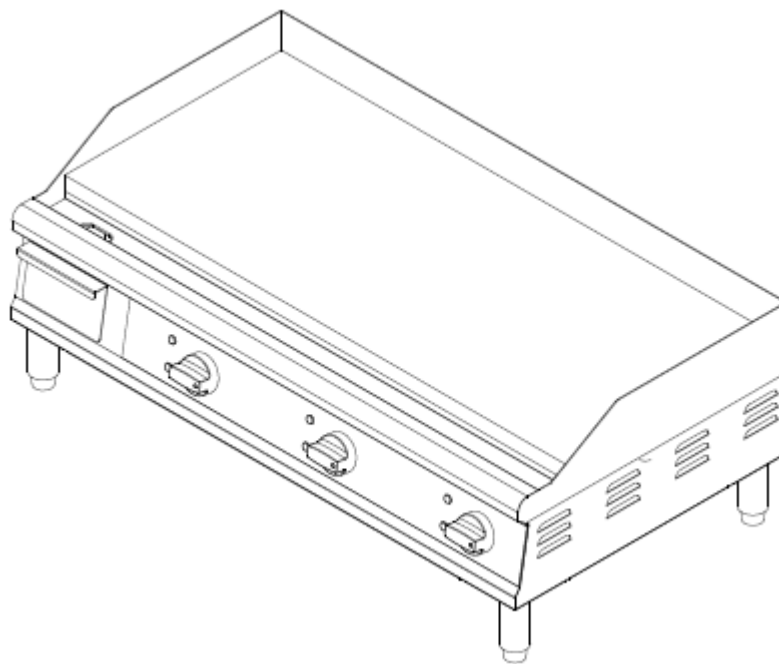

## **ELECTRIC GRIDDLE OPERATOR MANUAL**



**Intertek**  
4010483

CONFORMS TO  
NSF STD. 4

**Model Number: PA0115/PA0116/PA0117 (light duty)**  
**PA0250/PA0251/PA0252 (heavy duty)**

**Please read and keep these instructions.**

# Specifications

Model	Voltage	Power	Dimension	Temperature Range
PA0115	120V AC	1750W	15 <sup>3</sup> / <sub>4</sub> "x 19 <sup>7</sup> / <sub>8</sub> "x14"	120°F-570 °F
PA0116	208-240V AC	2675-3560W	24"x 19 <sup>7</sup> / <sub>8</sub> "x14"	120°F-570 °F
PA0117	208-240V AC	3375-4500W	30 <sup>1</sup> / <sub>2</sub> " x19 <sup>7</sup> / <sub>8</sub> "x14"	120°F-570 °F
PA0250	208-240V AC	2675-3560W	24"x 19 <sup>7</sup> / <sub>8</sub> "x14"	120°F-570 °F
PA0251	208-240V AC	7488-10080W	36"x19 <sup>7</sup> / <sub>8</sub> "x14"	120°F-570 °F
PA0252	208-240V AC	5241+5241W —7000+7000W	48"x25"x16"	120°F-570 °F

## Safety

1. Ensure that the power supply are using is adequate for continual griddle use and the voltage is correct.
2. Allow at least 8" of clearance around all sides.
3. Unplug the unit when not in use and before cleaning.
4. Do not immerse unit, cord or plug in liquid at any time.
5. Do not operate unattended.
6. Do not use this unit for anything other than its intended use.
7. Do not use outdoors.
8. Always use on a firm, dry and level surface.
9. Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner.
10. Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals.

## Instructions for First Time use

In order to protect the plates of your new grill during transportation, a layer of food-safe oil was coated on the surface prior to shipment. This oil is harmless, but must be removed before you begin to use. To remove, preheat the grill until the oil liquefies. Next, carefully wipe away the melted oil with a clean, soft cloth. Once all for the oil is removed you can begin to use your grill.

# Operation

- 1.Plug the power cord into the appropriate outlet. The red “Power” light will illuminate.
- 2.Set the desired temperature by turning the rotary temperature knob clockwise. The heating element will begin to heat up and the green “Heating” light will illuminate.
3. When the temperature reaches the desired setting, the green “Heating light will cycle on and off with the heating element to maintain the set temperature.
- 4.For the best results, allow the unit to preheat for 15 minutes before placing food on cooking surface.
- 5.Turn temperature knob to the “off” position to turn the green “Heating” light and heating element off. You must unplug the units for the red “Power light” to turn off.

# Transportation and Maintenance

During transportation, the machine should be handled with care.

# Cleaning

Unplug the unit and allow it to cool before cleaning. Do not use abrasive cleaners or scouring pads. If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleaning. Chemical residue could damage or corrode the surfaces of the unit.

## **One Year Limited Warranty**

*Patriot warrants its equipment against defects in materials and workmanship, subject to the following conditions:*

*Patriot* is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage. This warranty applies to the original owner only, and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at Patriot's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by Patriot, after defective unit has been inspected and defect has been confirmed. Patriot does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts that may need to be replaced due to normal usage, wear or lack of preventative maintenance.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary.

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage from improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from Patriot, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application.

**For warranty and service call 888-585-9440. Please have your model number, serial number and proof of purchase ready.**

**"THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN."**