



SENTINEL™



USER MANUAL

MODEL # HS-G240

**Variable Speed Commercial
Blender with Sound Enclosure**

IMPORTANT SAFEGUARDS

Read all instructions carefully before using your blender.

Following these instructions will help prevent injuries and damage to the machine and will ensure that you have the best possible experience with your new blender.

AVOID CONTACT WITH MOVING PARTS

- ALWAYS keep fingers, hands, hair and clothing away from all moving parts.
- ALWAYS keep all utensils away from the drive socket and blender jar blades during operation as utensils may damage blades or the blender jar.
- NEVER put hands into the blender jar or add substances by hand when the blender jar is on the motor base.
- NEVER touch the blade with your fingers whether it is on or off the motor base.
- NEVER place jar into the drive socket if blender motor is operating.
- DO NOT rock or remove the blender jar during operation.
- These precautions will prevent personal injury and/or damage to the blender.

NEVER OPERATE THE BLENDER IF IT APPEARS DAMAGED

If the blender malfunctions, call your service agent first. If it is dropped or damaged in any way, return the blender to a service agent immediately for examination, repair, electrical or mechanical adjustment, or possible replacement.

NEVER OPERATE THE BLENDER IN LIQUID

To protect against the risk of electrical shock do not put the motor base in water or other liquid. Do not use the blender outdoors where it is subject to precipitation.

NEVER PUT NON-FOOD ITEMS INTO JAR

Utensils, rocks, and glass are dangerous if placed in jar. Damage caused by such foreign objects will void the warranty.

NEVER OPERATE THE BLENDER WITHOUT THE LID IN PLACE

NEVER OPERATE THE BLENDER USING ATTACHMENTS NOT PROVIDED WITH THE BLENDER

The use of any unauthorized attachments may cause fire, electric shock, and/or injury and will void the warranty.

BLENDER JAR MUST BE PROPERLY IN PLACE WHILE APPLIANCE IS OPERATING

USE CAUTION WHEN BLENDING HOT LIQUIDS

Your commercial series blender has a vented lid that acts as a pressure relief to allow steam to escape. Be careful not to come in contact with any steam.

POWER CORD PRECAUTIONS

- NEVER operate with a damaged cord or plug. If the supply cord is damaged it must be replaced by the manufacturer or authorized service agent to avoid a hazard.
- DO NOT permit the cord to hang over the edge of the work surface.
- NEVER use an extension cord with the unit.
- Unplug the blender motor when not in use, before moving blender, or when cleaning.

NEVER ATTEMPT TO REPAIR THE POWER BASE

TURN THE BLENDER OFF WHEN NOT IN USE



AVOID TOUCHING THE BLENDER DRIVE SOCKET OR JAR SHAFT AFTER USE

The blender drive socket and jar shaft may become very hot after blend cycles.

SAFETY


This blender is intended to be used by trained personal only. Individuals who lack experience operating a blender need supervision during use.

NEVER OPERATE THE BLENDER WITH MORE THAN THE MARKED CAPACITY ON THE JAR

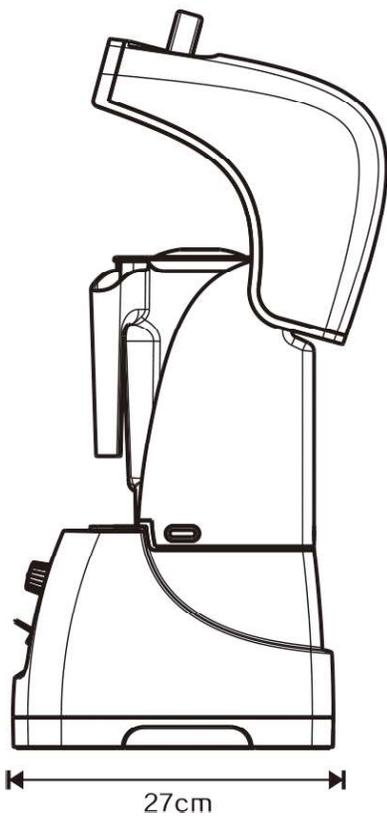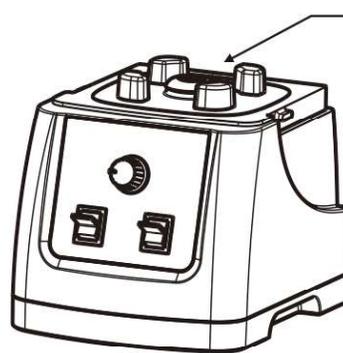

PLACEMENT ON WORK SURFACE

- Select a location that is near an electrical outlet. Consider proximity to the ingredients and patrons as well as available space.
- Place the blender on the work surface in a spot where the air intake vents on the sides and exhaust on the back of the blender are unobstructed.
- Ensure there is enough room above and around the unit to allow for unhampered movement of the sound enclosure (see Figure 1 for measurements).
- Plug the unit into an outlet with appropriate electrical protection.

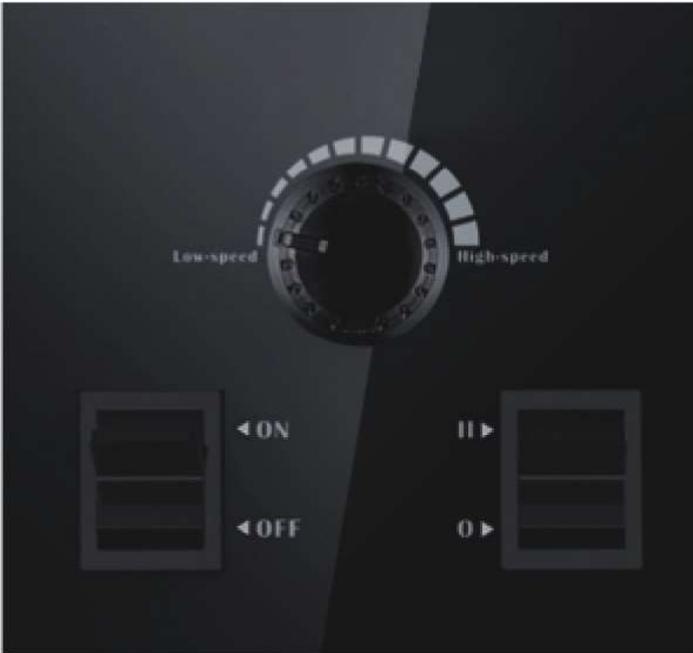

OPERATION INSTRUCTIONS

1. Press the power icon to turn on the blender.
2. Raise the sound enclosure lid.
3. Place the blender jar on the motor base, ensuring the jar is completely seated and the jar lid is secured.
4. Close the sound enclosure lid.

Speed Settings: This blender has adjustable speed settings using a dial knob. The dial knob can be used to adjust the speed from low to high during blending allowing for ultimate user control.

Pulse: This blender is also equipped with a pulse feature, which is engaged by holding down the “Pulse” button. The blender will run on high speed until the button is released. It will then return to the current speed setting.



One Year Limited Warranty

Sentinel warrants its equipment against defects in materials and workmanship, subject to the following conditions:

Sentinel is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage. This warranty applies to the original owner only, and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at Sentinel's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by Sentinel, after defective unit has been inspected and defect has been confirmed. Sentinel does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts that may need to be replaced due to normal usage, wear or lack of preventative maintenance.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary.

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage from improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from Patriot, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application.

For warranty and service call 888-585-9440. Please have your model number, serial number and proof of purchase ready.

“THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.”