


# User Manual



SENTINEL™

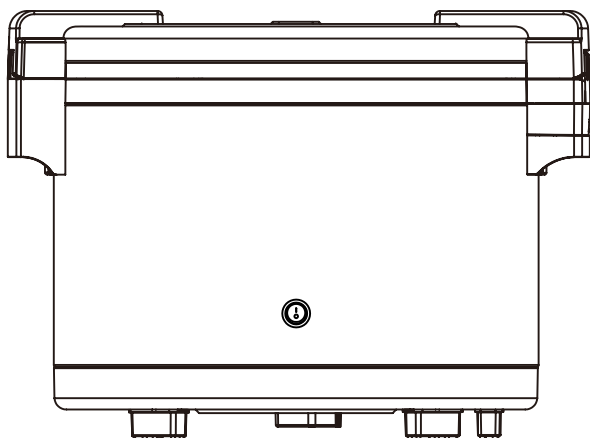

## Electric Rice Warmers

Model: SKU#PA3061 / RT-3315

SKU#PA3081 / RT-3320



Please read and save these instructions for future reference. Indoor use only.

# User Manual

## Index

Specifications .....	1
Important Safeguards .....	2
Cautions .....	3
Parts List .....	3
How to Use .....	4
Using an Extension Cord .....	4
Maintenance Guide .....	4
Cleaning .....	4

## Specifications

Model	SKU#PA3061/RT-3315	SKU#PA3081/RT-3320
Voltage	120V~/60Hz	120V~/60Hz
Capacity (Cooked)	60 Cups	92 Cups
Weight	17.26 Lbs.	19.62 Lbs.
Length	18.89"	18.89"
Width	15.94"	15.94"
Height	12.4"	13.97"

# User Manual

## Important Safeguards

1. Read all instructions carefully before using the appliance for the first time.
2. Do not touch hot surfaces. Use handles
3. To prevent electric hazards, do not immerse cord, plug, or rice warmer heating plate in water or other liquid.
4. Before plugging in power cord, ensure voltage rating of outlet is suitable for the equipment.
5. Unplug appliance from wall outlet when not in use and before cleaning. Allow appliance to cool completely before removing pot.
6. Do not operate appliance if cord has been damaged, or if appliance malfunctions.
7. Never put water or any liquid into the outer pot.
8. Never plug in the power cord without the inner pot inside the warmer.
9. Only use the inner pot provided.
10. Do not let cord hang over edge of table or counter, or allow it to touch hot surfaces.
11. Do not place appliance on or near gas or electric burner, or in heated oven.
12. Always plug cord into a wall outlet. To disconnect, remove by plug, not cord
13. Always place the unit on a flat, level surface.
14. Do not connect or disconnect the power cord with wet hands
15. Never place the unit into your refrigerator or freezer.
16. Do not use this appliance for anything other than its intended use.
17. Do not use abrasive sponges and scrubbers that could scratch surface
18. **CAUTION:** Risk of fire or burn hazard. Do not store combustible material in container. To reduce the risk of electric shock, warm rice only in removable container. Only operate this appliance with the removable container in place.
19. **WARNING:** To reduce the risk of electric shock, do not remove or open bottom cover. Refer servicing to qualified personnel.
20. Any maintenance servicing should be performed by an authorized service representative.
21. **FOR COMMERCIAL & INDOOR USE ONLY.**


# User Manual

## Cautions

1. Use only an electrical outlet with proper voltage.
2. Plug the unit directly into the electrical outlet. A short power cord is provided to reduce tripping hazards.
3. Do not dent the bottom of the inner pot as it could damage or affect warming

**NOTE:** Only use the inner pot provided. Using other brands may cause damage.

## Parts List

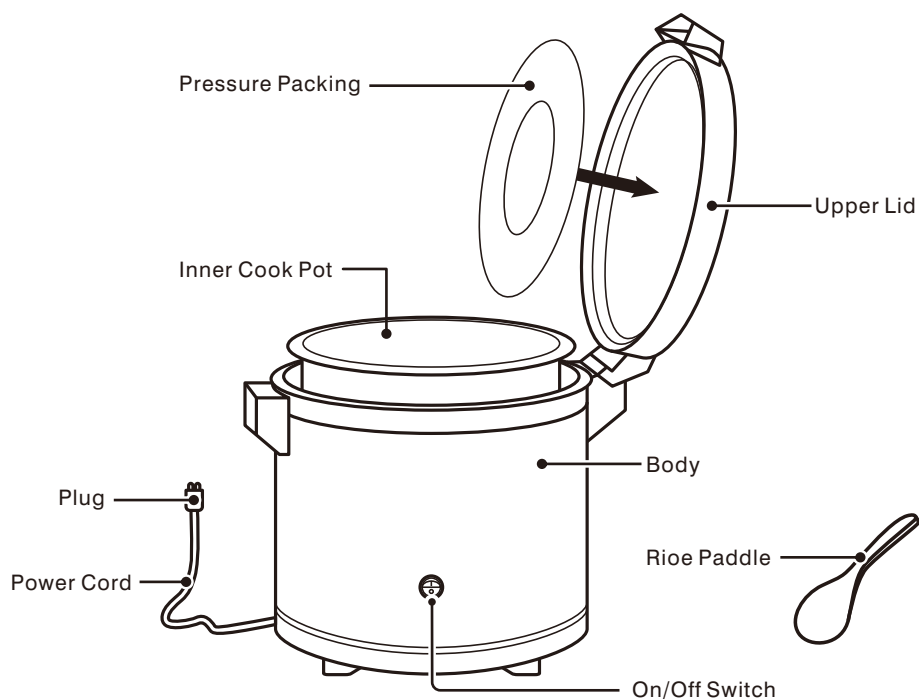

# User Manual

## How to Use

1. Plug the cord into the power outlet to turn the unit on.
2. Once the unit is warm, add cooked, warm rice to the rice warmer.
3. Close the lid and keep it sealed as much as possible, open only when necessary.
4. Stir rice before serving.
5. Do not hold rice for more than 12 hours
6. Unplug when finished using the warmer

## Using an Extension Cord

A short power cord is provided to reduce tripping hazards. Longer extension cords are available and may be used if care is exercised in their use. If an extension cord is used, please follow these instructions:

1. The marked electrical rating of the extension cord should be equal to or greater than the cooker's (15A or over).
2. Only use an extension cord that is grounded (for countries where applicable).
3. Arrange extension cord so that it does not hang from cooking surface, counter, or table.
4. Place the extension cord where it cannot be pulled on by children or tripped over accidentally.

## Maintenance Guide

1. Unplug the plug from the wall socket before cleaning. Wait until unit is cold to clean.
2. Clean the outside of the rice warmer with a damp cloth. Then clean the outside of the rice warmer with a dry cloth again.
3. Clean the inner pot with a damp cloth or sponge.

**Do not use a rough cleaning tool as it will damage the nonstick coating.**

## Cleaning

1. Disconnect plug connection from the wall before cleaning.
2. DO NOT immerse any part of the outer body into water. Wipe clean with a dish cloth.
3. To clean the warming pot, soak in hot sudsy water then gently clean the bottom of the warming pot with a dish cloth. BE CAREFUL not to press down too hard, or drop anything on the bottom of the warming pot, as this can cause warping and inhibit the proper functioning of the rice cooker.
4. Wipe the warmer body and warmer pot dry before storing

# User Manual



## One Year Limited Warranty

Sentinel warrants its equipment against defects in materials and workmanship, subject to the following conditions:

Sentinel is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage. This warranty applies to the original owner only, and is not assignable.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at Sentinel's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by Sentinel, after defective unit has been inspected and defect has been confirmed. Sentinel does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts that may need to be replaced due to normal usage, wear or lack of preventative maintenance.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary.

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage from improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from Patriot, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only and this warranty is void if equipment is used in other than a commercial application.

**For warranty and service call 888-585-9440. Please have your model number, serial number and proof of purchase ready.**

"THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN."



