




CHEST FREEZER USER MANUAL

**Models: BCF-155, BCF-205, BCF-350, BCF-450
BCF-550, BCF-650, BCF-700D, BCF-900D**

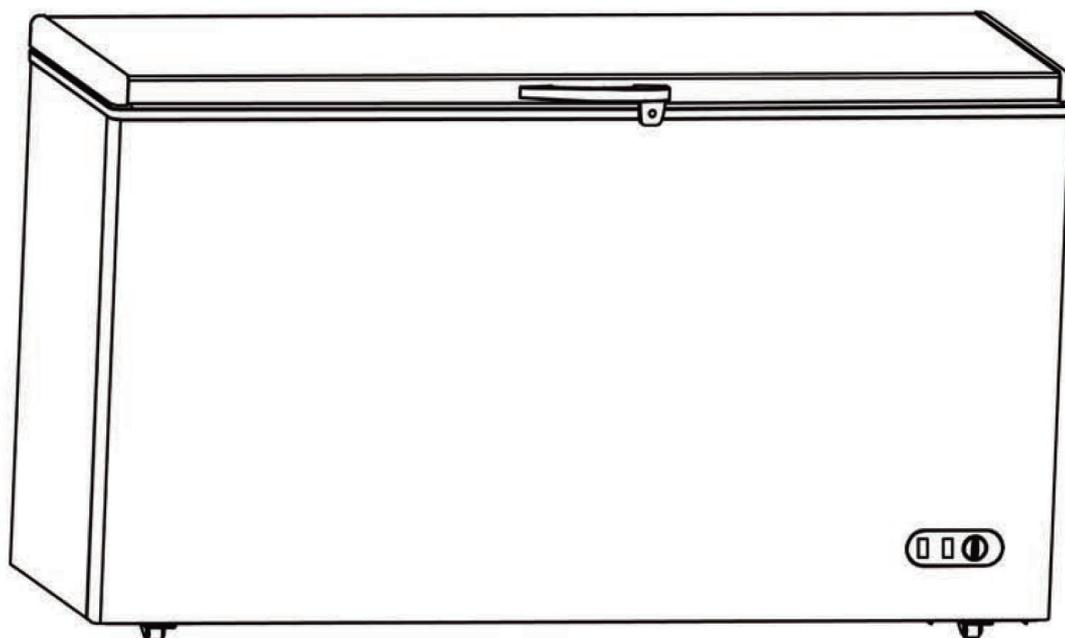

Please read this manual thoroughly prior to equipment setup, operation and maintenance.

Table of Contents

BEFORE USING YOUR APPLIANCE	2
Safety Instructions.....	2
Warnings.....	2
Installation.....	3
OPERATING YOUR APPLIANCE	4
Parts of the Appliance	4
Installation of latch hook	5
Installation for handle	6
Temperature Adjustment/Operation.....	7
Food Storage in the Appliance	7
DEFROSTING AND CLEANING	8
Defrosting and Cleaning.....	8
TROUBLE SHOOTING AND TECHNICAL DATA	8
Trouble Shooting	8
Trouble Shooting guide	9
WARRANTY	10-11

Before Using Your Appliance

Safety Instructions

- After installation make sure that the power cord is not trapped underneath appliance. **Please read this manual thoroughly before installing and turning the appliance on. The manufacturer accepts no responsibility for incorrect installation and use.**
- If this appliance is to replace an old one equipped with a lock, remove the lock as a safety measure to avoid children becoming trapped inside.
- Do not damage the refrigerant circuit. In the event that the refrigerant circuit is damaged, avoid open flames or ignition sources and ventilate the room in which the unit is placed.
- Do not allow children to play with the appliance. Children must never sit inside or hang from the door.
- Do not plug this appliance into an outlet with an extension cord.
- Do not use old or damaged power cords.
- Do not twist, bend or trap the cord. Cords should also be kept clear of heat sources.
- When plugging in the appliance, always make sure that your hands are dry.
- Your old appliances contains insulation, gases and refrigerant that must be disposed of properly. Please contact your local authority for information about recycling.

Warnings


- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not defrost the appliance with other electrical devices (i.e. hair dryer) or any artificial means and do not use sharp metal objects to remove the ice on the freezer, as this could cause damage to the refrigerant system.
- Do not operate any electrical appliances inside the freezer.
- **WARNING:** Do not place bottles (glass or plastic) containing liquids (especially effervescent liquids) into the freezer as they could cause the bottle to burst during freezing.
- **WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not touch the cooling surfaces while the appliance operates, especially with wet hands, because the skin may stick to cold surfaces.
- Do not eat ice which has just been removed from the freezer as this can cause freezer burns to the hands and tongue.

Installation

- Install and level the appliance on a solid floor able to support the weight and is in a place that is suitable for its size and use.
- Insert the plug into a socket which is appropriate. This appliance has a plug already fitted – if the plug is not suitable for your socket we suggest that you call an authorized electrician for assistance. If the plug is damaged in any way – do not attempt to use it. It must be replaced with a new plug.
- Do not install the appliance in direct sunlight and close to heat sources. Do not allow the appliance to be exposed to rain, for indoor use only.
- Choose a well ventilated area. There should be at least 4" of open space along the sides, top, and back of the freezer.
- Before switching on place the appliance in an upright position and wait at least three hours without moving the appliance. This will give the refrigerant circuit time to settle and operate efficiently.
- Install the appliance in a dry and well-ventilated place. The appliance is for use in places within the temperature ranges defined according to the climatic class given on the Data Label located on the back of the product. The appliance may not operate consistently if it is installed for extended periods of time below the cold end of the climate class temperature range for which the appliance is designed.
- If the appliance is installed next to another refrigerator or freezer, observe the minimum distance of 4" to avoid condensation.
- **The manufacturer is not responsible for failure to complete installation as described in this guide.**

Operating Your Appliance

Parts of the Appliance

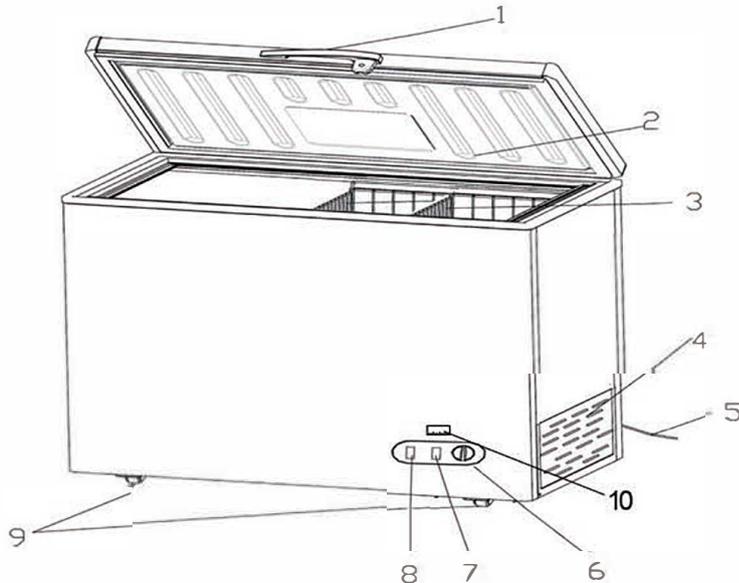

1. HANDLE
2. DOOR
3. BASKET
4. GRILL
5. POWER CORD
6. KNOB
7. COMPRESSOR OPERATED LIGHT
8. POWER LIGHT
9. WHEEL
10. TEMPERATURE DISPLAY


The function of the panel:

- Your freezer has one control for regulating the temperature. The temperature control is located on the lower right hand corner.
- The first time you turn the unit on, turn the temperature control knob in a clockwise direction to the maximum setting "7" and run for at least 2 hours before putting frozen foods inside. This will ensure the cabinet is thoroughly chilled before food is put in.
- The range of the temperature control is from position "1" the warmest to "7" the coldest. Adjust the temperature control to the setting that best suits your needs. The setting of "4" should be correct for most situations.
- To turn the freezer off, turn the temperature control to "0"
- Red light: Power off



NOTE:

- Turning the temperature control to "0" position stops the cooling cycle but does not shut off the power to the freezer.
- If the unit is unplugged, lost power, or turned off; you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the freezer will not start.
- Large amounts of food will lower the cooling efficiency of the appliance.
- If you choose to change the thermostat setting, adjust thermostat control by one numerical increment at a time. Allow several hours for temperature to stabilize between adjustments.



Installation of latch hook

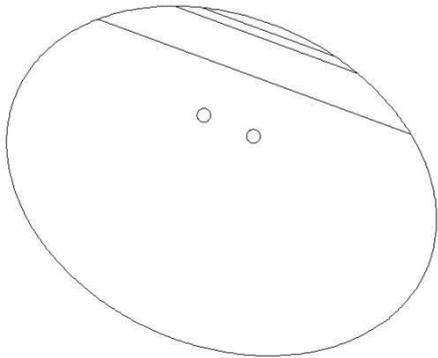

 1. Take off the tape covering the holes.

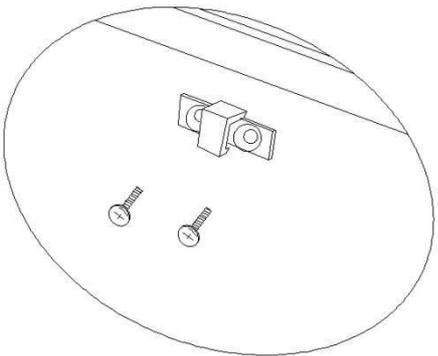


2. Attach the latch hook by lining it up with the holes and attaching it with two screws.

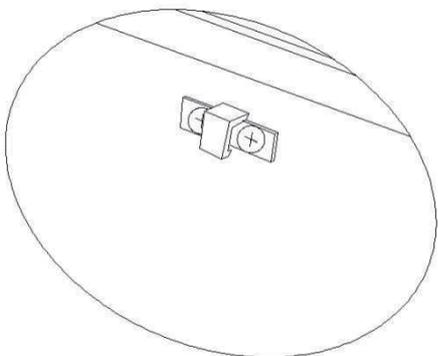 


3. Installation of latch hook is finished.


Installation for handle

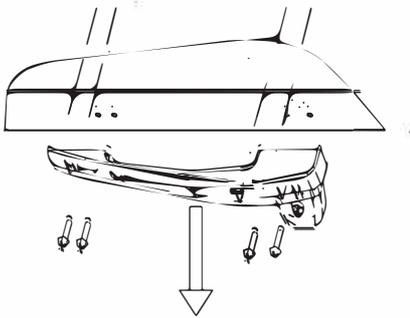


Step 1: Attach the handle on the door with four screws.

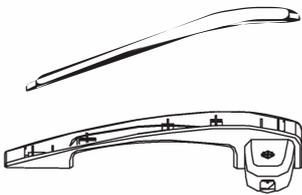


Step 2: Insert the one side of handle cover into the handle pedestal.

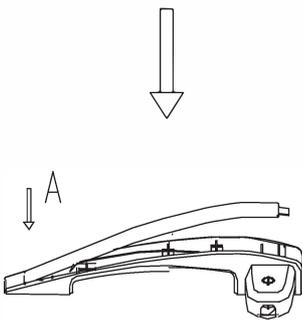

Step 3: Insert the other side of handle cover into the handle pedestal.

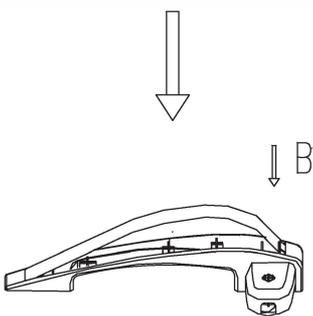

Step 4: Press the cover into the handle pedestal.

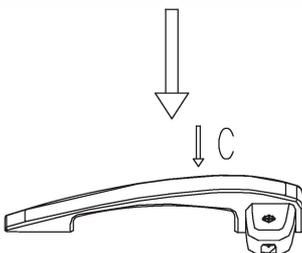

Temperature Adjustment/Operation

- The appliance temperature can be adjusted by turning the thermostat on the Control Panel.
- The thermostat should be adjusted according to different environment temperature and the quantity of food being stored by adjusting the knob of the thermostat. The knob rotates clockwise from "1" to "7". The setting should be reduced down in summer (counter-clockwise rotation) and up in winter (clockwise rotation). The thermostat is set to a certain point before leaving the factory, this is the optimum setting for the product.
- If a large amount of fresh food is placed in the appliance for freezing the thermostat should be turned up for a period of 4-6 hours, after this period it should be returned to its initial setting.
- The green lamp is a power indicating lamp. When the power is on, the lamp will be on.
- Once power is cut off, wait for at least 5 minutes before plugging in again to avoid damaging the compressor or the system.

Food Storage in the Appliance

This freezer is a 4 star rated () appliance.

- The use of a freezer is for freezing fresh food and storing frozen food for long periods of time.
- Do not put fresh or warm food with frozen food side by side as it can thaw the frozen food.
- While freezing fresh food (i.e. meat, fish etc) divide them into smaller portions, this will allow you to defrost only the food you need.
- **For storing frozen food;** the instructions shown on frozen food packages should always be followed carefully, if no information is provided food should not be stored for more than 3 months from the purchased date.
- **When buying frozen food;** ensure that these have been frozen at suitable temperatures and that the packing is intact.
- Frozen food should be transported in appropriate containers to maintain the quality of the food and should be placed into the freezer as soon as possible.
- If a package of frozen food shows signs of humidity and abnormal swelling it is probable that it has been previously stored at an unsuitable temperature and that the contents have deteriorated. Do not use this food, dispose of it as soon as possible.
- The storage life of frozen food depends on the room temperature, thermostat setting, how often the door is opened, the type of food and the length of time required to transport the product from the shop to your home. Always follow the instructions printed on the package and never exceed the maximum storage life indicated.

Defrosting and Cleaning

- Defrost twice a year or when a frost layer of around 7 mm (1/4") has formed. To start defrosting procedure switch off the freezer and pull out the plug.
- All food should be wrapped in several layers of newspaper and stored in a cool place.
- Containers full of warm water may be placed carefully in the freezer to speed up the defrosting.
- Do not use pointed or sharp edged objects such as knives, forks to remove the frost.
- Never use hairdryers, electrical heaters and other similar electrical appliances for defrosting.
- When defrosting has finished, sponge out any defrost water which collects at the bottom of the freezer and dry the interior thoroughly.
- You can wipe the inner and outer sides with a soft cloth or a sponge using warm and soapy water.
- Do not wash your freezer by pouring water into it.
- Never use flammable, explosive or corrosive material like thinner, gas, acid for cleaning.
- Make sure that your freezer remains unplugged while cleaning.
- Once defrosting/cleaning has been completed, plug in the appliance and return to its temperature setting.

Trouble Shooting

The following problems are not causes of breakdown:

Problems	Causes and resolutions
There is a sound of liquid flowing in the freezer	It is the sound of refrigerant flowing in the circulating pipeline of the refrigerating system, this is normal
Too noisy	The freezer is not installed in a level ground, change the position
The refrigeration system does not work for a long time but the inside temperature is very low	It is an indicator of good insulation and low cooling retention, this is normal.

Trouble Shooting Guide

Trouble	Possibilities		Cheek up	Solutions	Remarks
Compressor does not work	Power is off	The fuse is broken	Check the fuse	Replace the fuse	If it is necessary please contact after-sales service for repair
		The connection between plug and socket is not good	Check the socket	Repair or replace the socket	
		The circuit of input and output is out of use	Make sure that the power is on	Check the circuit with electric instrument	
	The thermostat knob is not in the proper position		Check the thermostat	Rotate the thermostat to the proper position	Ask for professional help
Compressor keeps on working	The temperature inside is too high	Frost on the evaporator is too thick	Check whether the frost is thicker than 1/4"	Defrost regularly	
		The door is being opened too frequently		Reduce the times of opening	
		Too much food has been stored at once		Take out some of the food	
	The temperature inside is OK	The ambient temperature is too high while the thermostat indicates a small number	Make sure whether the knob is indicating at the "5-6"	Adjust the thermostat knob	The thermostat knob on "2-4" is better (or proper)
		The thermostat does not work		Replace the thermostat	Ask for after-sales service
	Too noisy	The floor is not level		Make sure that the freezer is level	Put pad under the casters.
The screw in fan or condenser is loose		The screw is loose	Rotate the fixed screw		
The refrigerating circuits touch each other			Separate them		



Berg Chest Freezer Warranty

1 Year Limited Replacement Warranty - Valid Only in the Continental United States for Berg Chest Freezers Only

Berg Chest Freezer, warrants to the original purchaser of new, qualified Berg Chest Freezers, that such equipment will be free from defects in materials and workmanship for a period of 1 year from the date of delivery. A copy of the original receipt or other proof of purchase must be submitted and verified to obtain warranty coverage. This warranty applies to the original owner only and is not assignable.

If a Berg Chest Freezer is found to be defective during this period, Berg Chest Freezers will repair the defective unit, replace any defective parts, or replace the defective unit.

Exclusions

The warranty described herein does not cover the following:

- 1) The original serial number has been removed, altered or cannot be readily determined on the Berg Chest Freezer
- 2) Normal wear and tear and gradual deterioration on the Berg Chest Freezer.
- 3) When the Berg Chest Freezer has been transferred from an original owner to another party.
- 4) When the Berg Chest Freezer has been moved outside of the continental United States.
- 5) Rust on the interior or exterior of the Berg Chest Freezer.
- 6) When a Berg Chest Freezer is purchased "as is."
- 7) When the Berg Chest Freezer is defective, but the defect does not involve malfunction or defects in materials or workmanship.
- 8) When the Berg Chest Freezer is used in way that is not in accordance with provided instructions and intended purpose.
- 9) When the Berg Chest Freezer is installed in places other than recommended locations, including, but not limited to, outside, open air venues, and residential locations.
- 10) Expenses for making the defective Berg Chest Freezer available for removal or accessible for the replacement Berg Chest Freezer, such as removing shelves, etc.
- 11) Common wear and tear items, including, but not limited to, light bulbs, air filters, water filters, knobs, handles, gaskets, power cords, and other cosmetic parts.
- 12) Damages to the finish of the Berg Chest Freezer that occur during installation.
- 13) When the Berg Chest Freezer has been repaired, modified or altered by the owner or a third party.

- 14) Damage to the Berg Chest Freezer as a result of misuse, abuse, neglect, accidents, fire, flooding, or acts of God.
- 15) Damage to the Berg Chest Freezer relating to improper utility connection or supply and problems due to improper ventilations.
- 16) Damage to the contents being stored in the malfunctioning Berg Chest Freezer.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTY, WRITTEN OR ORAL EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

The agents, employees, distributors, and dealers of Berg Chest Freezers are not authorized to make modifications to this warranty or to make additional warranties that are binding on Berg Chest Freezers. Accordingly, statements by such individuals, whether oral or written, do not constitute warranties and should not be relied upon.

THE BUYER'S REMEDY AGAINST BERG CHEST FREEZERS, FOR THE BREACH OF ANY OBLIGATION ARISING OUT OF THE SALE OF A BERG CHEST FREEZER, WHETHER DERIVED FROM WARRANTY OR OTHERWISE, SHALL BE LIMITED TO REPLACEMENT OF THE BERG CHEST FREEZER.

In no event shall Berg Chest Freezers be liable for any other damage or loss, including, but not limited to, lost profits, lost sales, loss of use of equipment, claims of Buyer's customers, cost of interruption or down time, cost of substitute equipment, facilities, or services, or any other special, incidental, or consequential damages.

To Obtain Warranty Service, call 888-585-9440