

# PFA SERIES OWNER'S MANUAL



**Be sure ALL operators read, understand and have access to this manual at all times.**

ADDRESS: 42 Allen Martin Drive, Essex Junction, VT 05452  
PHONE: 802-658-6600  
FAX: 802-864-0183  
GENERAL INFORMATION: [profits@perfectfry.com](mailto:profits@perfectfry.com)  
CUSTOMER SUPPORT: [service@perfectfry.com](mailto:service@perfectfry.com)  
WEB: [www.perfectfry.com](http://www.perfectfry.com)



[Grab your reader's attention with a great quote from the document or use this space to emphasize a key point. To place this text box anywhere on the page, just drag it.]

# TABLE OF CONTENTS

<b>THANK YOU FOR PURCHASING A PERFECT FRYER!</b>	<b>1</b>
WARRANTY REGISTRATION	1
FRYER ACTIVATION	1
<b>OWNERS RESPONSIBILITIES</b>	<b>2</b>
<b>REGULATIONS &amp; RECYCLING</b>	<b>3</b>
<b>SAFETY FIRST</b>	<b>4</b>
<b>INSTALLATION</b>	<b>5</b>
ELECTRICAL POWER SUPPLY (NORTH AMERICAN MODELS)	5
ELECTRICAL SPECIFICATIONS (NORTH AMERICAN MODELS)	5
ELECTRICAL POWER SUPPLY (INTERNATIONAL MODELS)	6
ELECTRICAL SPECIFICATIONS (INTERNATIONAL MODELS)	6
ACCESSORY OUTLETS (NORTH AMERICAN MODELS)	7
PREPARE COUNTER-TOP AREA	8
UNPACK	8
<b>ASSEMBLY</b>	<b>11</b>
<b>COOKING</b>	<b>17</b>
<b>CLEANING</b>	<b>18</b>
DAILY MAINTENANCE	18
WEEKLY MAINTENANCE	18
PERIODIC MAINTENANCE	20
<b>TIPS ON DEEP FRYING</b>	<b>21</b>
<b>OIL FACTS</b>	<b>22</b>
<b>OPERATING INSTRUCTIONS</b>	<b>25</b>
STARTING UP	26
MANUAL MODE	26
PRESET TIMES	27
PRESET MODE	27
PRESET LOCKED MODE	28
RAPIDFRY™ MODE	28
RAPIDFRY™ 2GO	29
DUAL LOAD	30
COOKING TIME CORRECTION	31
OPEN DRAWER LID – PAUSED COOK CYCLE	31
STANDBY MODE	32
SHUTTING DOWN	32
<b>USER DEFINED OPTIONS</b>	<b>33</b>
BACKGROUND MENU - ACCESSING	34
CTS™ (COOK TIME SENSITIVITY)	34
BACKGROUND MENU - MAP	34
OPTION CHANGES	39
CUSTOMIZING PRESETS	40
CUSTOMIZING PRESETS ON THE FRONT LABEL	41
<b>HELP</b>	<b>42</b>
SYSTEM ERROR CONDITIONS	42
TROUBLE-SHOOTING TABLE	44
<b>PFS AUTOMATIC EXTINGUISHER</b>	<b>45</b>
<b>DECLARATION OF CONFORMITY</b>	<b>477</b>
<b>ORIGINAL STANDARD EQUIPMENT LIMITED WARRANTY</b>	<b>488</b>

# Thank You for Purchasing a Perfect Fryer!

## Warranty Registration

To ensure that you receive the highest quality service & support;

- 1) Simply fill out the online warranty registration form anytime at [www.perfectfry.com](http://www.perfectfry.com) and automatically receive your warranty activation code.

**OR**

- 2) Fill out the enclosed warranty registration form and mail or fax it to Perfect Fry Company then phone Toll Free 603-225-6684 (Monday-Friday 8:00-5:00 EST) to receive your warranty activation code.

## Fryer Activation


### SEE THIS LCD

THANK YOU FOR  
PURCHASING A PERFECT  
FRYER SN# XXXXX  
  
CALL OR GO ONLINE  
ENTER WARRANTY CODE  
AND PRESS START:  
▶\*\*\*\*\*

### DO THIS

- 1) Enter your warranty activation code
- 2) Press **Start**
- 3) Your Perfect Fryer is now permanently activated

### GET THIS LCD

HEATING  
 **70°F**

**For temporary access, enter 123456 then press **Start**.**  
**Temporary access is valid for 90 entries.**

Now that you have registered and activated your fryer;

- Take comfort in knowing that the management and staff at Perfect Fry Company are dedicated to ensure that you, the owner and operator of a Perfect Fryer, receive a top quality product that is thoroughly inspected and tested prior to shipment.
- Take comfort in knowing that our local Authorized Service and Parts Distribution (ASAPD) network is committed to supplying your service and warranty needs. Each ASAPD has dedicated service staff that is able to answer any questions you may have regarding the operation of your Perfect Fryer. We also have an online knowledgebase available 24/7/365 at [perfectfry.com](http://perfectfry.com) with many great tips and solutions.

# OWNERS RESPONSIBILITIES






## It is the owner's responsibility to:

- Insure the PERFECT FRYER is properly maintained.
- Allow only properly trained personnel to operate, clean and maintain a PERFECT FRYER.
- Contact local authorities having jurisdiction to insure that the installation conforms to all local fire, building and health regulations.
- Schedule and maintain documentation that the appropriate inspection and maintenance of the PFS Automatic Extinguisher has been completed.
- Insure that the model ready for installation matches the supply voltage.
- Insure that the main power supply is disconnected before the PERFECT FRYER is serviced.
- Insure that all safety devices are intact.
- Insure that a proper surface is provided for the PERFECT FRYER to sit on.
- Insure that proper clearances are kept.
- Operate and store the PERFECT FRYER above 32°F (0°C).
- Return the PERFECT FRYER for recycling when it reaches end of life.


# REGULATIONS & RECYCLING

Installation of your PERFECT FRYER must conform to all local fire and health regulations and building codes. The installation use and maintenance is to be in accordance with the Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations, NFPA 96 - 2004.

The table below describes the standards that your PERFECT FRYER has been tested to and the corresponding listing marks depending on your region.

STANDARD	DESCRIPTION	LISTING MARK
UL 197 UL 197 SB (UL 710B)	Commercial electric cooking appliances. Commercial electric cooking appliances with recirculating systems.  UL 197 & UL 197 SB supplement also reference the following standards which your PERFECT FRYER meets applicable parts thereof: <ul style="list-style-type: none"> <li>• UL 1046: Grease Filters for Exhaust Ducts.</li> <li>• UL 300: Fire Testing of Fire Extinguishing Systems for Protection of Restaurant Cooking Areas.</li> <li>• NFPA 17A: Wet Chemical Extinguishing Systems.</li> <li>• NFPA 96: Standard for Ventilation Control and Fire Protection of Commercial Cooking Operations.</li> <li>• EPA 202: Determination of Condensable Particulate Emissions for Stationary Sources.</li> </ul>	
CSA 22.2 No. 109-M1981	Commercial Cooking Appliances forming part of Canadian Electrical Code, Part 2 Safety Standards for Electrical Equipment.	
NSF 4	Commercial Cooking, Rethermalization, and Powered Hot Food Holding and Transport Equipment.	 
EN60335-1	Safety of Household and Similar Electrical Appliances Part 1. General Requirements Amendment 8913 - October 1995 Amendment 9475 - May 1997	 
EN60335-2-37	Safety of Household and Similar Electrical Appliances Part 2. Commercial Electric Deep Fat Fryers	
EN61000-6-1 EN61000-6-3	Electromagnetic Compatibility (EMC) – Emissions & Immunity for Light Industrial Environments	

The table below describes the recycling procedures for your PERFECT FRYER.

WEEE (Waste Electrical & Electronic Equipment) 2002/96/EC	When your PERFECT FRYER has reached end of life, please deliver the fryer to your local distributor. They will prepare and deliver the fryer for recycling to the WEEE collection system in your country. Most of the fryer's materials can be recycled.  DO NOT DISPOSE OF THE FRYER IN MUNICIPAL WASTE!	
---	---	---

# SAFETY FIRST



## LIFTING & MOVING:

- Your PERFECT FRYER's gross shipping weight is 125 lb. (57 kg). Net weight = 110 lb. (50 kg). **DO NOT LIFT THE FRYER BY YOURSELF. ALWAYS REMOVE OIL BEFORE MOVING FRYER.**

## DEEP FRYING:

- Cooking oil is very hot ~350°F (177°C). Hot oil can cause severe burns. **DO NOT TOUCH THE COOKING OIL UNLESS YOU ARE SURE IT HAS COOLED.**

## HEATER MODULE:

- DO NOT DROP
- DO NOT IMMERSE IN WATER

## CLEANING:

- **DO NOT OPEN DRAWER LID OR FRONT PANEL WHEN PRODUCT IS LOADING**
- Before cleaning fryer or removing oil, let fryer cool to 122°F (50°C). **DO NOT TOUCH HEATER MODULE, VAT OR OIL UNLESS YOU ARE SURE IT HAS COOLED.**
- Lubricate rails of shovel and bottom of drawer using an approved food grade grease or silicone lubricant

## COOKING OIL MAINTENANCE:

- For sanitation and safety, we recommend that the cooking oil is replaced once a week, more often for higher volume usage. Use a commercial grade deep-fryer formulated cooking oil. OLD OIL HAS A REDUCED FLASHPOINT. OLD OIL AND OVER-WET FOOD ARE PRONE TO SURGE BOILING.

## SERVICING:

- DISCONNECT THE POWER SOURCE BEFORE SERVICING THE FRYER. There is no need to unplug your PERFECT FRYER for normal cleaning or maintenance.

## STORAGE:

- Do not store your PERFECT FRYER below 32°F (0°C)
- Intended for indoor use only

# INSTALLATION

## Electrical Power Supply (North American Models)

- Your PERFECT FRYER must be connected to a dedicated electrical circuit that meets your fryer's requirements (see table below).

**⚠ CAUTION** Improper Installation may damage the fryer and void your warranty

- If your PERFECT FRYER's plug does not fit your wall outlet receptacle, have an electrician install the appropriate NEMA receptacle within 4 feet of the fryer.
- See the manufacturer's label on your PERFECT FRYER for the electrical Model No. PFAXXX, then check off your Model Number.
- Your PERFECT FRYER is equipped with a heat lamp outlet for an optional PFW heat lamp rated at 500W (240V/2A).

## Electrical Specifications (North American Models)

PERFECT FRY MODEL	VOLTS	AMPS	CIRCUIT AMPS	WATTS	NEMA NUMBER	NEMA RECEPTACLE
↓ Put a check mark <input checked="" type="checkbox"/> in the box beside the Model Number of your PERFECT FRYER.						
<input type="checkbox"/> PFA720	240	<b>32.0</b> Fryer 30 Acc. 2	<b>Minimum 40</b>	<b>7600</b> Fryer 7200 Acc. 400		For use on an individual branch circuit rated 40A minimum. For supply connectors, use minimum no. 8 AWG wire (40A rated). This fryer must be properly connected to a grounded, dedicated 240 VAC single phase circuit according to local installation standards and codes.
<input type="checkbox"/> PFA570	240	<b>26.0</b> Fryer 24 Acc. 2	<b>Minimum 30</b>	<b>6100</b> Fryer 5700 Acc. 400		For use on an individual branch circuit rated 40A minimum. For supply connectors, use minimum no. 8 AWG wire (40A rated). This fryer must be properly connected to a grounded, dedicated 240 VAC single phase circuit according to local installation standards and codes.
<input type="checkbox"/> PFA570	208	<b>28.5</b> Fryer 27 Acc. 1.5	<b>Minimum 30</b>	<b>6000</b> Fryer 5700 Acc. 300		For use on an individual branch circuit rated 40A minimum. For supply connectors, use minimum no. 8 AWG wire (40A rated). This fryer must be properly connected to a grounded, dedicated 208 VAC single phase circuit according to local installation standards and codes.
<input type="checkbox"/> PFA375	240	<b>18.0</b> Fryer 16 Acc. 2	<b>20</b>	<b>4150</b> Fryer 3750 Acc. 400		For use on an individual branch circuit rated 30A minimum. For supply connectors, use minimum no. 10 AWG wire (30A rated). This fryer must be properly connected to a grounded, dedicated 240 VAC single phase circuit according to local installation standards and codes.
All models are single phase; 50/60 hertz.						

## Electrical Power Supply (International Models)

- Your PERFECT FRYER must be connected to a dedicated electrical circuit that meets your fryer's requirements (see table below).

**⚠ CAUTION** **Improper Installation may damage the fryer and void your warranty**

- If your PERFECT FRYER's plug does not fit your wall outlet receptacle, have an electrician install the appropriate receptacle within 1.25 meters of the fryer.
- See the manufacturer's label on your PERFECT FRYER for the electrical Model No. PFAXXXX, then check off your Model Number.
- Heat lamp requires a standard 240 VAC receptacle located within 1.5 meters of the fryer.

## Electrical Specifications (International Models)

PERFECT FRY MODEL	VOLTS	AMPS	CIRCUIT AMPS	WATTS
↓ Put a check mark <input checked="" type="checkbox"/> in the box beside the Model Number of your PERFECT FRYER.				
<input type="checkbox"/> PFA720	240	30.0	Minimum 30	7200
<input type="checkbox"/> PFA570	240	24.0	Minimum 30	5700
<input type="checkbox"/> PFA375	240	16.0	20	3750



## INSTALLATION (Continued)

### Accessory Outlets (North American Models)

Your PERFECT FRYER is equipped with 1 heat lamp outlet (North American models only) that can accept a Perfect Fry approved heat lamp only. The front heat lamp for the PFA is rated at 500W (240V/2A).


**CAUTION** Disconnect the fryer from the electrical supply before attempting the installation of any Perfect Fry heat lamp. The heat lamp is for use only on Perfect Fry equipment equipped and marked with a heat lamp outlet.

A front panel mount switch controls the power to the heat lamp.

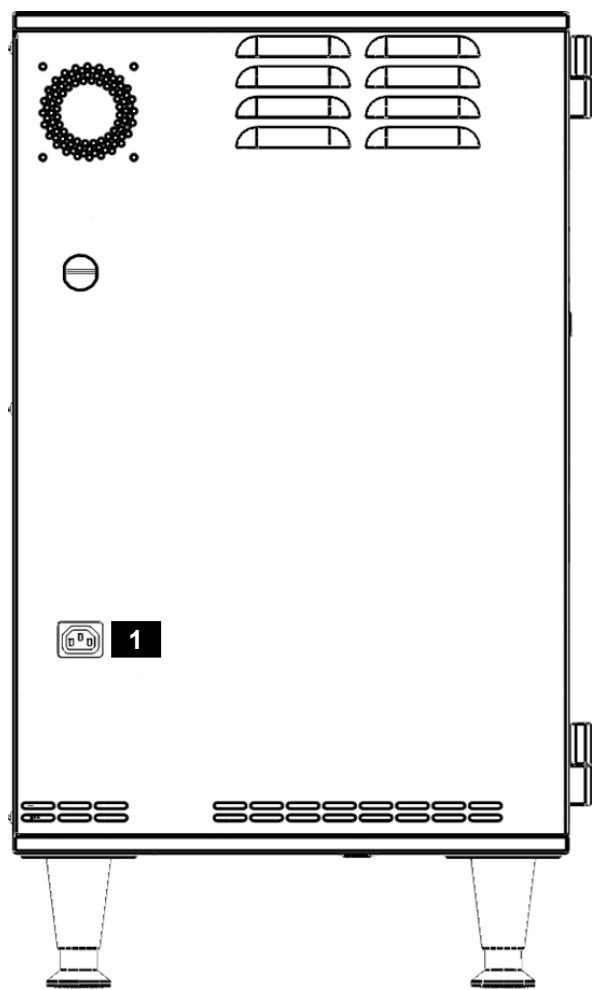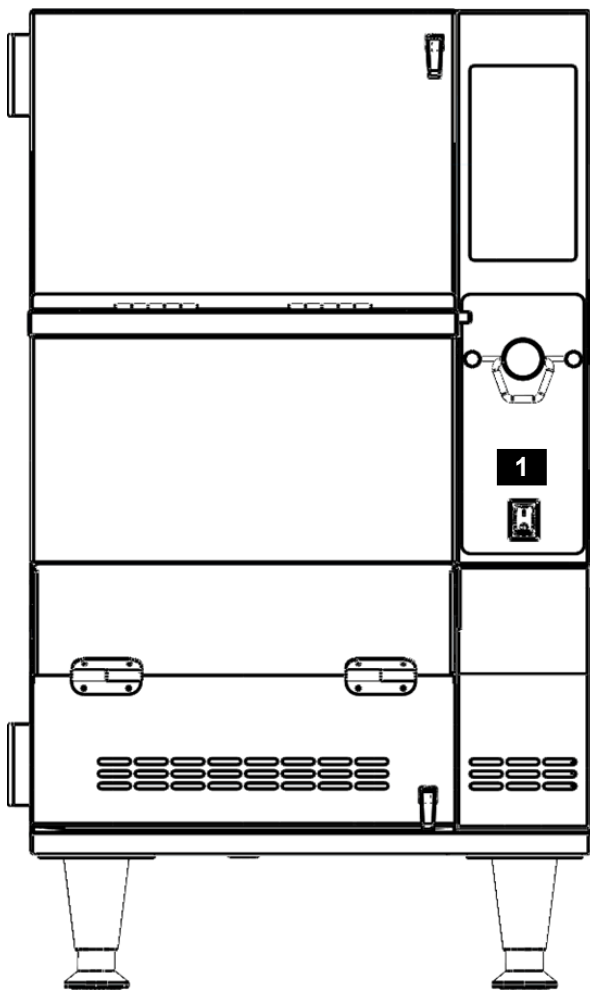


## INSTALLATION (Continued)

### Prepare Counter-top Area

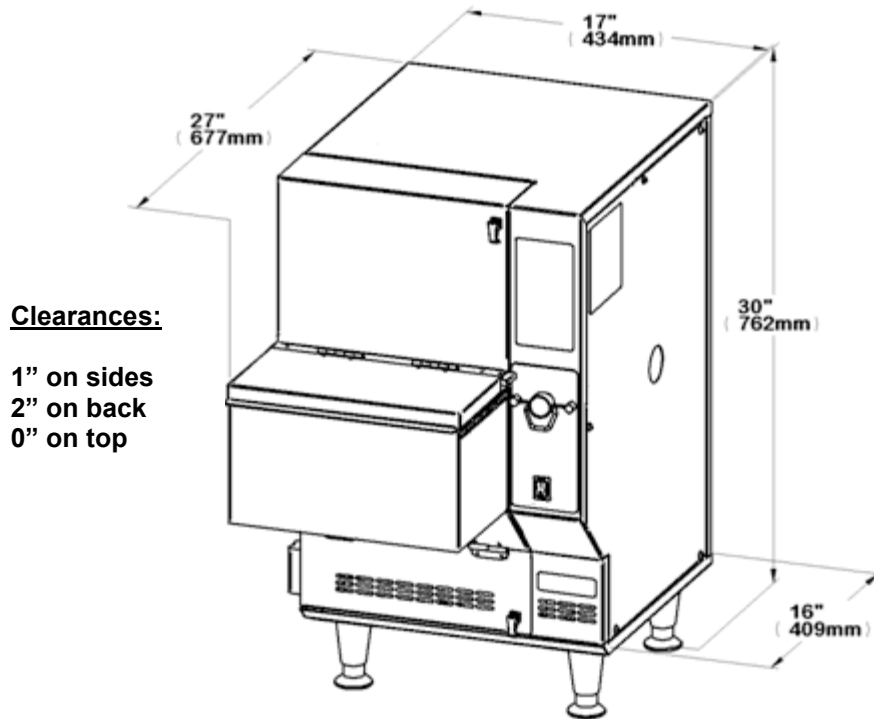

### Unpack








- 1) Cut straps on shipping box
- 2) Remove box top and body
- 3) Remove outer plastic wrapping and keep box along with foam corners and sides

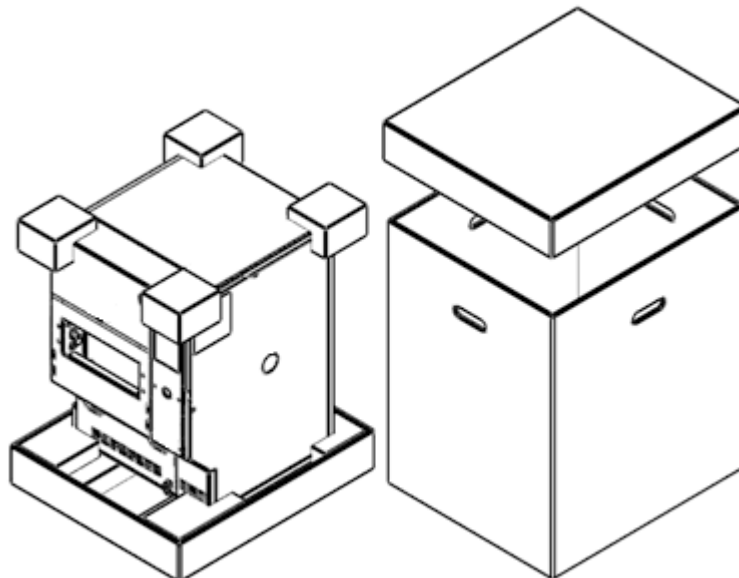


4) Remove all foam stuffing and parts

5) Put check mark ☒ in box once the part is removed


- ☐ **1** Air Filter Cage
- ☐ **2** Air Filter Cartridge
- ☐ **3** Grease Filter
- ☐ **4** Grease Filter Tray
- ☐ **5** Basket
- ☐ **6** Heater Module
- ☐ **7** Oil Vat
- ☐ **8** Oil Spill Tray
- ☐ **9** Oil Hose
- ☐ **10** Leg (x4)
- ☐ **11** Front Panel
- ☐ **12** Shovel
- ☐ **13** Drawer Cover
- ☐ **14** Drawer Sleeve
- ☐ **15** Drawer Ramp
- ☐ **16** Heat Lamp (optional)
- ☐ **17** Basket Ramp
- ☐ **18** Basket Ramp Spring (x2)
- ☐ **19** Receiving Tray (not included)  
4" high full size pan recommended
- ☐ **20** Heat Lamp Cordset (not shown)

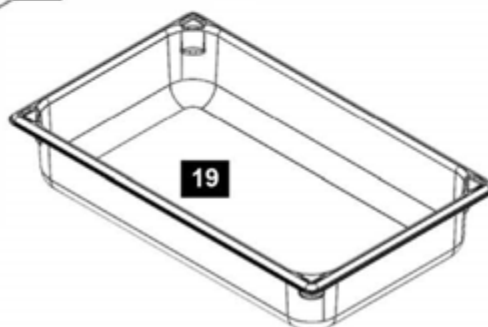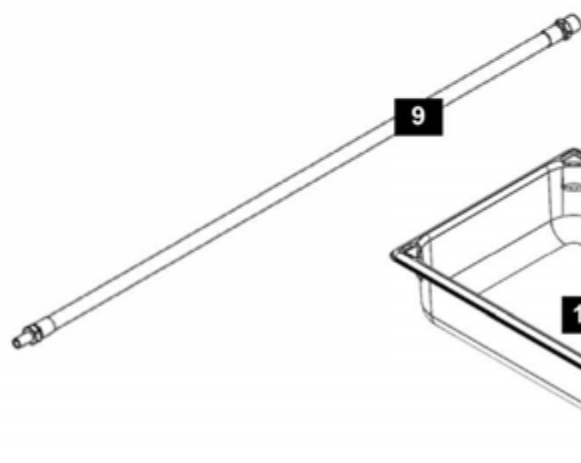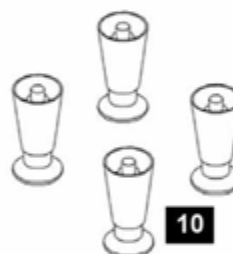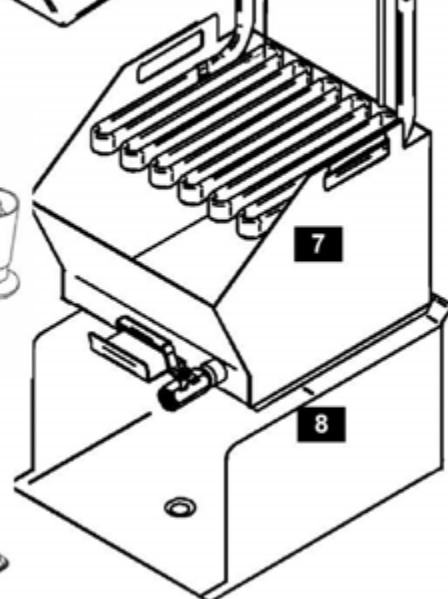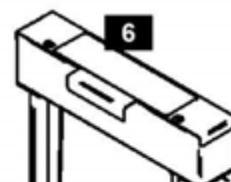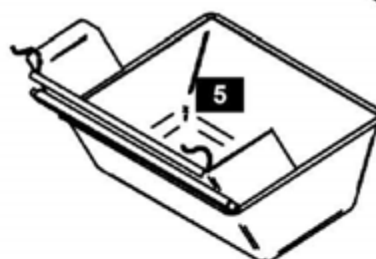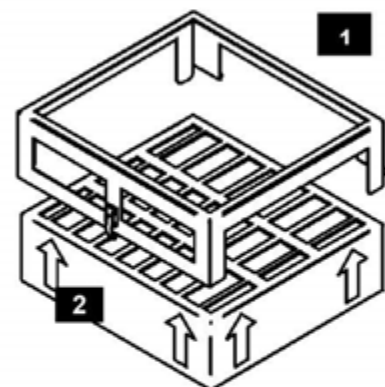

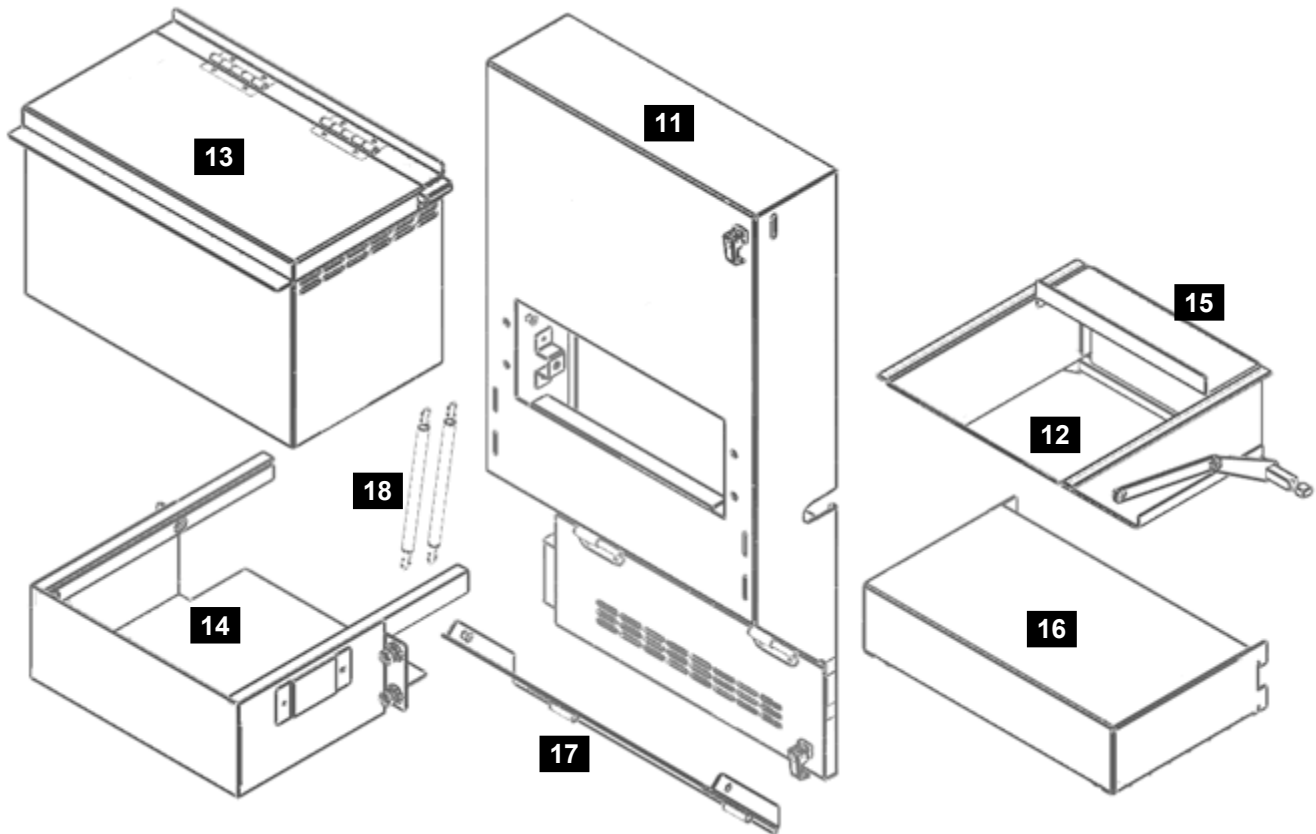

- 6) Tilt PERFECT FRYER to one side and install 2 adjustable legs, repeat process for other side

**CAUTION** Do not operate your PERFECT FRYER without legs.

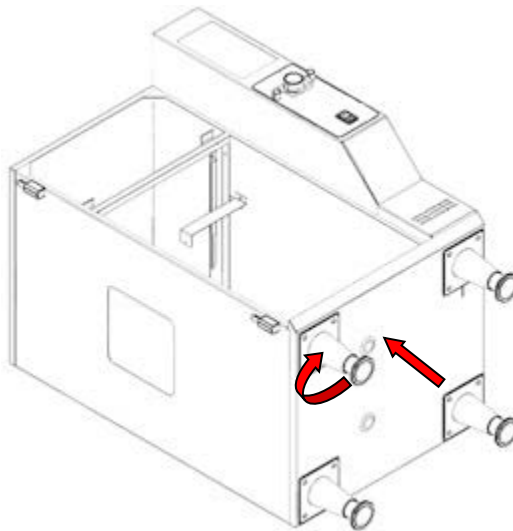

- 7) Lift your PERFECT FRYER onto countertop and adjust legs as necessary

**CAUTION** Your PERFECT FRYER weighs 110 lb. (50 kg). Lift it carefully with your legs or with the help of another person and place it in its final location.

- 8) Ensure that blow-off caps on fire extinguisher nozzles are kept in place  
9) Go to ASSEMBLY section (next page)


# ASSEMBLY

- 1) Clean parts and inside of cabinet (all except air filter cartridge)
  - a) Wash in warm soapy water
  - b) Rinse with hot water
  - c) Rinse with vinegar solution (1 part vinegar to 2 parts water)


**⚠ CAUTION** The heater box and heat lamp must NOT be immersed in water or other liquid.

- 2) Install grease filter into grease filter tray

Note: magnet should be on right side

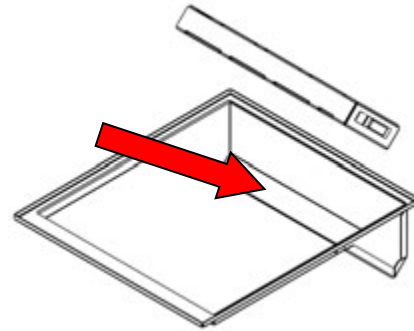


- 3) Install grease filter/grease filter tray into filter compartment by sliding along rails and towards back

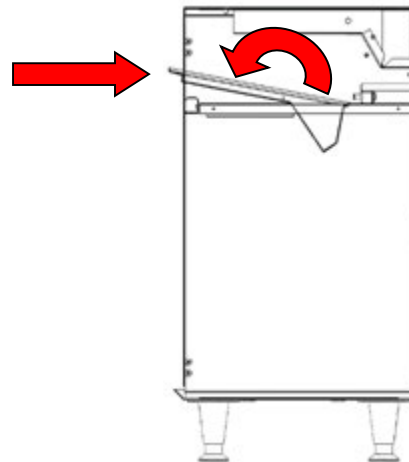


- 4) Fit air filter cage over air filter cartridge

Note: Make sure arrows are pointing up

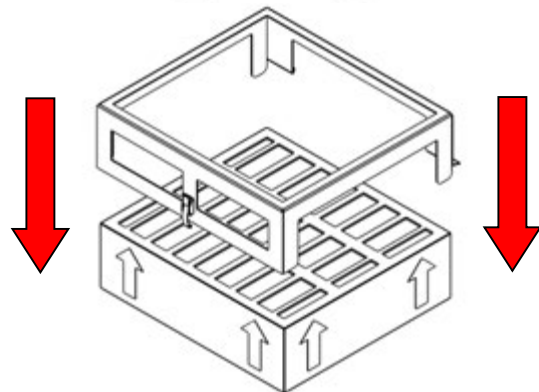


## ASSEMBLY (Continued)

- 5) Slide air filter cartridge firmly back into filter compartment and fasten down with latch.

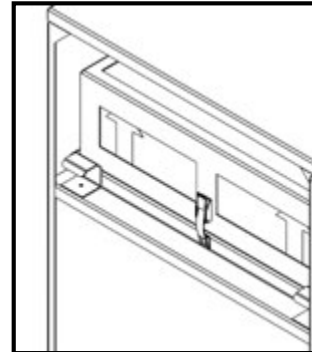


- 6) Install spill tray into bottom cooking compartment

Note: Indents on bottom of spill tray should fit into indents on bottom of cabinet

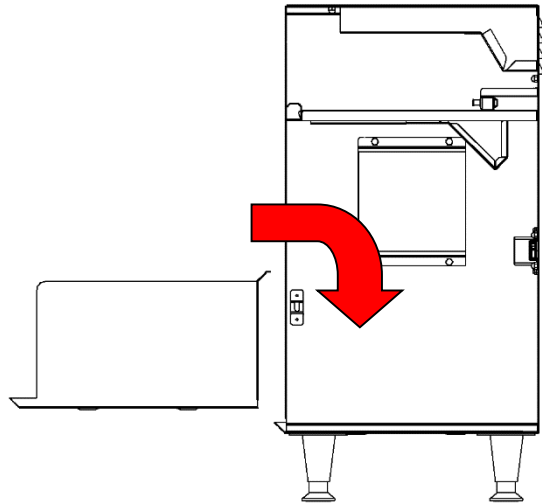


- 7) Set heater module onto vat

Note: “^” grooves on bottom of heater module should fit onto back of vat

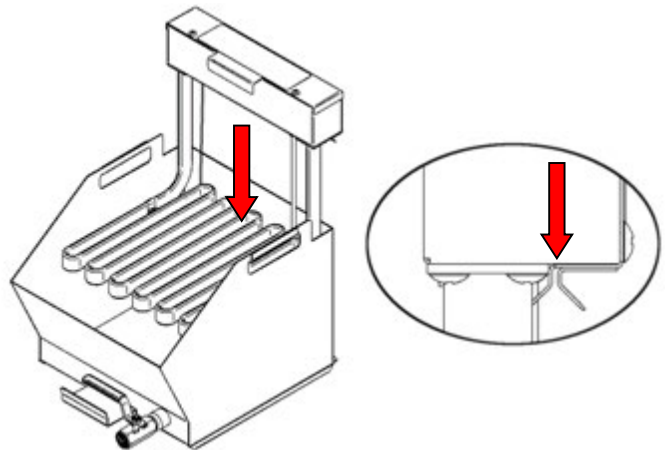


- 8) Pour frying oil into vat. Fill to **COLD** level mark. Use commercial grade deep fryer cooking oil. DO NOT OVERFILL.

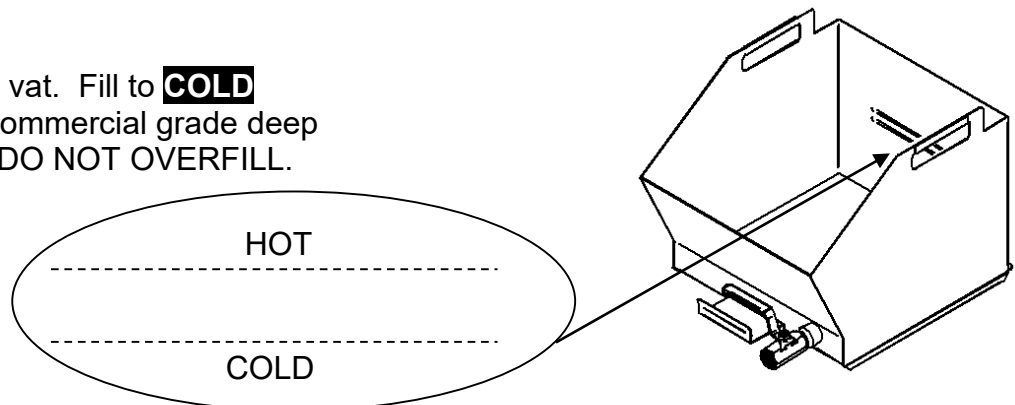


## ASSEMBLY (Continued)

- 9) Slide heater module/vat into cooking compartment and push in all the way. Ensure electrical connection is complete with firm push on heater module.

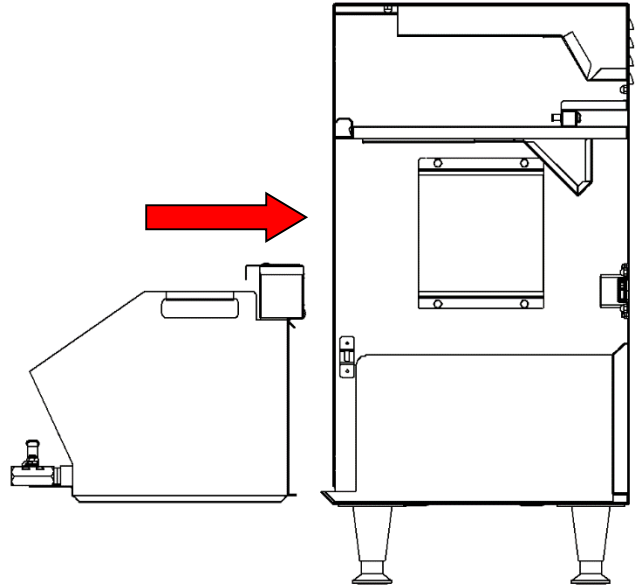


- 10) Install basket

- a) Tilt basket bottom forward and maneuver rod past cabinet flanges


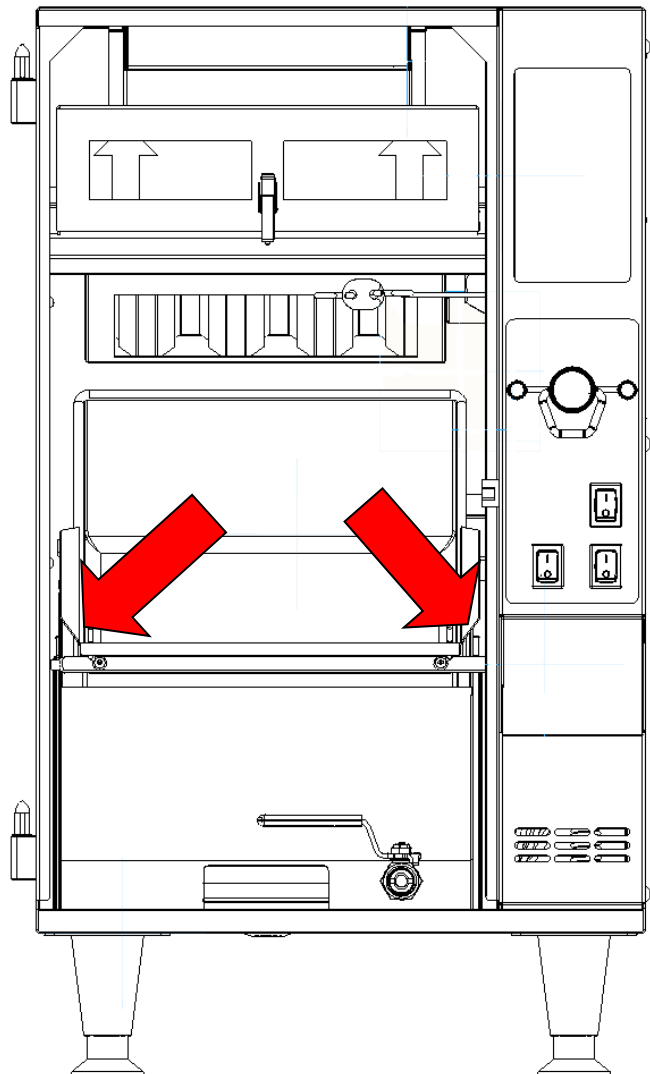


## ASSEMBLY (Continued)

b) Install rod into pivot slot – left side

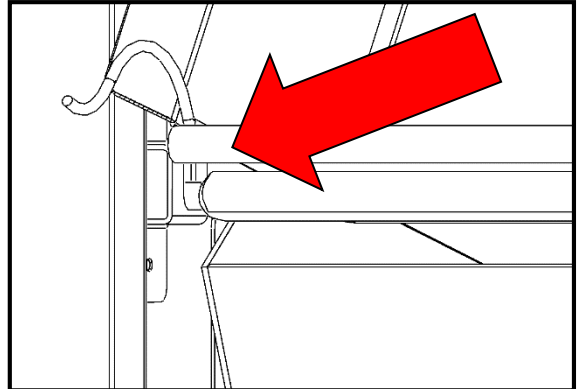

c) Install rod into motor coupler – right side

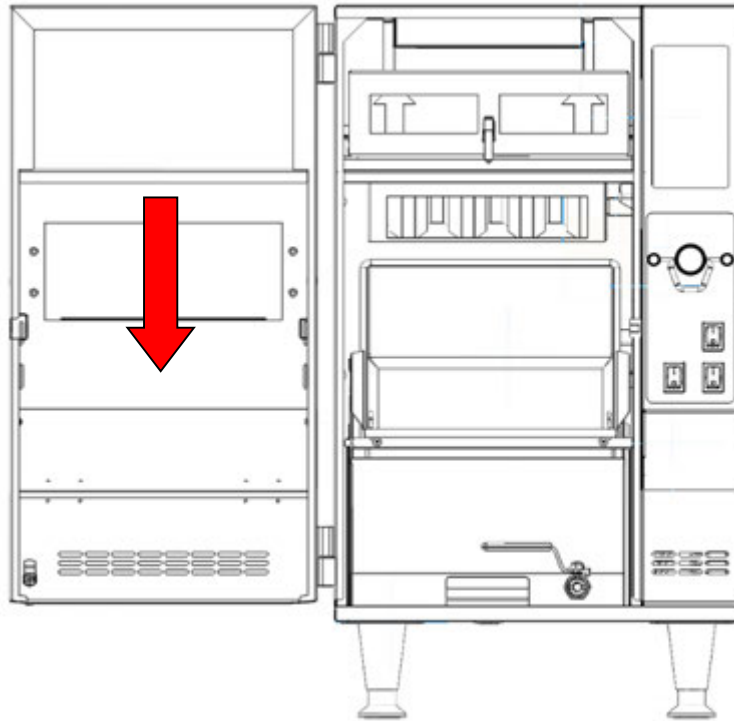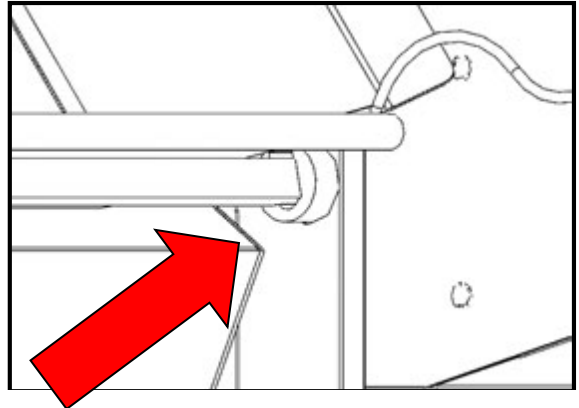


11) Install front panel using lift off hinges and close front panel. Turn latches  $\frac{1}{4}$  turn clockwise and press down.

## ASSEMBLY (Continued)


- 12) Install drawer sleeve using 4 captive screws. Tighten securely.

Note: Bottom of drawer sleeve should sit tight on front panel.

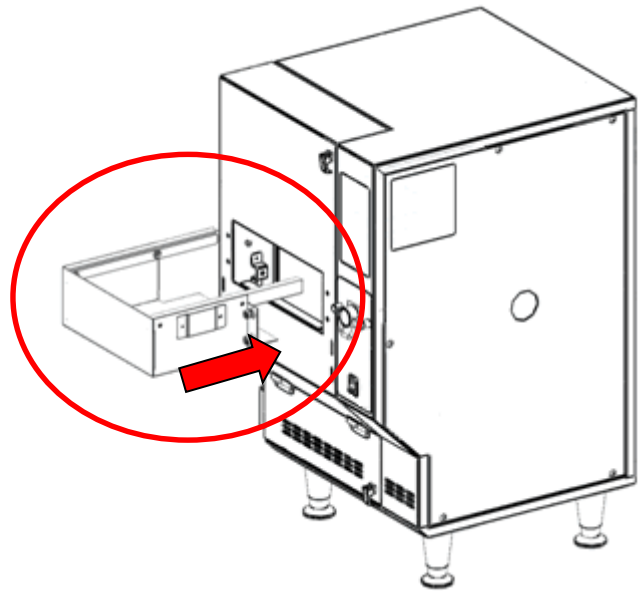


- 13) Install heat lamp. Connect cordset to connectors on left side of heat lamp and back of fryer (accessory outlet 1). Refer to Accessories on page 7 for more information. To change the 100W halogen bulb, remove cover and replace bulb with a similarly rated (correct voltage ) bulb. Be sure not to touch the bulb with bare hands.

Note: Tabs on back of heat lamp should fit into slots on front panel

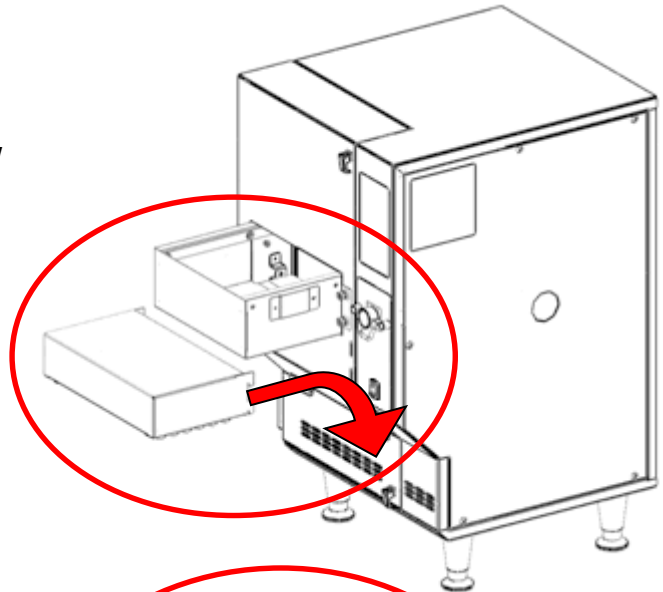


- 14) Install drawer cover

Note: Tabs on inside of cover should fit into slots on sides of drawer sleeve

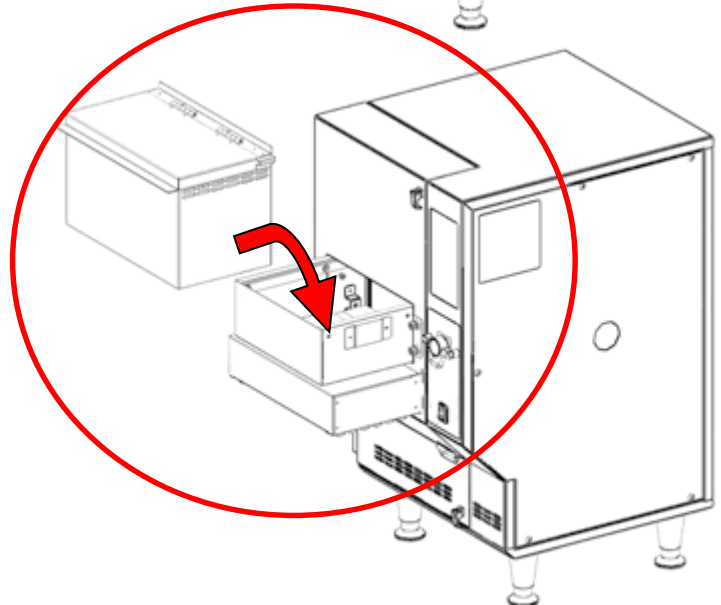


## ASSEMBLY (Continued)


- 15) Install basket ramp using hinges. Install basket ramp springs onto mounts provided. For proper airflow and sanitation, basket ramp must always be installed.

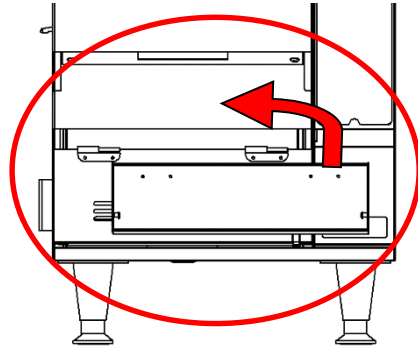


- 16) Install drawer ramp into hole on right side and slots on left side of inside of front panel.

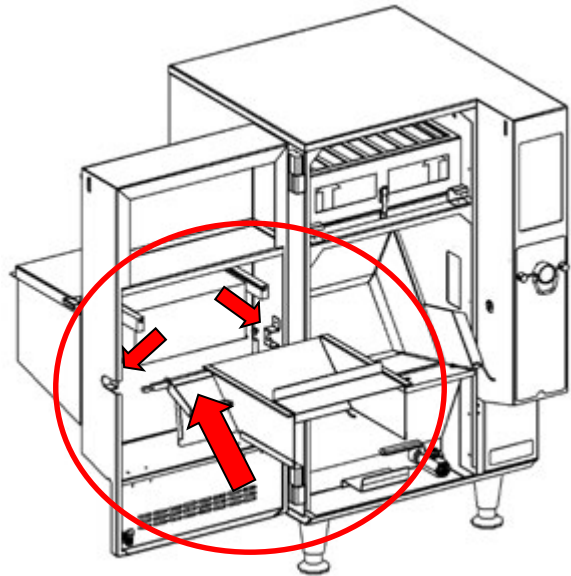

- 17) Install drawer shovel into guides and push shovel in completely.

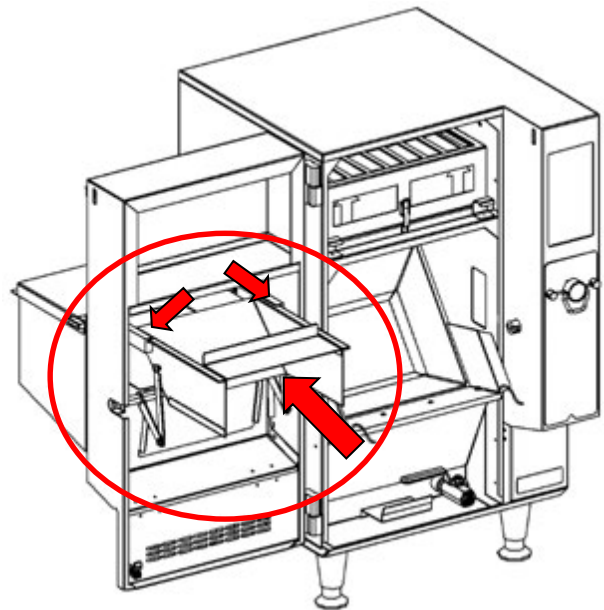

- 18) Close and lock the front panel by turning latches  $\frac{1}{4}$  turn clockwise and pressing down.

Plug in fryer and press . The fryer will now begin heating. In a few minutes, you will be ready to start cooking!

# COOKING

Press **Preset** to toggle between modes

## Manual Mode


## Preset Mode

## Preset Locked Mode


## RapidFry™ Mode

Load Food	Load Food	Load Food	Load Food
Select Time	Press <b>Preset</b>	Select <b>Preset</b> #	
Press <b>Start</b>	Select <b>Preset</b> #	<i>Manual Mode shown below</i>	


1. Open Drawer Lid

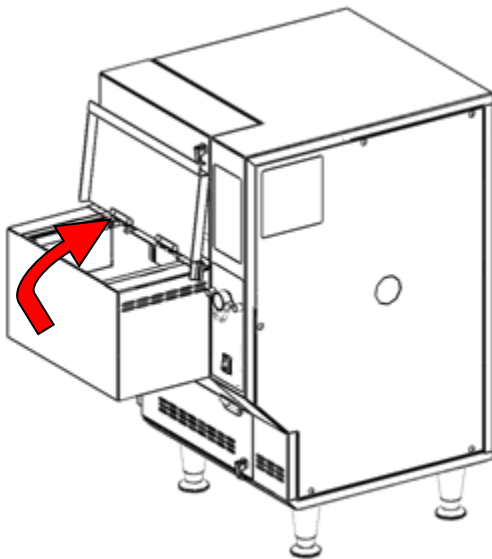


2. Fill Drawer

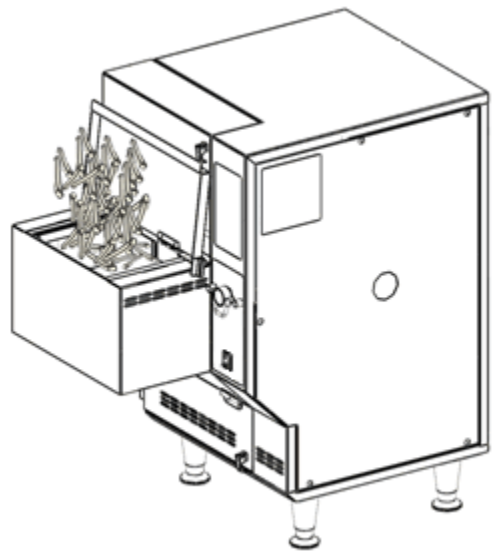

3. Close Drawer Lid

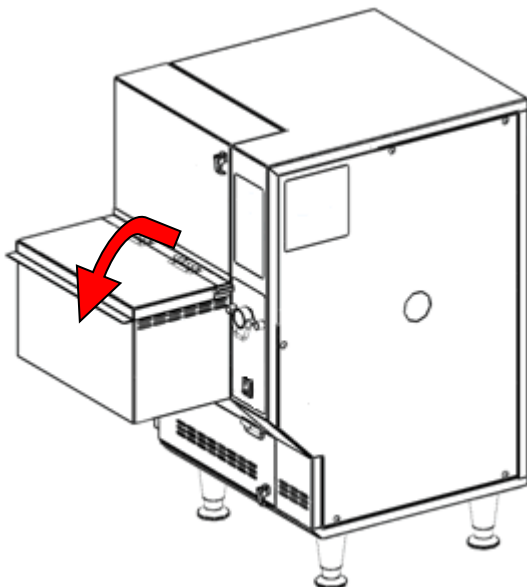

4. Enter Time/Press Start

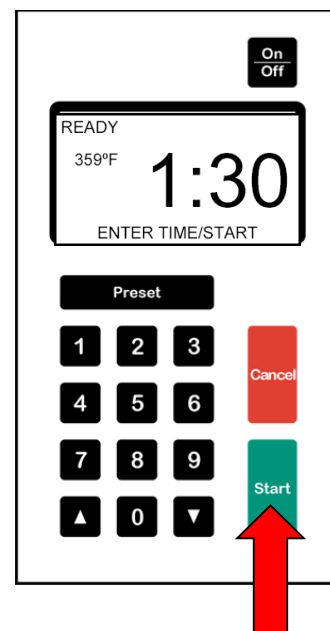


# CLEANING

## Daily Maintenance

**CAUTION** Do not unplug the fryer and always make sure the fryer is turned off


**CAUTION** Do not touch heater module, oil vat or oil unless you are sure it has cooled

- 1) Wipe basket with paper towel to remove crumbs and food particles
- 2) Wipe crumbs, oil and any other food matter from inside of drawer using a paper towel
- 3) Clean outside of fryer with a good stainless steel cleaner and wipe dry
- 4) Lubricate rails of shovel and bottom of drawer using an approved food grade grease or silicone lubricant

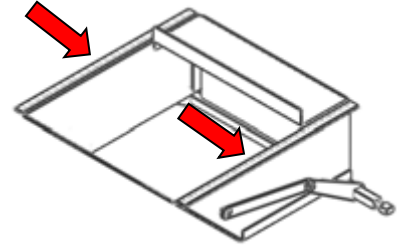

**CAUTION** Do not clean the outside or any other stainless steel part using abrasive cleaners

- 5) Check oil level on the back of vat to make sure it is up to cold line (at room temperature). If not, add oil as necessary. Replace the cooking oil once a week or more often if necessary. Use a **COMMERCIAL GRADE DEEP FRY COOKING OIL**.

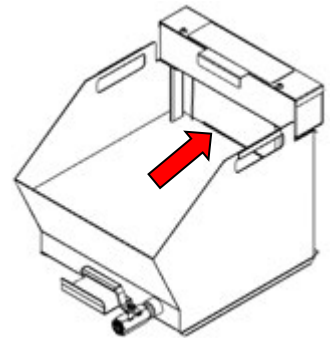

## Weekly Maintenance


**CAUTION** Do not unplug the fryer and always make sure the fryer is turned off

**CAUTION** Do not touch heater module, oil vat or oil unless you are sure it has cooled

- 1) Open front panel by lifting and turning latches. Remove drawer parts and wash in soap and hot water. Rinse well in hot water and dry.
- 2) Remove air filter cartridge and set aside (for replacement, see page 20).

**CAUTION** Do not wash air filter cartridge


- 3) Remove grease filter tray from cabinet. Remove grease filter from tray and drain any oil that has accumulated. Wash both parts in soap and hot water. Rinse well in hot water and dry.

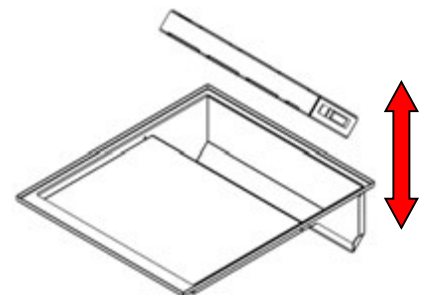

## CLEANING (Continued)

4) Attach oil hose and drain cooking oil from vat into containers for disposal. Have empty containers handy for proper disposal of used cooking oil. A rendering company can help with proper disposal.

5) Remove basket lift, oil vat and heater module (picture right). Spray parts with oven cleaner, enclose with plastic bag for at least one hour or leave overnight if possible. Wash in soap and hot water and rinse well in hot water. Rinse parts in a solution of: 1 part white vinegar [5% acetic acid] and 2 parts water. **The vinegar rinse is very important.** It neutralizes soap residue that causes oil breakdown foaming. Soap residue turns oil dark and reduces its performance significantly. Clear water rinse parts. **Clean the male and female terminals on connectors with rubbing alcohol and cotton swab.**

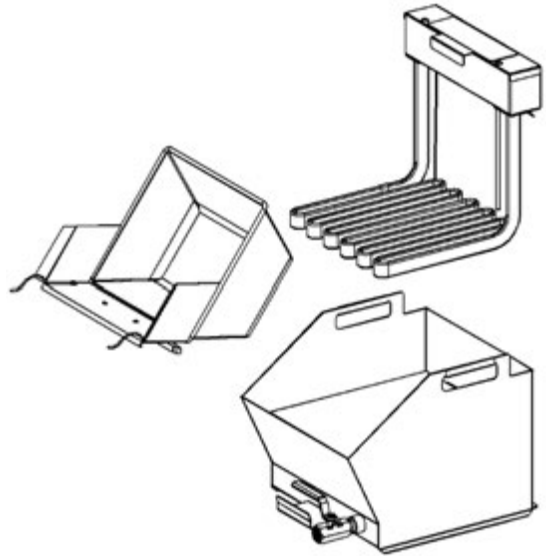


**CAUTION** The heater box must **NOT** be immersed in water or other liquid.

**CAUTION** Do not spray male connector

6) Remove spill tray and drain any oil that has accumulated. Wash in soap and hot water. Rinse well in hot water and dry.

7) With internal components removed, clean cooking and filter compartments with grease cutting soap or oven cleaner if necessary. Rinse with damp cloth and dry.

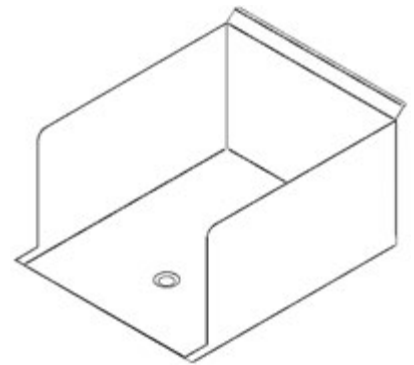

**CAUTION** Do not spray female connector

8) Clean countertop and external surfaces.

9) Ensure that blow-off caps on fire extinguisher nozzles are kept in place

10) Re-install all parts (see ASSEMBLY page 11)

## CLEANING (Continued)



### Periodic Maintenance

#### Air Filter Cartridge Replacement

- Replace the air filter cartridge at least once **every 2 months**, more often for higher volume usage. Replacement is safer and easier when the fryer is cool rather than hot.
- Only PERFECT FRY filters may be used in your PERFECT FRYER.

Steps to replace air filter cartridge:

- 1) Open front panel by lifting and turning latches
- 2) Release latch on air filter cage, and remove air filter cage and air filter cartridge from filter compartment
- 3) Remove old used air filter cartridge from air filter cage
- 4) Wipe air filter cage clean
- 5) Fit air filter cage over new air filter cartridge and write date on cartridge  
(↑↑ Arrows up)
- 6) Install air filter cage and new air filter cartridge firmly back into filter compartment and latch in place
- 7) Close front panel and latch shut

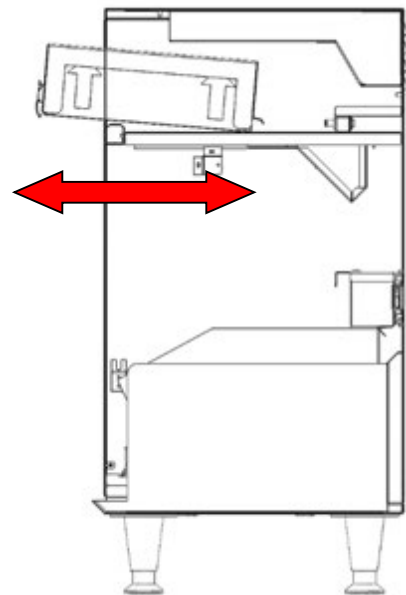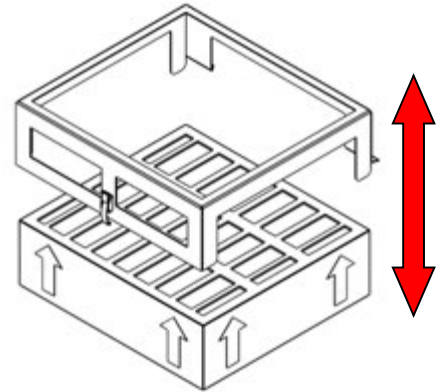

#### PFS Automatic Extinguisher

- The PFS automatic extinguisher must be inspected monthly by the owner/operator and semi-annually by authorized service personnel as per NFPA 17A. It is important that a maintenance program is set up with a local fire service company to ensure that local jurisdictional codes are being met. Please refer to PFS Automatic Extinguisher (page 45) for more information.

# TIPS ON DEEP FRYING

## Great Food in Less Time

- **Use premium quality commercial deep frying oil.** Canola and Soybean oils are recommended. Do not use household cooking oils from your local supermarket. Poor quality oils may shorten the life of the air filter cartridge.
- **Keep food frozen until ready to fry.** Frozen product will absorb less oil during the cooking process.
- **Remove ice from food.** Ice results in excess bubbling and spillage of oil out of the vat.
- **Minimize the moisture.** Excess moisture extends the cooking time. Water, ice, sugar and breading all contribute to shortening the life of the oil.
- **Try to reduce the amount of breading that falls off of the food.** Breading often has sugar and other ingredients that will reduce the oil's life and darken the appearance of food. Consider filtering the oil to remove the breading particles.
- **Do not overfill the drawer.** Excess food may not be cooked properly.

**MINIMIZE THE MOISTURE  
REDUCE THE COOKING TIME  
MAXIMIZE THE PROFIT**

## Common Questions

- **How Much Oil to Use?**  
The PERFECT FRY has a capacity of 2.75 gallons(11L) of oil. Fill the oil vat to the cold line only.
- **How Much to Fry?**  
Fill the drawer to the top only. The drawer has an approximate capacity of 3 lbs (1.5 kg) of product per cycle. Whatever you can fit in the drawer is what you can fry.
- **What is the Ideal Temperature Range for Cooking?**  
The ideal temperature range for cooking product is between 350°F and 360°F (177°C and 182°C). The factory default setting for cooking temperature is 350°F (177°C).
- **Should Frozen Food Be Defrosted?**  
DO NOT THAW FROZEN FOOD! Frozen foods only should be put directly into the fryer in order to minimize moisture.
- **Can I Refreeze Frozen Foods?**  
NO, do not refreeze frozen foods. Foods that are refrozen can absorb more oil, which will result in a dry, brittle and tasteless product.

# OIL FACTS

Frying oil is especially formulated to withstand high temperatures. For this reason, you must ensure you are using the right product. Liquid vegetable shortening is produced by several companies; the oil has an additive and/or has been formulated to increase the performance during high temperature usage.

## **DO NOT USE OIL THAT IS RECOMMENDED BOTH FOR SALAD AND FRYING!**

Fill the oil vat to the cold line only. The oil expands as it heats and if overfilled, the bottom of the basket will remain in the oil when in the up/serve position.

### **How Much to Fry?**

- Fill the drawer no higher than the top. Do not overfill the drawer.
- Keep drawer and basket clean and free of breading/batter build up.
- Remove ice crystals or excess water before frying.
- Do not salt or season before frying.
- Remove surplus and/or batter before frying.
- Do not allow frozen food to thaw before frying.
- Drain fried foods before serving.

### **How Hot is TOO Hot?**

Ideal frying temperature range is between 350°F and 360°F (177°C and 182°C). Factory default setting is 350°F (177°C). When frying at too low a temperature, food absorbs more oil which increases oil consumption.

### **Excessive Oil Usage?**

The fried product is absorbing oil. Possible reasons for this include:

- Excess breading or batter, shake off excess before frying.
- Allow basket to drain longer, adjust the drain time.
- Food is being allowed to thaw before frying.

### **Cleaning Your Fryer?**

- Refer to the Cleaning section of this owner's manual. Remember to clean the basket and drawer daily.

### **Filtering Your Oil?**

The most important procedure you can do is to maintain the oil, extending its life:

- Filter at least once a day, preferably first thing in the morning when the oil is at room temperature.
- Filtering removes all the contaminants from the previous days cooking.
- Clean the oil vat.

### **Points to Remember:**

- Clean the cooking chamber at least once a week and rinse thoroughly.
- Filter oil daily.
- Do not overheat oil.
- Use the standby mode when possible.
- Do not salt product prior to frying.
- Remove ice crystals and moisture before frying.
- Maintain oil level in vat, check to ensure it is at the hot line often.
- The oil is dead when foaming appears continuously on the oil surface

**Your oil, product taste, and customers depend on you.**

## OIL FACTS (Continued)

If the oil temperature is set too high, the food will cook on the exterior and the interior will be undercooked. When the interior is cooked completely, the exterior will be overdone or burnt. The higher temperature will also cause the oil to break down faster and smoke.

During slow periods, take advantage of the standby mode which allows the oil to cool down to 275°F (135°C), prolonging the oil life and reducing energy costs while allowing quick recover time when required.

The oil temperature should not be adjusted when cooking different products. Adjust the cooking time instead.

### Frozen Foods

Put frozen foods directly into the fryer. **DO NOT THAW FROZEN FOODS!** Blot excess water from food before frying. Remove ice crystals that may be at the bottom of the product bag.

**OIL AND WATER DO NOT MIX!** Water reacts with oil and makes it break down rapidly resulting in darkening, smoking and foaming (a process called hydrolysis). Excess water in the oil can cause the following problems:

- Unnecessary temperature drop meaning longer cooking times.
- More energy usage to maintain cooking temperature.
- Excessive splattering inside the fryer resulting in a mess to clean up.
- Decreased life of the air filter and the oil.

### Refreezing Frozen Foods?

Frozen foods should be fried frozen. Foods that are refrozen can absorb more oil and make your fried foods taste greasy. Refrozen food forms excessive ice and these ice crystals can bond food pieces together causing clumping. Remember:

- Always FRY FOOD FROZEN.
- NEVER REFREEZE thawed food.
- REMOVE ice crystals from product before frying.
- DO NOT accept thawed or refrozen product from supplier.

### Excessive Foaming?

The main reason for foaming is improper rinsing of oil vat after cleaning:

- To remove soap residue, rinse 3 times with water after cleaning or neutralize with a water and vinegar solution (1 part white vinegar to 2 parts water).
- Take care of your oil; use standby mode during slow periods. High temperature and oxygen contribute to oil breakdown. Filter oil and clean vat at least once a day when using heavily breaded products.

### Excessive Smoking/Oil Darkening?

- Oil is too hot, check temperature.
- Inadequate filtering, breading or batter build-up in vat causes oil breakdown, giving food a bitter taste.
- Moisture content is too high. Use precooked frozen products only. Remember to remove ice crystals.

### Grease Soaked Food?

- Frozen food is being allowed to thaw before frying.
- Oil is in the advanced stages of breakdown, replace immediately.
- Oil temperature is too low, check temperature.
- Product has too much breading or batter, remove excess.

## OIL FACTS (Continued)

### Food Not Browning Properly?

- New oil may not brown the product; check color again after a few basket loads.
- Too much product is in the basket; fill no higher than the fill line.
- Product is not frying long enough, follow manufacturers suggested cooking times.
- Oil temperature is too low, check oil temperature.
- Product is frying in excess foam.
- Oil level is too low, check the oil level.


### Premature Oil Breakdown?

- Oil is at full temperature during slow periods, use standby mode.
- Oil is contaminated. Never use wire brushes, copper pads or steel wool for cleaning. Use a hard bristle brush and filter oil regularly. Rinse with water vinegar solution.
- Also, see section; **HOW HOT IS TOO HOT?**

Statements used in OIL FACTS section are taken from:

- NAFEM Food Service Industry
- Canola Research Foundation
- Sysco Oil Publication

# OPERATING INSTRUCTIONS

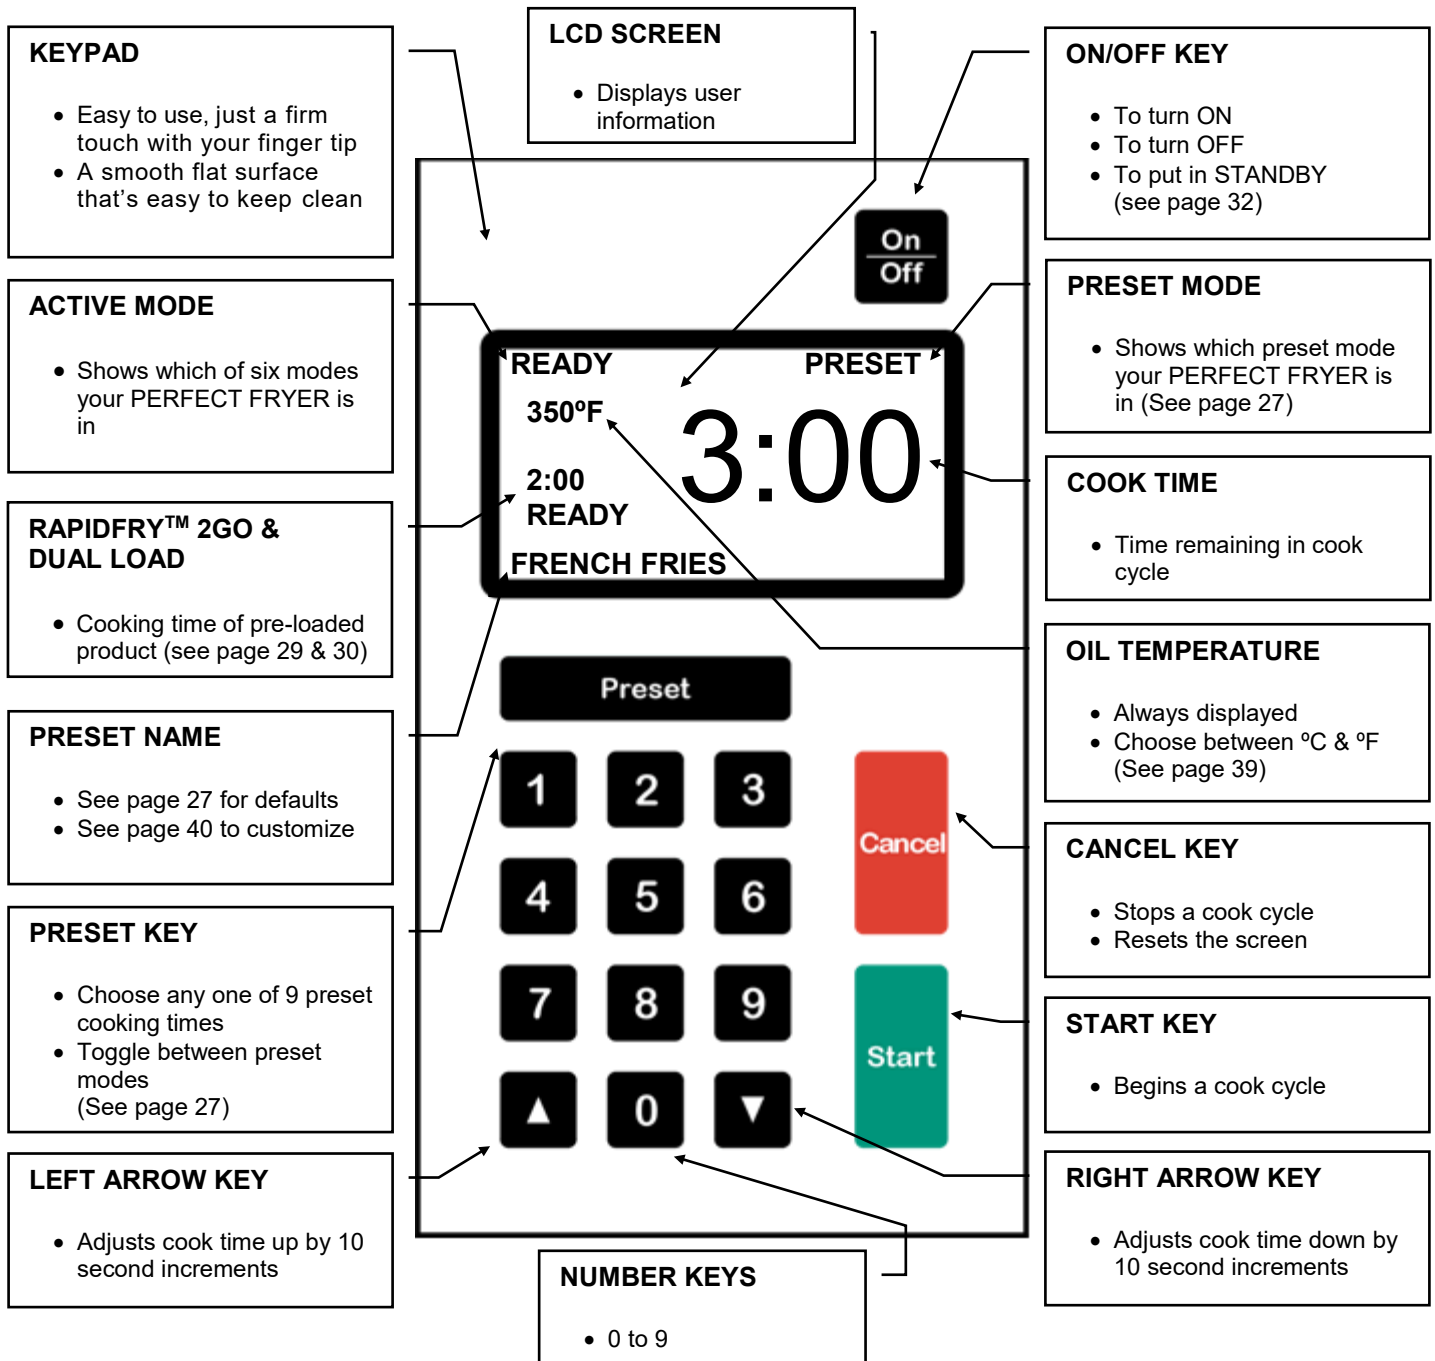


**Table 1 Preset Mode Functionality**

Feature	Manual Mode	Preset Mode	Preset Locked Mode	RapidFry™ Mode
Manually enter cook time	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Automatically enters preset time	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Remains in same mode after cook cycle	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Eliminates need to use keypad	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>



# OPERATING INSTRUCTIONS (Continued)

## Starting Up

### YOU DO THIS

- 1) Press  for ½ second.
- 2) Allow 10 to 15 minutes for oil to reach operating temperature (350°F or 177°C).

### LCD

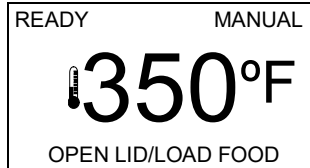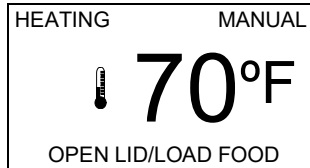


### PERFECT FRYER DOES THIS

- 1) Now in **HEATING** mode
- 2) Oil temperature rising to operating temperature
- 3) Once operating temperature is reached, now **READY** to start cooking.


## Manual Mode

- 1) Open drawer lid
- 2) Fill drawer with food product

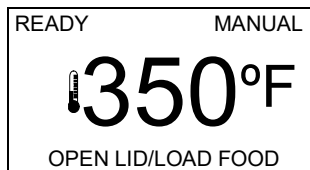


- 1) LCD displays **OPEN LID/LOAD FOOD**

- 3) Close drawer lid

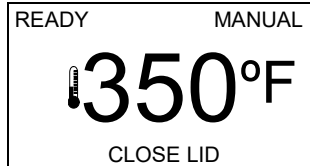


- 2) Basket lowers into oil
- 3) LCD displays **CLOSE LID**

- 4) Enter cook time and press **Start**  
ex: **1 3 0 Start**

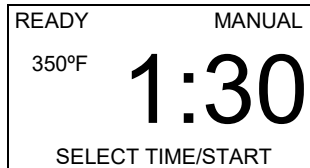


- 4) LCD displays **SELECT TIME/START**
- 5) Drawer loads food into oil
- 6) **COOKING** cycle begins
- 7) Fryer counts down time remaining
- 8) Basket raises out of oil
- 9) Food drains (time adjustable)
- 10) Fryer “beeps” to let you know that food is cooked
- 11) Fryer dumps food into warming tray

**Note: DO NOT OPEN DRAWER LID OR FRONT PANEL WHEN PRODUCT IS LOADING**

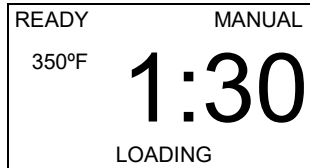

- 5) Serve food from warming tray

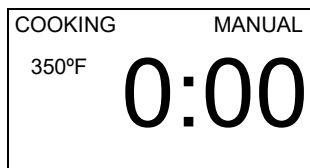

- 12) **COOKING** cycle is complete

# OPERATING INSTRUCTIONS (Continued)

## Preset Times

Cooking Times & Names (factory defaults)								
Preset	Name	Time	Preset	Name	Time	Preset	Name	Time
1	FRENCH FRIES	3:00	4	POPPERS	3:00	7	FISH FILLETS	4:00
2	CHICKEN TENDERS	4:00	5	CHEESE BITES	2:00	8	CHICKEN WINGS	4:00
3	ONION RINGS	2:30	6	CORN DOGS	3:00	9	CHICKEN & FRIES	4:00

**NOTE:** Pressing **Preset** repetitively will toggle between MANUAL mode, PRESET mode PRESET LOCKED mode and RAPIDFRY™ mode.

**NOTE:** The default presets are programmed and displayed to show you the PERFECT FRYER's capabilities. We recommend that you change the presets to match your own requirements. Please refer to pages 40 and 41.

## Preset Mode

### YOU DO THIS

- 1) Open drawer lid
- 2) Fill drawer with food product
- 3) Close drawer lid
- 4) Press **Preset**



- 5) Press **1** (for example)  
Cook cycle starts automatically

Note: You can choose between 9 different presets

**Note: DO NOT OPEN DRAWER LID OR FRONT PANEL WHEN PRODUCT IS LOADING**

- 6) Serve food from warming tray

### LCD

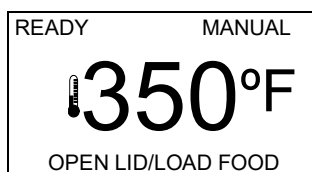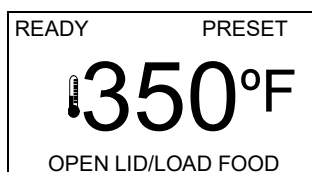

### PERFECT FRYER DOES THIS

- 1) Now in **PRESET** mode
- 2) LCD displays **PRESET**
- 3) Basket lowers into oil
- 4) LCD displays **FRENCH FRIES** (default is 3:00)
- 5) Drawer loads food into oil
- 6) **COOKING** cycle begins
- 7) Fryer counts down time remaining
- 8) Basket raises out of oil
- 9) Food drains (time adjustable)
- 10) Fryer "beeps" to let you know that food is cooked
- 11) Fryer dumps food into warming tray
- 12) **COOKING** cycle is complete
- 13) Fryer returns to **READY** mode
- 14) Fryer returns to **MANUAL** mode

# OPERATING INSTRUCTIONS (Continued)

## Preset Locked Mode

### YOU DO THIS




- 1) Open drawer lid
- 2) Fill drawer with food product
- 3) Close drawer lid
- 4) Press **Preset** + **Preset**
- 5) Press **2** (for example)  
Cook cycle starts automatically

Note: You can choose between 9 different presets

**Note: DO NOT OPEN DRAWER LID OR FRONT PANEL WHEN PRODUCT IS LOADING**

- 6) Serve food from warming tray
- 7) Follow steps 1 through 3 and press desired preset number to cook another order this way

### LCD

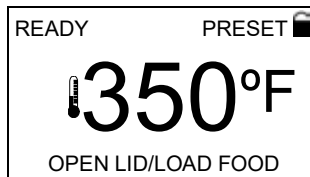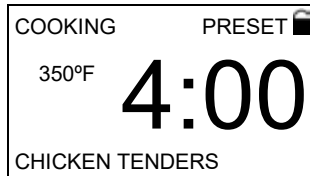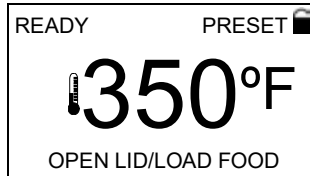

### PERFECT FRYER DOES THIS

- 1) Now in **PRESET LOCK** mode
- 2) **PRESET** with lock icon is displayed on LCD
- 3) LCD displays **CHICKEN TENDERS** (default is 4:00)
- 4) Drawer loads food into oil
- 5) **COOKING** cycle begins.
- 6) Fryer counts down time remaining
- 7) **COOKING** cycle is complete
- 8) Basket raises out of oil
- 9) Food drains (time adjustable)
- 10) Fryer "beeps" to let you know that food is cooked
- 11) Fryer dumps food into warming tray
- 12) **COOKING** cycle is complete  
Note: Still in **PRESET** with lock icon mode

## RapidFry™ Mode




- 1) Open drawer lid
- 2) Fill drawer with food product
- 3) Close drawer lid
- 4) Press **Preset** 3 times
- 5) Press **2** (for example)  
Cook cycle starts automatically

Note: You can choose between 9 different presets

**Note: DO NOT OPEN DRAWER LID WHEN PRODUCT IS LOADING**

- 6) Serve food from warming tray
  - 7) Follow steps 1 through 3
- Note: If you are using the same preset repetitively, there is no need to use the keypad. The movement of the drawer lid controls the cook cycle.

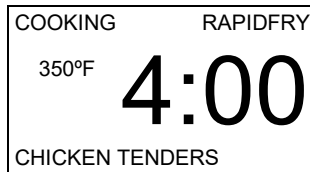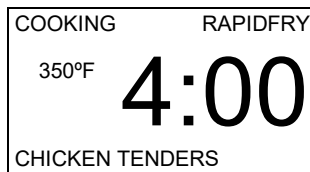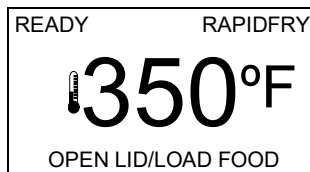






- 8) Press **Cancel** to change the preset used for **RAPIDFRY**
- 9) Press **1** (for example)



- 1) Now in **RAPIDFRY** mode
  - 2) **RAPIDFRY** is displayed on LCD
  - 3) LCD displays **CHICKEN TENDERS** (default is 4:00)
  - 4) Drawer loads food into oil
  - 5) **COOKING** cycle begins.
  - 6) Fryer counts down time remaining
  - 7) Basket raises out of oil
  - 8) Food drains (time adjustable)
  - 9) Fryer "beeps" to let you know that food is cooked
  - 10) Fryer dumps food into warming tray
  - 11) **COOKING** cycle is complete
- Note: Still in **RAPIDFRY** mode and a new cook cycle time for existing preset. The existing preset remains until it is cancelled and changed.

# OPERATING INSTRUCTIONS (Continued)
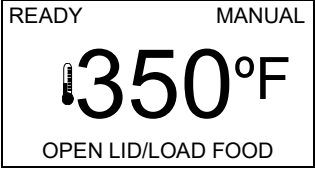
## RapidFry™ 2GO

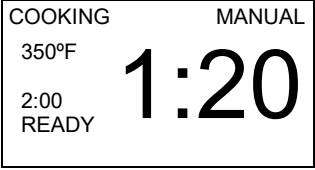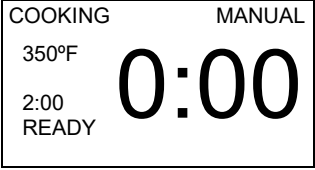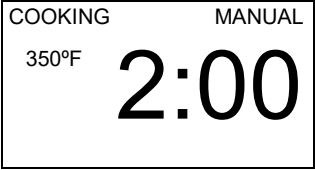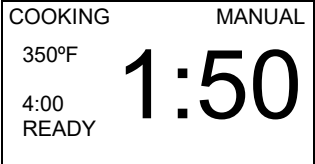YOU DO THIS	LCD	PERFECT FRYER DOES THIS
1) Open drawer lid 2) Fill drawer with food product 3) Close drawer lid		1) Basket lowers into oil
4) Enter cook time and press <b>Start</b> ex: <b>1 3 0</b> <b>Start</b>		2) Drawer loads food into oil 3) <b>COOKING</b> cycle begins 4) Fryer counts down time remaining
<b>Note: DO NOT OPEN DRAWER LID OR FRONT PANEL WHEN PRODUCT IS LOADING</b>		
5) Open drawer lid after product is finished loading 6) Fill drawer with food product 7) Close drawer lid		5) LCD displays time and status of preloaded <b>COOKING</b> cycle
8) Enter cook time and press <b>Start</b> ex: <b>2 0 0</b> <b>Start</b>		6) Basket raises out of oil 7) Food drains (time adjustable) 8) Fryer “beeps” to let you know that food is cooked 9) Fryer dumps food into warming tray
9) Serve food from warming tray		10) Preloaded <b>COOKING</b> cycle begins automatically after original <b>COOKING</b> cycle is finished
10) Follow steps 5 through 8 to preload another <b>COOKING</b> cycle		

RAPIDFRY™ 2GO works with all the different preset modes and behaves according to the mode. Example: for RAPIDFRY™ mode, simply opening and closing the drawer lid will display the time and status for a preloaded cooking cycle.

# OPERATING INSTRUCTIONS (Continued)

## Dual Load






### YOU DO THIS

- 1) Open drawer lid
- 2) Fill drawer with first food product (ex: chicken)
- 3) Close drawer lid
- 4) Press **Preset**
- 5) Press **9** (for example)  
Cook cycle starts automatically

Note: Preset 9 has been programmed for dual load time (refer to page 40)

**Note: DO NOT OPEN DRAWER LID OR FRONT PANEL WHEN PRODUCT IS LOADING**

### LCD

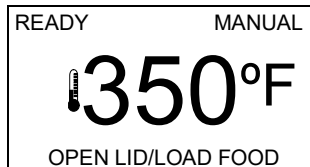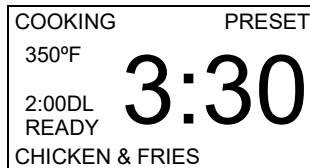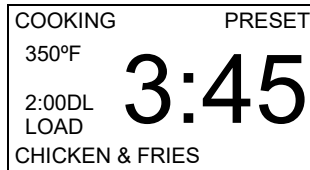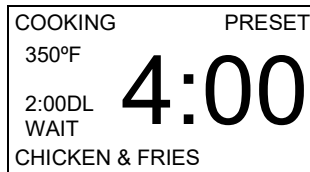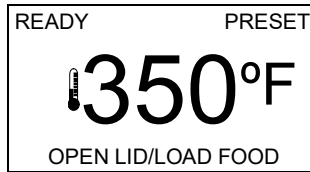

### PERFECT FRYER DOES THIS

- 1) Basket lowers into oil
- 2) LCD displays **CHICKEN & FRIES** (default is 4:00 for chicken)
- 3) LCD displays 2:00DL and **WAIT** (default is 2:00 for fries)
- 4) Drawer loads chicken into oil
- 5) **COOKING** cycle begins.
- 6) Fryer counts down time remaining
- 7) LCD displays 2:00DL and **LOAD**
- 8) Fryer "beeps" every 10 seconds to remind you to load second product (ex: fries).
- 9) LCD displays 2:00DL and **READY**
- 10) At 2:00 drawer loads fries into oil
- 11) Time and status of dual load disappears
- 12) Basket raises out of oil
- 13) Food drains (time adjustable)
- 14) Fryer "beeps" to let you know that food is cooked
- 15) Fryer dumps both food products into warming tray
- 16) **COOKING** cycle is complete

- 6) Open drawer lid
- 7) Fill drawer with second food product (ex: fries)
- 8) Close drawer lid
- 9) Serve food from warming tray

DUAL LOAD TIME works with all the preset modes (regular preset mode, preset locked mode and RAPIDFRY™ mode) and behaves according to the mode. To program a preset DUAL LOAD TIME, please refer to page 40. Example: for RAPIDFRY™ mode, simply opening and closing the drawer lid will display the time and status for a preloaded cooking cycle.

**THE COMBINATION OF BOTH LOADS SHOULD NOT BE GREATER THAN A DRAWER FULL. ONE DRAWER FULL IS EXACTLY HOW MUCH THE BASKET CAN ACCEPT.**

## OPERATING INSTRUCTIONS (Continued)

### Cooking Time Correction

#### YOU DO THIS

- 1) Enter incorrect cooking time  
(4:30 instead of 3:30 for example)
- 2) Press **4 3 0** **Start**


#### LCD



#### PERFECT FRYER DOES THIS


- 1) Drawer loads food into oil
- 2) **COOKING** cycle begins
- 3) Fryer counts down time remaining

- 3) Press **Cancel**

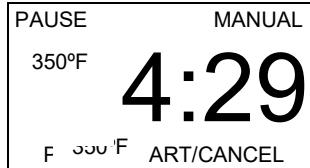


- 4) **COOKING** cycle **PAUSE**
- 5) Basket raises out of oil
- 6) LCD displays **PRESS START/CANCEL**

- 4) Press **3 3 0** **Start**

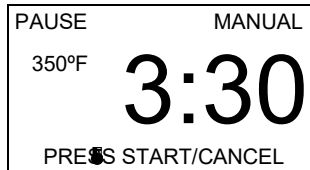

- 7) LCD displays new time
- 8) Basket lowers into oil
- 9) Fryer counts down new time remaining

Note: Pressing **Cancel** instead of entering a new time will complete the cook cycle and dump the food product into the warming tray

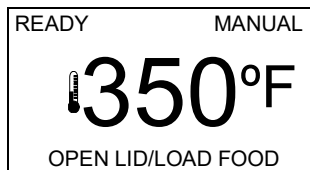


### Open Drawer Lid – Paused Cook Cycle

- 1) Open drawer lid during product loading



- 1) **COOKING** cycle **PAUSE**
- 2) Basket raises out of oil

- 2) Close drawer lid to continue cooking cycle

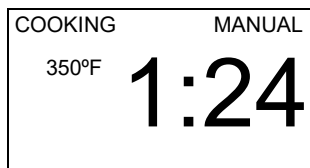


- 3) Brief pause, basket lowers into oil
- 4) Drawer completes loading product
- 5) **COOKING** cycle begins
- 6) Fryer counts down time remaining

**DO NOT OPEN DRAWER LID OR FRONT PANEL WHEN PRODUCT IS LOADING**

## OPERATING INSTRUCTIONS (Continued)

### Standby Mode

#### SEE THIS LCD

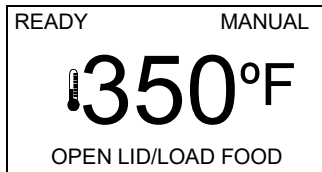


#### DO THIS

- 1) Press  and  together
- 2) Release both

Note: Temperature will decrease to 275°F (to set default standby temperature, see page 34 for more information)

#### GET THIS LCD

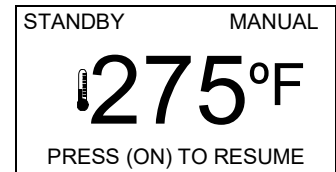

**Note:** During slow periods, using standby mode reduces energy costs, allows a quick recovery and minimizes oil breakdown.

### Shutting Down

#### YOU DO THIS




TURN YOUR PERFECT FRY OFF:

- At end of day
- To replace deep fry oil
- To clean
- For other service or maintenance

- 1) Press 

**DO NOT UNPLUG FRYER**  
Fans must remain ON  
during COOLDOWN mode

#### LCD

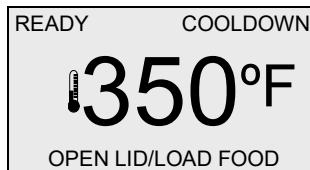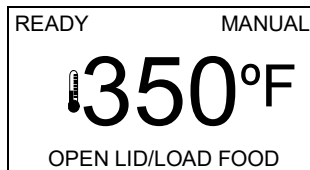


#### PERFECT FRYER DOES THIS

- 1) Now in **READY** mode
- 2) Now in **COOLDOWN** mode
- 3) No power to heater element
- 4) Fans continue to cool fryer
- 5) Fryer counts down temperature
- 6) LCD backlighting goes off
- 7) Temperature decreases to 122 °F (50°C)
- 8) Fans stop
- 9) LCD goes blank
- 10) Your PERFECT FRYER is off

# USER DEFINED OPTIONS






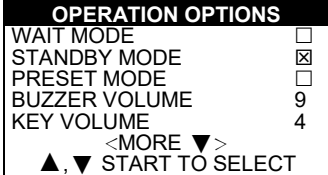
## CUSTOMIZE YOUR PERFECT FRYER WITH YOUR OWN SETTINGS

- CTS™ Cook Time Sensitivity
- Temperature read-out: °C or °F
- Preset Cooking Times
- Cooking Oil Standby Temperature
- Count of Cook Cycles
- Cooking Oil Temperature
- Basket Drain Time
- Sound Volume
- And Much More

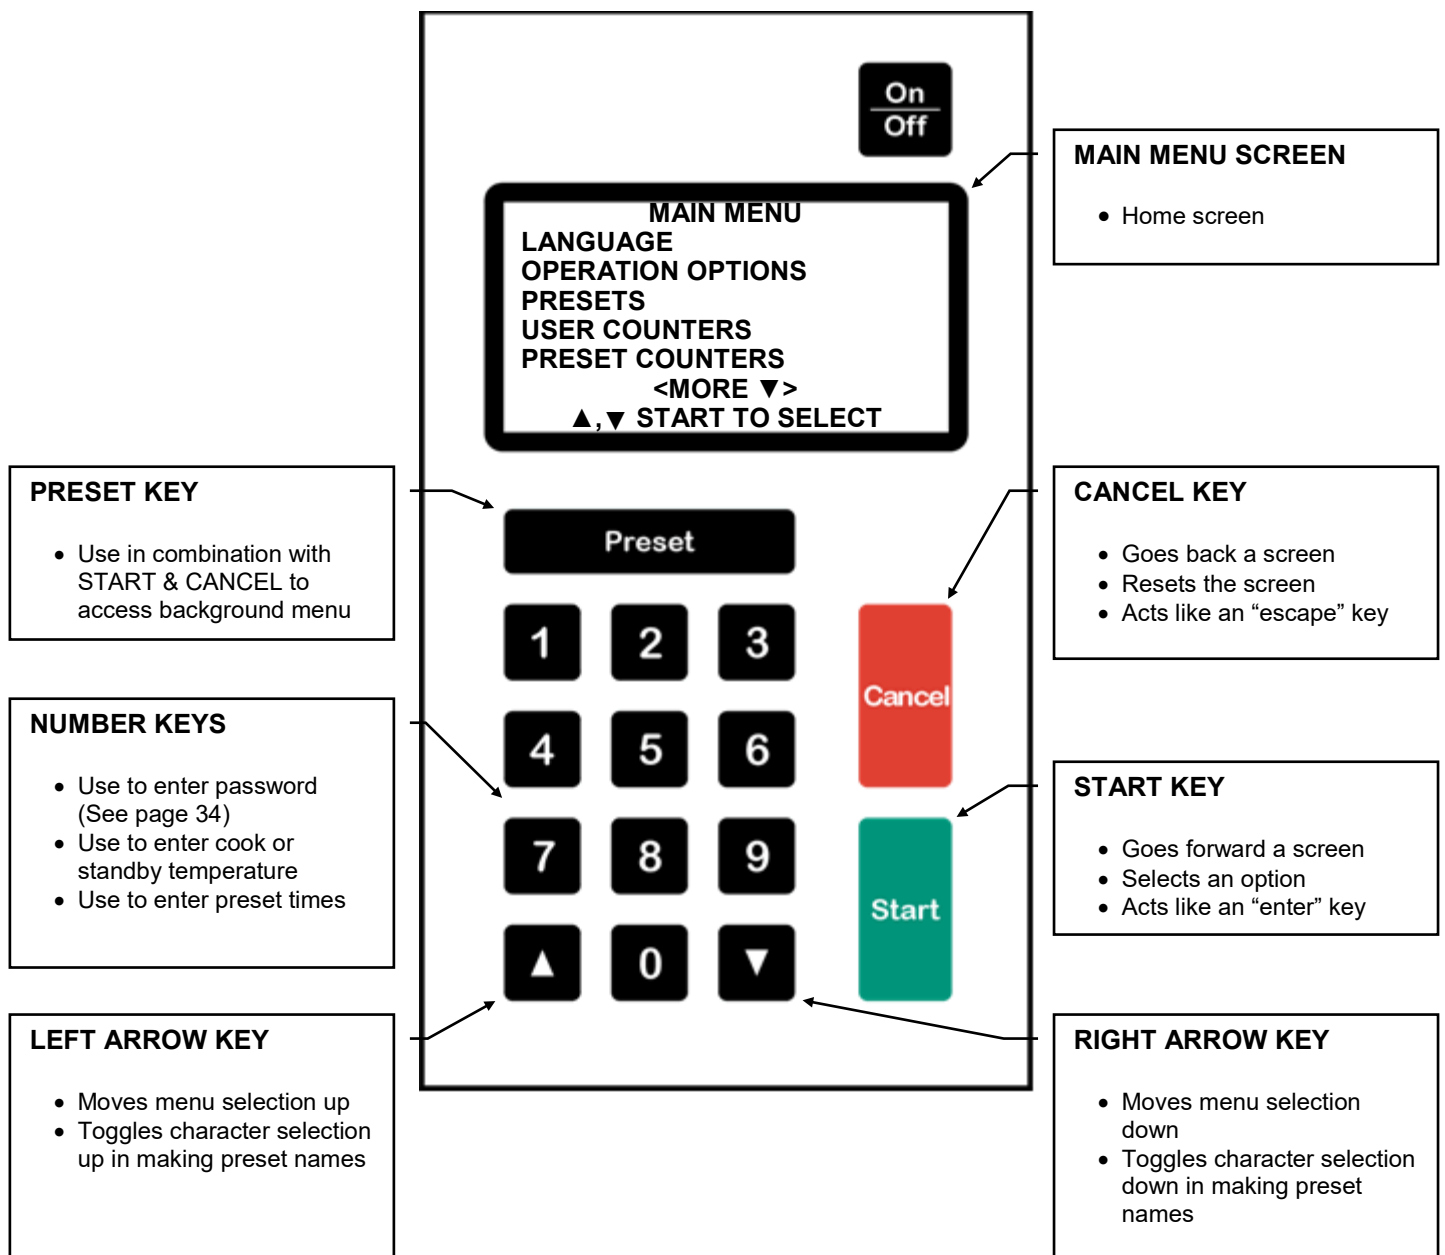

## USER DEFINED OPTIONS (Continued)

### Background Menu - Accessing
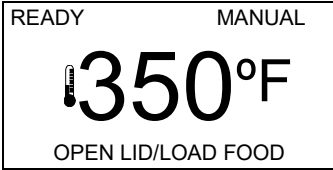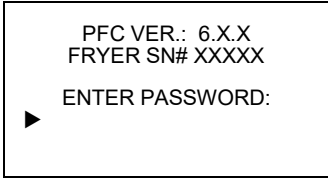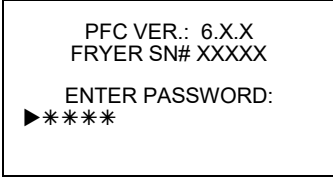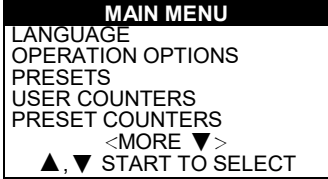
<u>SEE THIS LCD</u>	<u>DO THIS</u>	<u>GET THIS LCD</u>
	1) Press <b>Cancel</b> <b>Start</b> <b>Preset</b> together 2) Release together	
	3) Press <b>4 7 5 0</b> <b>Start</b>	
	4) Scroll down to the desired menu selection and press <b>Start</b>	

### CTS™ (Cook Time Sensitivity)

- CTS™ adjusts cooking time to compensate for the drop in cooking oil temperature when a basket of product is placed into the fryer. CTS™ increases cooking time to accommodate for differences in product moisture content, basket-load size, and initial temperature.
- A proper CTS™ setting will ensure a high quality product. For example; 2 lbs of French fries will cook to the same quality as only 6 ounces of French Fries.
- In addition to having a “global” CTS™ setting under the Operation Options menu for manually entered cook cycles, each preset can be programmed with its own individual setting. This provides for a lot of flexibility among different food products.
- Some experimenting with the range of 1 to 9 may be required to achieve optimum quality. A value of 5 is a good place to start and is the default.
- A setting of 0 means no CTS™ whatsoever.

OPERATION OPTIONS	
CTS	5
MELT CYCLE	<input type="checkbox"/>
HOLD TIME	0M
FTS	3
MANUAL DRAWER	<input type="checkbox"/>
<MORE >	
▲, ▼ START TO SELECT	

FRENCH FRIES	
TIME:	3:00
TEMPERATURE:	350°F
NAME:	FRENCH FRIES
<MORE >	
▲, ▼ START TO SELECT	

### Background Menu - Map

#### LANGUAGE

- ENGLISH (factory default)
- ESPANOL
- FRANCAIS

LANGUAGE	
ENGLISH	<input checked="" type="checkbox"/>
ESPANOL	<input type="checkbox"/>
FRANCAIS	<input type="checkbox"/>
▲, ▼ START TO SELECT	

## USER DEFINED OPTIONS (Continued)

### OPERATION OPTIONS

#### ➤ WAIT MODE

- When ☒, will not allow cooking until oil has reached operating temperature
- Default is ☐

#### ➤ STANDBY MODE

- When ☒, gives user ability to put fryer into standby mode
- This is an energy saving feature which holds oil temperature at desired standby temperature
- Default is ☒

#### ➤ PRESET MODE

- When ☒, only PRESET LOCKED mode and RAPIDFRY™ mode are available
- This allows the operator to better control inventories as manual cook cycles are not permitted
- Default is ☐

#### ➤ BUZZER VOLUME

- Intensity of “beep” for finish of cook cycle and system errors
- Choose between 0 and 9
- Default is 9

#### ➤ KEY VOLUME

- Intensity of “beep” when a key is pressed
- Choose between 0 and 9
- Default is 4

#### ➤ UNITS

- Temperature of oil in the vat
- Choose between °C (Celsius) and °F (Fahrenheit)

#### ➤ DRAIN TIME

- Time a basket of cooked food sits out of the oil before finishing the cook cycle
- Choose between 0 and 30 seconds
- Default is 15 seconds

#### ➤ COOK TEMPERATURE

- Operating temperature of the oil
- Choose between 275°F (135°C) and 375°F (190°C)  
Note: Between 350°F and 360°F (177°C and 182°C) is ideal. If the temperature is set too low, the food will absorb too much oil and taste greasy. If the temperature is set too high, the food will cook too quickly on the outside and will be too dark once the inside is cooked. It may also cause the oil to breakdown quicker and cause smoking.
- Default is 350°F (177°C)

#### ➤ STANDBY TEMPERATURE

- Oil temperature when fryer is in standby mode
- Choose between low (ambient room temperature) and high (cook temperature)
- Default is 275°F (135°C)

#### ➤ LCD CONTRAST

- Visibility of screen
- Choose between 0 and 9

OPERATION OPTIONS	
WAIT MODE	<input type="checkbox"/>
STANDBY MODE	<input checked="" type="checkbox"/>
PRESET MODE	<input checked="" type="checkbox"/>
BUZZER VOLUME	9
KEY VOLUME	4
<MORE ▼>	
▲, ▼ START TO SELECT	

OPERATION OPTIONS	
UNITS	°F
DRAIN TIME	15S
COOK TEMP	350°F
STANDBY TEMP	275°F
LCD CONTRAST	5
<MORE ▼>	
▲, ▼ START TO SELECT	

## USER DEFINED OPTIONS (Continued)

### ➤ CTS™ COOK TIME SENSITIVITY

- Adjusts cooking time to compensate for drop in cooking oil temperature when basket of product is placed into fryer. Refer to page 34 for more information.

OPERATION OPTIONS	
CTS	5
MELT CYCLE	<input type="checkbox"/>
HOLD TIME	0M
FTS	3
MANUAL DRAWER	<input type="checkbox"/>
<MORE>	
▲, ▼ START TO SELECT	

### ➤ MELT CYCLE

- When ☒, fryer will gradually melt solid blocks of shortening until temperature reaches 212°F (100°C). It is designed to prevent scorching shortening and overheating element.



- Press to cancel and heat regularly. DO NOT CANCEL IF USING SOLID SHORTENING!
- Default is ☐

### ➤ HOLD TIME

- Time elapsed after cook cycle is finished
- Allows operator to monitor time since product has finished cooking
- “Beeps” and flashes hold time elapsed on LCD
- Choose between 0 and 99 minutes
- Default is 0 (disabled)

### ➤ FTS™ FOOD TYPE SENSITIVITY

- Adjusts cook cycle loading and unloading sequences to compensate for differences among food products being cooked.
- In addition to having a “global” FTS™ setting under the Operation Options menu for manually entered cook cycles, each preset can be programmed with its own individual setting. This provides for a lot of flexibility among different food products.
- Some experimenting with the range of 1 (normal) to 9 (very battered) may be required to achieve optimum performance. For example, chicken tenders will work well under a setting of 1 since they don't tend to stick together. However, battered french fries will need to set to 5 as they tend to stick together when they're cooked.
- 3 is the default. Please refer to chart.

Table 2 – FTS Values			
FTS Value	Basket Start	# of Shakes	# of Unloads
1	In Oil	0	1
2	In Oil	0	2
3	In Oil	1 (15 seconds in)	2
4	In Oil	1 (45 seconds in)	2
5	In Oil	2 (15 & 45 in)	3
6	Drain position	0	1
7	Drain position	0	2
8	Drain position	1 (15 seconds in)	2
9	Drain position	1 (45 seconds in)	2

### ➤ MANUAL DRAWER

- When ☒, will allow drawer to load during cook cycle simply by pressing
- When ☒, will disable RAPIDFRY™ 2GO
- Default is ☐

**Start**

## USER DEFINED OPTIONS (Continued)

### PRESETS

- 1: FRENCH FRIES
- 2: CHICKEN TENDERS
- 3: ONION RINGS
- 4: POPPERS
- 5: CHEESE BITES
- 6: CORN DOGS
- 7: FISH FILLETS
- 8: CHICKEN WINGS
- 9: CHICKEN & FRIES

PRESETS	
1: FRENCH FRIES	3:00
2: CHICKEN TENDERS	4:00
3: ONION RINGS	2:30
4: POPPERS	3:00
5: CHEESE BITES	2:00
<MORE ▼>	
▲, ▼ START TO SELECT	

PRESETS	
6: CORN DOGS	3:00
7: FISH FILLETS	4:00
8: CHICKEN WINGS	4:00
9: CHICKEN & FRIES	4:00
<MORE ▲>	
▲, ▼ START TO SELECT	

### Preset properties that can be changed (refer to page 40)

- TIME
  - Cook Cycle Time
- TEMP
  - Cook Cycle Temperature
- NAME
  - Preset Name
- CTS
  - Cook Time Sensitivity (refer to page 34)
- FTS
  - Food Type Sensitivity (see above)
- DUAL LOAD TIME
  - Dual Load Time (refer to page 30)

FRENCH FRIES	
TIME:	3:00
TEMP:	350°F
NAME:	FRENCH FRIES
<MORE ▼>	
▲, ▼ START TO SELECT	

FRENCH FRIES	
CTS:	5
FTS:	3
DUAL LOAD TIME:	0:00
<MORE ▲>	
▲, ▼ START TO SELECT	

## USER DEFINED OPTIONS (Continued)

### USER COUNTERS

- COOK TIME
  - Accumulated cook cycle time in hours
- NUMBER OF CYCLES
  - Accumulated number of cook cycles
- ON TIME
  - Accumulated on time in hours
- RESET ALL
  - To reset all values to 0

USER COUNTERS	
COOK TIME:	0HR
NO. CYCLES:	0
ON TIME:	0HR
RESET ALL	
▲, ▼ START TO SELECT	

### PRESET COUNTERS

- NUMBER OF CYCLES
  - Accumulated number of cook cycles
- RESET ALL
  - To reset all values to 0

PRESET COUNTERS	
1: FRENCH FRIES	115
2: CHICKEN TENDERS	230
3: ONION RINGS	138
4: POPPERS	221
5: CHEESE BITES	121
<MORE ▼>	
▲, ▼ START TO SELECT	

PRESET COUNTERS	
6: CORN DOGS	32
7: FISH FILLETS	56
8: CHICKEN WINGS	223
9: CHICKEN & FRIES	61
RESET ALL	
<MORE ▲>	
▲, ▼ START TO SELECT	

### TOTAL COUNTERS



- COOK TIME
  - Accumulated cook cycle times in hours, cannot be reset
- NUMBER OF CYCLES
  - Accumulated number of cook cycles, cannot be reset
- ON TIME
  - Accumulated on time in hours, cannot be reset

TOTAL COUNTERS	
COOK TIME:	0HR
NO. CYCLES:	0
ON TIME:	0HR
▲, ▼ START TO SELECT	

## USER DEFINED OPTIONS (Continued)


### OPERATION TESTS (for service personnel)

- FANS
  - Use the arrow keys to turn fans on and off [note: oil temperature must be below 122°F (50°C)]
  - Monitor rpm and current values of each fan
- INTERLOCKS
  - To view interlocks and if they're open or closed
  - ☐ = Open, ☒ = Closed
- BASKET
  - Use the arrow keys to move basket up and down
  - Monitor current values of motor
- DRAWER
  - Use the arrow keys to move drawer in and out
  - Monitor current values of motor
- HEATER
  - For factory heater calibration. **Do not adjust.**
- DISPLAY
  - Use START and CANCEL to turn all the pixels of the LCD on and off
- CIRCUIT BOARD
  - Monitor the circuit board temperature

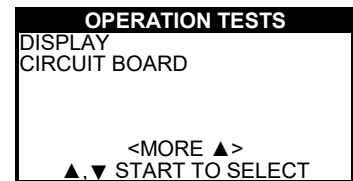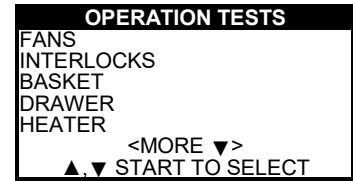


### SET DEFAULTS

- Press start to reset options and presets to factory defaults
- PRESETS and UNITS will not change

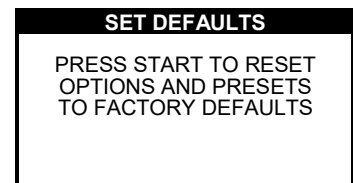

## Option Changes (Example °F to °C)


### SEE THIS LCD

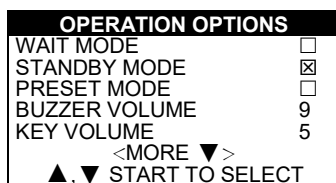

### DO THIS

- 1) From OPERATION OPTIONS menu, scroll down to UNITS using ▼ key
- 2) Press **Start**

### GET THIS LCD

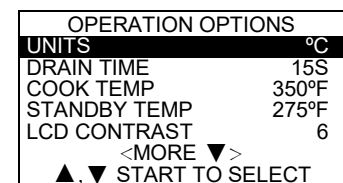

**Note: All OPERATION OPTIONS menu items can be customized by following this basic procedure (some use the arrow keys).**

## USER DEFINED OPTIONS (Continued)

### Customizing Presets

**SEE THIS LCD**

MAIN MENU	
LANGUAGE	
OPERATION OPTIONS	
<b>PRESETS</b>	
USER COUNTERS	
PRESET COUNTERS	
<MORE ▼>	
▲, ▼	START TO SELECT

PRESETS	
1:FRENCH FRIES	3:00
2:CHICKEN TENDERS	4:00
3:ONION RINGS	2:30
4:POPPERS	3:00
5:CHEESE BITES	2:00
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	3:00
TEMP:	350°F
NAME:	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	0:55
TEMP:	350°F
NAME:	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	0:55
TEMP:	350°F
<b>NAME:</b>	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	0:55
TEMP:	350°F
<b>NAME:</b>	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>QUICK FRIES</b>	
TIME:	0:55
TEMP:	350°F
<b>NAME:</b>	
QUICK FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

**DO THIS**

10) From main menu, scroll down to

PRESETS using ▼ key

11) Press **Start**

12) Change PRESET 1's settings by scrolling

down using the ▼ key

13) Press **Start**

14) Change PRESET 1's cook time by

scrolling down using the ▼ key

15) Press **Start**

16) Set new COOK TIME (ex.: 55 seconds)

17) Press **5 5 Start**

18) Change PRESET 1's name by scrolling

down with the ▼ key

19) Press **Start**

(A small cursor appears under first letter of the name PRESET 1.)

20) To change character above small cursor,

use the ▼ and ▲ keys

21) Press **Start** to move forward

22) Press **Cancel** to move back

23) To enter your selection, press **Start** after underscore mark ( \_ ) appears

24) "QUICK FRIES" will now appear on bottom left of LCD during PRESET modes

Note: maximum 20 characters

**GET THIS LCD**

<b>PRESETS</b>	
1:FRENCH FRIES	3:00
2:CHICKEN TENDERS	4:00
3:ONION RINGS	2:30
4:POPPERS	3:00
5:CHEESE BITES	2:00
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	3:00
TEMP:	350°F
NAME:	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	3:00
TEMP:	350°F
NAME:	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	0:55
TEMP:	350°F
NAME:	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	0:55
TEMP:	350°F
<b>NAME:</b>	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT

<b>FRENCH FRIES</b>	
TIME:	0:55
TEMP:	350°F
<b>NAME:</b>	
FRENCH FRIES	
<MORE ▼>	
▲, ▼	START TO SELECT




COOKING	PRESET
0:55	
QUICK FRIES	

## USER DEFINED OPTIONS (Continued)

### Customizing Presets on the Front Label

Used in conjunction with your custom programmed presets (please refer to page 40), easily identify your own custom presets by using the supplied label page. Simply follow the steps below:

- 1) Remove preset slider (default presets are located on front and custom preset label template is located on back).
- 2) Choose preprinted labels or create your own label from supplied label sheet.
- 3) Apply labels to preset slider in proper preset box (up to 9 labels corresponding to 9 programmed presets may be used on preset slider).
- 4) Install preset slider under preset menu label by starting from bottom.

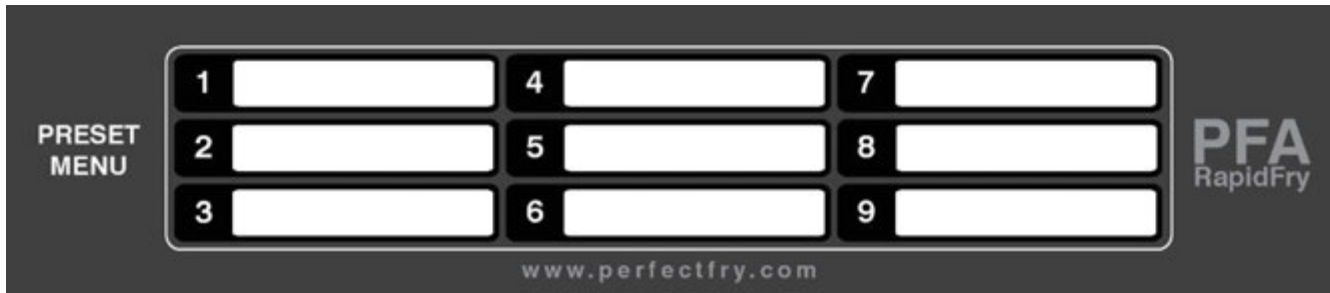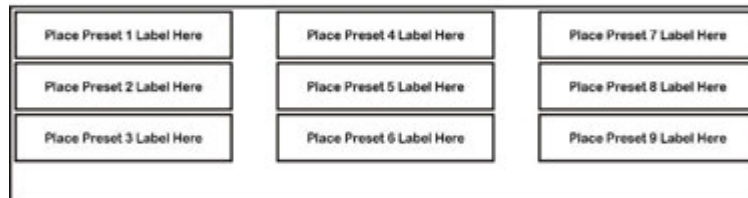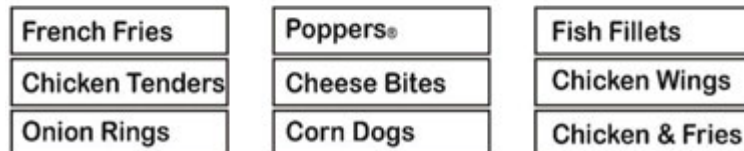**1** Preset Label Menu**2** Preset Slider**3** Preset Labels**1****Front****2****Back****3**









# HELP

- Your PERFECT FRYER “beeps” twice to signal an error condition. When the error condition is corrected, two beeps signal OK.
- It is possible to have more than one SYSTEM ERROR displayed at the same time. When that happens, all error conditions will be displayed on the LCD. All must be corrected.
- When a SYSTEM ERROR condition exists, the PERFECT FRY de-energizes the heating element, but the fans continue to run.
- When there appears to be a problem, but no SYSTEM ERROR message is displayed, refer to the trouble-shooting table on page 44. If the solution suggested doesn't solve the problem, call your service rep. or PERFECT FRY at 603-225-6684.

## System Error Conditions


SEE THIS LCD	CAUSED BY DO THIS	GET THIS LCD
<b>*** SYSTEM ERROR ***</b> <b>PLEASE CHECK</b> FRONT PANEL	<ul style="list-style-type: none"> <li>• <i>Hinged front panel is not installed or shut properly</i></li> <li>• Check to see that front panel is closed securely with two black latches</li> </ul>	HEATING  <b>84°F</b> OPEN LID/LOAD FOOD
<b>*** SYSTEM ERROR ***</b> <b>PLEASE CHECK</b> FILTER PLACEMENT	<ul style="list-style-type: none"> <li>• <i>Air filter cartridge is not installed properly</i></li> <li>• Check to make sure cartridge is properly installed (↑↑ up) in air filter cage, and cage is securely latched in place</li> </ul>	HEATING  <b>84°F</b> OPEN LID/LOAD FOOD
<b>*** SYSTEM ERROR ***</b> <b>PLEASE CHECK</b> GREASE FILTER	<ul style="list-style-type: none"> <li>• <i>Grease filter is not installed properly</i></li> <li>• Check to see that it sits in grease tray (magnet on right hand end of grease filter), and that filter and tray are properly installed in filter chamber</li> </ul>	HEATING  <b>84°F</b> OPEN LID/LOAD FOOD
<b>*** SYSTEM ERROR ***</b> <b>PLEASE CHECK</b> HEATER BOX	<ul style="list-style-type: none"> <li>• <i>Heating Element is not installed properly</i></li> <li>• Check to see that heater module has been properly placed on oil vat</li> <li>• Check to see the electrical connection between heater module and connector is made at inside back of fryer compartment</li> <li>• Clean the male and female terminals on connector with rubbing alcohol and cotton swab.</li> </ul>	HEATING  <b>84°F</b> OPEN LID/LOAD FOOD
<b>*** SYSTEM ERROR ***</b> <b>PLEASE CHECK</b> AIRFLOW/AIR FILTER	<ul style="list-style-type: none"> <li>• <i>There is improper air flow</i></li> <li>• Make sure air intake (front) and exhaust (rear) vents are not obstructed</li> <li>• Clean grease filter thoroughly</li> <li>• Replace the air filter cartridge</li> </ul>	HEATING  <b>84°F</b> OPEN LID/LOAD FOOD
<b>*** SYSTEM ERROR ***</b> <b>PLEASE CHECK</b> FIRE EXTINGUISHER	<ul style="list-style-type: none"> <li>• <i>Loss of pressure in the Fire Extinguisher, system needs to be recharged</i></li> <li>• Call PERFECT FRY at 603-225-6684 for recommended fire Service Company near you.</li> </ul>	HEATING  <b>84°F</b> OPEN LID/LOAD FOOD
<b>*** SYSTEM ERROR ***</b> <b>PLEASE CHECK</b> PRIMARY OVERTEMP.	<ul style="list-style-type: none"> <li>• <i>Heating Element is not installed properly</i></li> <li>• Check to see that heater module has been properly placed on oil vat</li> <li>• Check to see the electrical connection between heater module and connector is made at inside back of fryer compartment</li> <li>• Clean the male and female terminals on connector with rubbing alcohol and cotton swab.</li> </ul>	HEATING  <b>84°F</b> OPEN LID/LOAD FOOD

## HELP (Continued)

SEE THIS LCD	CAUSED BY DO THIS	GET THIS LCD
<div> <div>*** SYSTEM ERROR ***</div> <div>PLEASE CHECK</div> <div>SECONDARY OVERTEMP.</div> </div>	<ul style="list-style-type: none"> <li><i>Cooking oil level is too low.</i></li> <li>Make sure oil level is between the hot and cold lines at rear of vat.</li> <li><i>Cooking oil has overheated.</i></li> <li>Press  and  keys together and release to reset</li> <li>Is it possible the heater module was submerged in water? If so, call 603-225-6684</li> </ul>	<div> <div>HEATING MANUAL</div> <div>  <div>378°F</div> </div> </div>
<div> <div>*** SYSTEM ERROR ***</div> <div>PLEASE CHECK</div> <div>MAIN FAN</div> </div>	<ul style="list-style-type: none"> <li><i>Main ventilation fan is not functioning properly</i></li> <li>Check main ventilation fan to see if it is moving air and the fan blades are moving</li> <li>Remove obstruction and/or check electrical connection</li> </ul>	<div> <div>HEATING MANUAL</div> <div>  <div>84°F</div> </div> <div>OPEN LID/LOAD FOOD</div> </div>
<div> <div>*** SYSTEM ERROR ***</div> <div>PLEASE CHECK</div> <div>CONTROL FAN</div> </div>	<ul style="list-style-type: none"> <li><i>Control fan is not functioning properly</i></li> <li>Check control fan to see if it is moving air and the fan blades are moving</li> <li>Remove obstruction and/or check electrical connection</li> </ul>	<div> <div>HEATING MANUAL</div> <div>  <div>84°F</div> </div> <div>OPEN LID/LOAD FOOD</div> </div>
<div> <div>*** SYSTEM ERROR ***</div> <div>PLEASE CHECK</div> <div>EBOX FAN.</div> </div>	<ul style="list-style-type: none"> <li><i>Electronics box fan is not functioning properly</i></li> <li>Check main ventilation fan to see if it is moving air and the fan blades are moving</li> <li>Remove obstruction and/or check electrical connection</li> </ul>	<div> <div>HEATING MANUAL</div> <div>  <div>84°F</div> </div> <div>OPEN LID/LOAD FOOD</div> </div>
<div> <div>*** SYSTEM ERROR ***</div> <div>PLEASE CHECK</div> <div>DRAWER MOTOR</div> </div>	<ul style="list-style-type: none"> <li><i>Drawer motor has been obstructed</i></li> <li>Check for cause of obstruction before returning fryer to normal use</li> <li>Correct cause of obstruction</li> </ul>	<div> <div>HEATING MANUAL</div> <div>  <div>84°F</div> </div> <div>OPEN LID/LOAD FOOD</div> </div>
<div> <div>*** SYSTEM ERROR ***</div> <div>PLEASE CHECK</div> <div>BASKET MOTOR</div> </div>	<ul style="list-style-type: none"> <li><i>Basket motor has been obstructed</i></li> <li>Check for cause of obstruction before returning fryer to normal use</li> <li>Correct cause of obstruction</li> </ul>	<div> <div>HEATING MANUAL</div> <div>  <div>84°F</div> </div> <div>OPEN LID/LOAD FOOD</div> </div>

## HELP (Continued)

### Trouble-shooting Table

“PROBLEM”	PROBABLE CAUSE	PROBABLE SOLUTION
Won't turn ON when you press the  key	1) Not plugged in 2) Circuit breaker or fuse 3) Wiring	1) Plug in fryer 2) Check circuit breaker or replace fuse 3) Make sure PERFECT FRYER is plugged in according to its electrical specifications (see page 5)
ON but will not heat	1) Connector on heater module 2) Electronics box module	1) Replace heater module 2) Replace electronics box module
Motors will not move drawer or basket.	1) Basket not installed properly 2) Front panel/drawer not installed properly 3) Basket motor not working 4) Drawer motor not working	1) Make sure that the basket is installed properly (see page 13) 2) Check wiring 3) Replace motor
Outer surface is unusually hot	1) Dirty grease filter 2) Air filter cartridge plugged 3) Fans not operating	1) Remove and clean grease filter 2) Replace air filter cartridge 3) Check rear of fryer for air flow
Cooking oil spills into spill tray, excessively	1) Too much oil in vat 2) Too much ice or water in food 3) Too much food in basket 4) Oil has reached end of its life 5) Drain valve is open	1) Remove some oil (when oil is cold it should not be above cold oil line inside vat) 2) Cook only frozen foods recommended for use in deep fryers; remove excess ice from food before placing food in basket 3) Do not fill food above top of basket 4) Change oil 5) Close valve
Food floats out of basket	1) Too much cooking oil in vat.	1) Remove some oil; do not fill above cold oil line.
Excessive smoking	1) Oil has “broken down” 2) Moisture	1) Replace the cooking oil 2) Too much moisture or ice crystals
Excessive foaming	1) Soap residue 2) Oil has “broken down”	1) Rinse parts with vinegar solution 2) Replace the cooking oil
Food does not come out	1) Too much food was inserted using a dual load or manual drawer 2) The basket was not installed or installed correctly 3) Large volume of heavily battered product was cooked	1) Only enter the amount of food that totals one drawer full per cook cycle 2) Make sure that the basket is installed properly (see page 13) 3) Try adjusting FTS value to 5 (see page 36)
Food does not go in	1) Too much food was inserted 2) Front panel is not closed properly 3) Drawer shovel was not installed correctly	1) Do not overfill the drawer 2) Close front panel fully and latch closed 3) Install drawer shovel properly (see page 16)

# PFS AUTOMATIC EXTINGUISHER

**Note: Please refer to the PFS Automatic Extinguisher Installation, Inspection, Maintenance & Recharge Manual (L20-361) for more detailed information.**



**The PFS must be stored above 32°F (0°C)**

## 1. GENERAL DESCRIPTION

The PFS consists of a cylinder assembly (with pressure switch and gauge), actuating lever, fusible link assembly, manual pull station, and two nozzles. It is designed and acceptable for use in areas that have ambient conditions between 32°F (0°C) and 50°C (120°F).

## 2. OPERATION

### Automatic Operation


Upon the detection of a fire, the PFS will automatically operate. The fusible link rated at 280°F (138°C) will operate when exposed to the fire and operate the PFS automatic extinguisher unit. When operated, the PFS unit will discharge wet chemical agent through the provided discharge piping and distribution nozzles.

### Manual Operation

The PFS unit can also be operated manually by pulling the remote lever (to be mounted on the front of the cooking appliance) that is clearly marked “In Case Of Fire - PULL”.

### IMPORTANT:

The manual pull handle is to be pulled **ONLY IN CASE OF FIRE** in the PERFECT FRYER (use when the automatic system has failed).

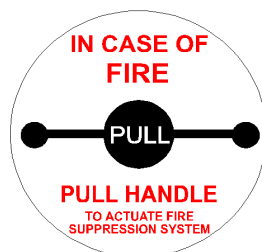

**NOTE:** Power shut-off is also achieved by system operation. If the pressure in the cylinder(s) drops below 92 psi (6.3 bar), the pressure switch opens, deactivating the power relay causing the appliance to de-energize.

## 3. INSPECTION & MAINTENANCE

The PFS must be serviced on a regular basis. Three types of servicing are required:

### Monthly

An inspection or “quick check” must be conducted by the owner/operator and include verification of the following:

- 1) The PFS is in its proper location.
- 2) The PFS shows no physical damage or condition that might prevent operation.
- 3) The pressure gauge is in the green operating range.
- 4) The maintenance tag is in place and is up to date.
- 5) The manual pull is unobstructed.
- 6) The nozzle blow-off caps are intact and undamaged.

### Semi-Annually

The system must be inspected by authorized service personnel, as per NFPA 17A and include the following:

- 1) A check to see that the hazard has not changed.
- 2) Examination of the fusible link, cylinder, tubing, nozzles and all auxiliary equipment.
- 3) Fusible links must be replaced at least annually from the date of installation. They must be destroyed when removed. They need to be replaced with the proper rated link (6GT587). A fusible link loaded with grease or other material can result in an excessive delay in actuation.
- 4) Verification that the agent distribution piping is not obstructed. Remove the blow-off caps (6GT014) from the nozzles to ensure that they are free of grease build-up and inspect them for deterioration. Replace them as necessary.

## PFS AUTOMATIC EXTINGUISHER (Continued)

### Inspection and Maintenance

#### Semi-Annually (continued)

- 5) Where semi-annual maintenance of any wet chemical containers or PFS components reveals conditions such as, but not limited to, corrosion or pitting in excess of manufactured limits, structural damage or fire damage, repairs by soldering, welding, or brazing, the affected part(s) shall be replaced or hydrostatically tested. The hydrostatic testing of wet chemical containers shall follow the applicable procedures outlined in NFPA 17A.
- 6) All wet chemical systems must be tested for proper operation. A discharge of the wet chemical is normally not part of the test. Simply remove one lead from the pressure switch to initiate appliance shut-down.
- 7) Where the maintenance of the PFS reveals defective parts that could cause an impairment or failure of proper operation of the PFS, the affected parts must be replaced or repaired.
- 8) The maintenance report, with recommendations if any, shall be filed with the owner or with the designated party responsible for the PFS.
- 9) The PFS must have a tag or label indicating the month and year the maintenance is performed and identifying the person performing the service. Only the current tag or label must remain in place.

#### **Twelve Years**

Maintenance must be done by authorized service personnel, as per NFPA 17A and include the following:

- 1) The wet chemical extinguishing agent must be removed and discarded.
- 2) The cylinder needs to be hydrostatically tested to 300 psi (21 bar).
- 3) If the cylinder shows no signs of rupture or distortion, recharge the PFS as directed in the recharging instructions.

#### **SEMI-ANNUAL INSPECTION & MAINTENANCE (I & M) LOG:** PERFECT FRY Serial No. \_\_\_\_\_

Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____
Date _____	I & M by _____	Date _____	I & M by _____



# DECLARATION OF CONFORMITY



(FOR CE PERFECT FRYERS ONLY)

Application of Council Directive(s): Low Voltage Directive (93/68/EEC & 72/23/EEC)  
EMC Directive (2004/108/EC & 89/336/EEC)  
WEEE Directive (2002/96/EC)  
RoHS Directive (2002/95/EC)

Standard(s) to which Conformity is Declared: EN 60335-1, EN 60335-2-37  
EN 61000-6-1, EN 61000-6-3

Manufacturer's Name: Perfect Fry Company LLC

Manufacturer's Address: P.O. Box 501  
Concord, NH, USA  
03302-0501

Importer's Name: \_\_\_\_\_

Importer's Address: \_\_\_\_\_

Type of Equipment: Commercial Electric Deep Fat Fryer

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Year of Manufacture: \_\_\_\_\_

I, the undersigned, hereby declare that the equipment specified above conforms  
to the above Directive(s) and Standard(s)

Place: Perfect Fry Company LLC.  
Concord, NH, USA

Date: \_\_\_\_/\_\_\_\_/\_\_\_\_

\_\_\_\_\_(Signature)

\_\_\_\_\_(Full Name)

\_\_\_\_\_(Position)

## ORIGINAL STANDARD EQUIPMENT LIMITED WARRANTY

Effective January 1, 2018, Serial Number E18AA000000

### General Warranty

Perfect Fry warrants to the original purchaser of its commercial cooking appliances and related equipment that said appliances and related equipment will be free from defects in material and workmanship under normal use for a period of one (1) year from the date of installation, with appropriate documentation, to a maximum of fifteen (15) months from the date of manufacture, subject to the following additions, exceptions, exclusions and limitations.

### What is covered

This warranty is limited to the repair or replacement at the Company's option, without charge, of any part found to be defective within the warranty period and reasonable expenses incurred for freight and material for the installation of such part; in addition, the Company's obligation shall be limited to reimbursement for normal labor on such parts.

Perfect Fry, Inc. agrees to pay the Authorized Service and Parts Distributor, for any labor and material required to repair or replace, at the Company's option, any part which may fail due to defects in material or workmanship during the above general warranty period.

### Additional Part Only Warranty

After the end of the above general warranty, the computer is warranted to be free of defects for an additional one (1) year. This additional warranty only covers the cost of the part. Customer is responsible for all labor and shipping costs during this warranty period.

### How to Keep Your Warranty in Force

- Make sure any shipping damages are reported immediately. Damages of this nature are the responsibility of the carrier and must be reported by the receiver.
- Install the appliance properly. This is the responsibility of the installer and the procedures are outlined in the manual.
- Register your equipment at [www.perfectfry.com](http://www.perfectfry.com). This is necessary to start your warranty and to obtain the unlock code for the computer. The unlock code will be sent via email.
- Do not install the appliance in a home or residence.
- Maintain the appliance properly. This is the responsibility of the purchaser of the appliance and the procedures are outlined in the manual.
- Replace the air filter at regular intervals to prevent filter saturation. Record when the air filter is replaced in the Installation & Operations Manual. Also regularly inspect the door gasket for gaps, cracks and tears. Failure to do so could result in a non-warranty main fan failure due to grease build up.
- Adjustments, such as calibration, leveling, tightening of fasteners or plumbing or electrical connections normally associated with initial installation are outlined in the manual and are not covered under warranty.
- Damages as a result of fire, flood or other acts of God are not covered under this warranty.
- Use the appliance for what it is intended. If the appliance is used for a purpose other than for which it was intended or designed, resulting damages are not covered under the warranty.
- Make sure that the appliance has the correct voltage. If a failure is due to incorrect or erratic voltage, these damages are not covered under the warranty.
- Do not materially alter or modify the appliance.
- Do not obliterate, remove or alter the serial number rating plate.
- Use only Genuine OEM parts from Perfect Fry or its Authorized Parts and Service Distributors. Repairs are not covered by the warranty if non-OEM parts or non-Authorized Parts and Service Distributors are used.
- Failures that are not attributable to a defect in materials or workmanship are not covered.

This warranty specifically excludes parts which wear or would be replaced under normal usage, including, but not limited to, electric lamps, fuses, interior or exterior finishes, filters and gaskets.

### Limits to the Warranty

Charges for mileage over one hundred (100) miles and travel time over two (2) hours from the Authorized Service and Parts Distributor are not covered under this warranty. Extended mileage charges are the responsibility of the individual or firm requesting these services.

If any oral statements have been made regarding the appliance, these statements do not constitute warranties and are not part of the contract of sale. This limited warranty constitutes the complete, final and exclusive statement with regard to warranties.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY AGAINST LATENT DEFECTS.

### Limitations of Liability

In the event of a warranty or other claim, the sole obligation of Perfect Fry will be limited to the repair or replacement, at the Company's discretion, of the appliance or the component part. This repair or replacement will be at the expense of Perfect Fry except as limited by this warranty statement. Any repair or replacement under this warranty does not constitute an extension in time to the original warranty. Parts covered under this warranty will be repaired or replaced, at the Company's discretion, with new or functionally operative parts. The liability of Perfect Fry on any claim of any kind, including claims based on warranty, express or implied contract, negligence, strict liability or any other legal theories will be limited to the repair or replacement of the appliance. This liability will not include, and the purchaser specifically renounces any right to recover special, incidental, consequential or other damages of any kind, including, but not limited to, injuries to persons, damage to property, loss of profits or anticipated loss of the use of this appliance.

If any provision of this warranty is unenforceable under the law of any jurisdiction, that provision only will be inapplicable there, and the remainder of the warranty will remain unaffected.

The maximum exclusion or limitation allowed by law will be substituted for the unenforceable provision.

### How to Obtain Warranty Service

Direct your claim to the Perfect Fry Authorized Service and Parts Distributor, found at <http://perfectfry.com/servicemap.aspx>, closest to you giving complete model and serial number, voltage and description of the problem. Proof of the date of installation and/or the sales slip may also be required. If there are questions about this procedure, write the National Service Manager, Perfect Fry, P. O. Box 501, Concord, NH. 03302-0501. USA

This warranty gives you certain specific legal rights; you may have other rights which vary from state to state.

Perfect Fry, Inc., P.O. Box 501, Concord, NH 03302-0501

(603) 225-6684 • Fax: (603) 225-8497 L14-031 Rev 0 (10/25/17)



**Perfect Fry Company LLC.**  
**Address: 42 Allen Martin Drive, Essex Junction, VT 05452**

**Tel: 802-658-6600**  
**Fax: 802-864-0183**  
**General Information: [profits@perfectfry.com](mailto:profits@perfectfry.com)**  
**Customer Support: [service@perfectfry.com](mailto:service@perfectfry.com)**  
**Web: [www.perfectfry.com](http://www.perfectfry.com)**

© 2020 PERFECT FRY COMPANY LLC  
PRINTED IN USA  
83497 Rev A (1/2020)