


## **Field Reversible Door Instructions**


FOR 17 CU. FT. REACH-INS
• EDRR-17-B-HC
• EDRF-17-B-HC

Tools Needed:


- Phillips Head screwdriver.
- 10mm Wrench.

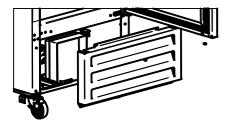


1.— Use the phillips head screwdriver remove the front panel srews, next remove the front panel.

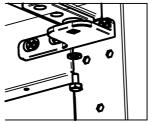


2.— Use the Wrench to remove the bottom hinge hex screw, then loosen the hinge screw and carefully remove the door.

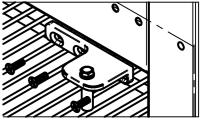


3.— Use the scredriver to remove the bottom and top hinges.




4.- With help of a spanner key 10mm, remove the bolt of top hinge, next install the bolt in to bottom hinge.

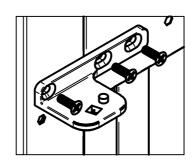


5.- Install the Bottom right hinge in the top left side of the equipment. Then, install the top right hinge in the bottom left side of the equipment.

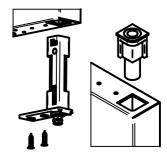


6.—Remove the bottom cartridge and bolt housing from the door, install the cartridge at the top of the door and the bolt housing in the bottom side

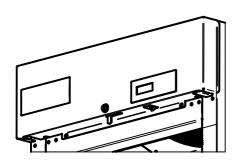

7.- Remove the top head screws, then remove the hinge cap to the right side. Reinstall the top head screws.

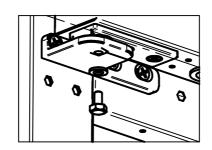

8.—Install the hinges on the left side, but do not tighten the screws. Then install the door and install the cartridge screw. Tighten all screws.

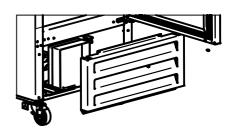

9.-Reinstall the Front panel with the Hinge cap on the right side.